



# Intel SST Driver Installation SOP


Step 1. Mouse right-click start icon, and select **“Multimedia Audio Controller”**, then mouse right-click and select **“Update driver”**.

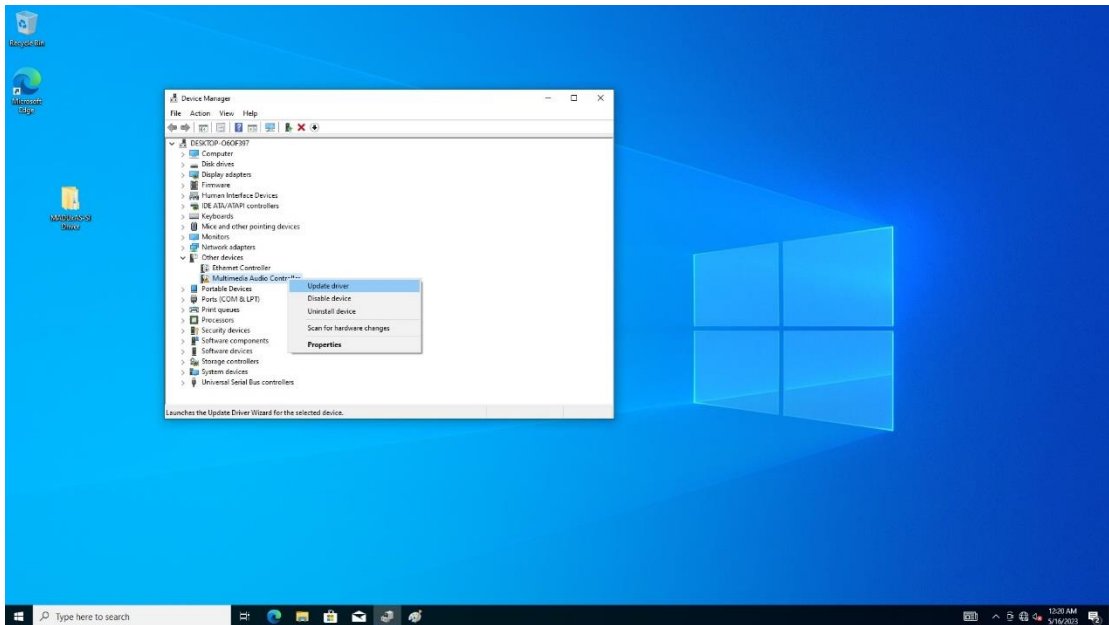


Step 2. Select item **“Browse my computer for drivers”**.

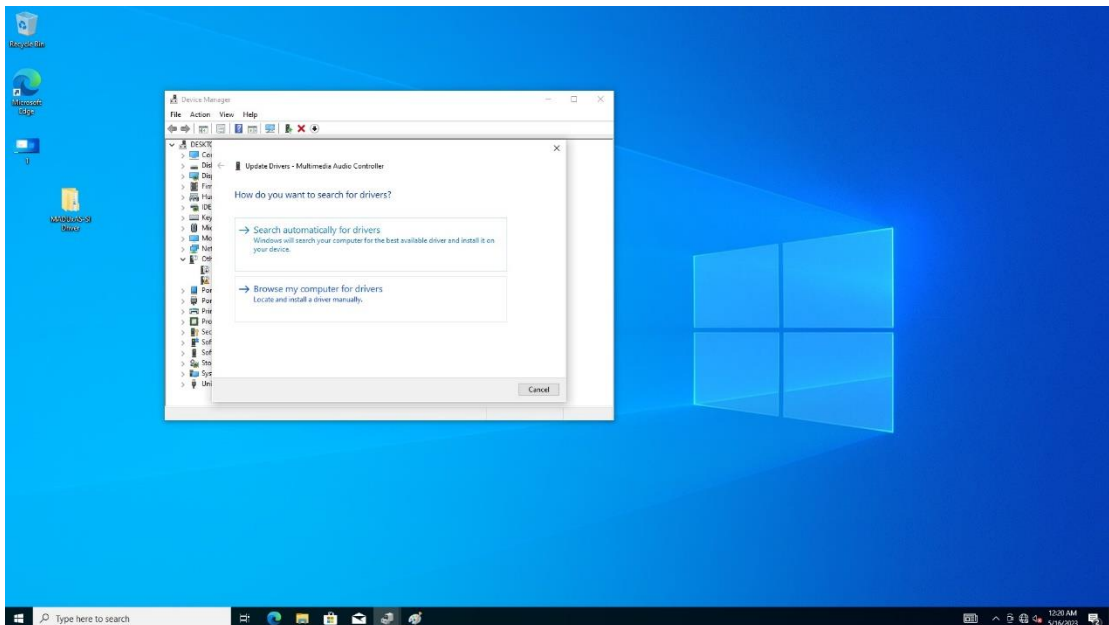

Step 3. Find the INTEL SST Driver on your computer , and press “OK”

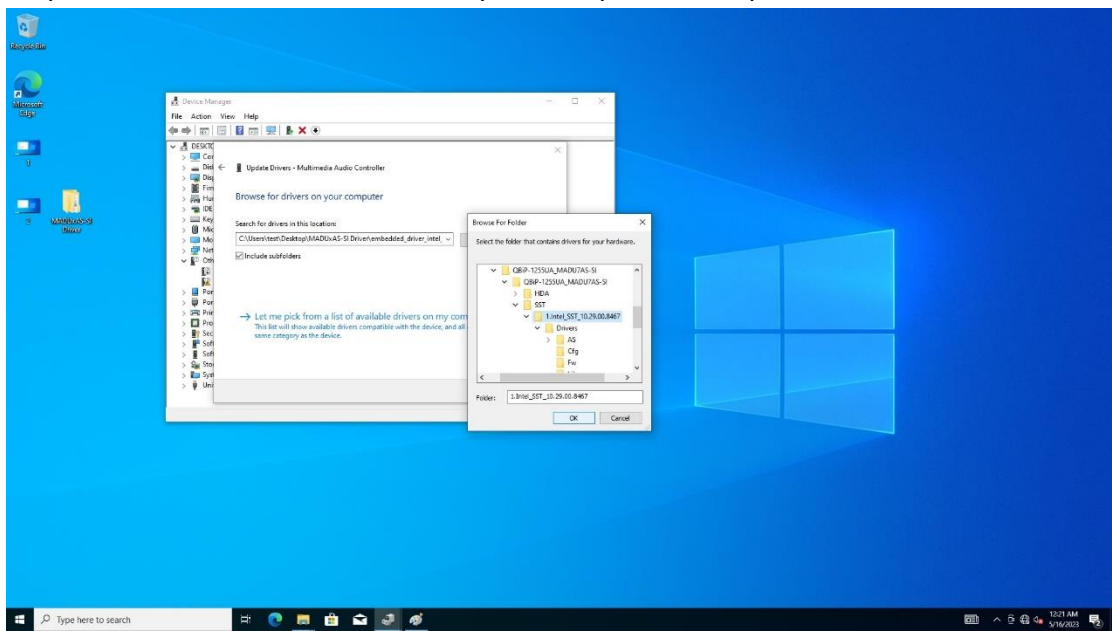

Step 4. Press “Next” to start install driver

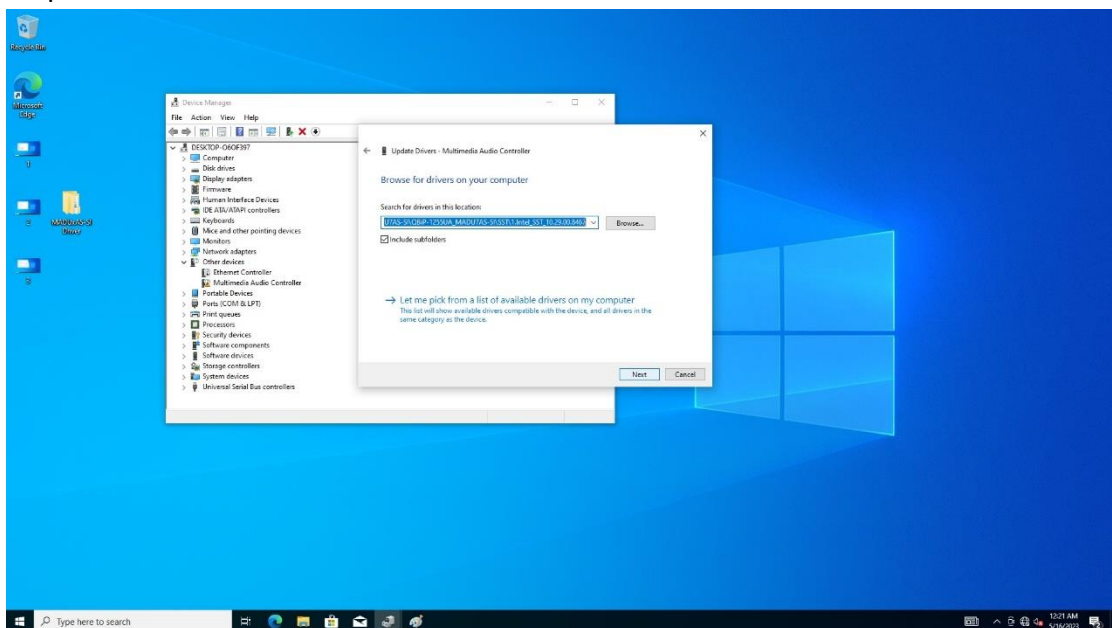

Step 5. When Driver is install complete, press “Close”

