Manual Installation Driver SOP

📙 🛃 📙 🖵 embedded	d_driver_intel_lan_1.1.3.28		
File Home Share	View		
	ers\USER\Desktop\embedded_driver_intel_lan_1	.1.3.28	Undo
	Name	Date	Cut
A Quick access	embedded_driver_intel_lan_1.1.3.28	7/17	Сору
Desktop			Paste
🔮 Documents 🖈			Delete
📰 Pictures 🛛 🖈			Select All
👌 Music			Right to left Reading order
📑 Videos			Show Unicode control characters Insert Unicode control character
🝊 OneDrive			Open IME Reconversion
💻 This PC		-	
💣 Network			

Step1. Copy the driver folder path

Step2. Search Bar key "Device Manager", then click "Device Manager".



Step3. Mouse right-click on yellow exclamation point, then click "Update driver".



Step4. Click "Browse my computer for drivers".

🛃 Device Manager	_	\Box \times
File Action View Help		
V 🗄 DESKTC	×	^
> 📓 Aux > 💻 Cor ← 📲 Update Drivers - Ethernet Controller > Dis		
 > Disp > Firr How do you want to search for drivers? > Ref Hui 		
 > ■ IDE > ■ Key > ● Mic > ■ Mo > ■ Net > ○ Oth 		
> ∰? Sec > ∰ Sof > ∰ Sof > ₩ Sou		
Sys ΔCPI Fan	Cancel	v

Step5. Paste the path before you copied.



Step6. Click "Next".



Step7. Install driver OK.



Step8. Confirm whether the driver has been updated successfully.

