Alder Lake MADUxAS Audio Driver Install SOP

Please Update BIOS to F2 or latest revision

1. Select Multimedia Audio Controller and push mouse right button and select Update driver

| 1995 and 1997 and 19 | | |
|--|--|-----------------------|
| 0 | | |
| Desvelation | | |
| and plan and | | |
| | | |
| | | |
| A lange | 🖞 Device Manager - 🗆 🗙 | |
| 86g) | file Action View Help | |
| | (+ +) (□) (□) (□) (□) (□) (□) (□) (□) (□) (□ | |
| | ✓ Å DESKTOP-060F397 | |
| | > 🔜 Computer | |
| | Disk drives | |
| |) 📓 Firmware | |
| | > 🔤 Haman Interface Devices | |
| DAMAGE AN AN | > With Keyboards | |
| Binner | > 10 Mice and other pointing devices | |
| | > Monitors | |
| | V P Other devices | |
| | Ethemet Controller | |
| | Multimedia Audio Contr ¹¹ Dydate driver Dydate driver | |
| | > @ Ports (COM &LPT) Disable device | |
| | Print queues Uninstall device | |
| | Scan for hardware changes | |
| | > Properties | |
| | Software devices See Storage controllers | |
| | > 🛄 System devices | |
| | > 🏺 Universal Serial Bus controllers | |
| | | |
| | Launches the Update Driver Witzard for the selected device. | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | 1201414 |
| P Type here to search | H 🕐 🚍 🖆 🖬 🗳 | ED ^ 0 € 4 4 5/16/203 |

2. Select Browse my computer for drivers item

| é. | 🛃 Device Manager | | - 0 × | | |
|------|---|---|--------|--|--|
| | ** | ₽ × ● | | | |
| | ✓ | vers - Multimedia Audio Controller | × | | |
| | > 局 Hai How do you > 局 Hai How do you | u want to search for drivers? | | | |
| Bine | Of Mix → Search Of Mix Of Mix Of Mix Of Mix | a automatically for drivers s will search your computer for the best available driver and install it on rice. | | | |
| | > ■ Por > ● Por > ● Por > □ Pro | e my computer for drivers nd install a driver manually. | | | |
| | > ∰? Sec > ∰ Sef > ∰ Sef > Sef | | | | |
| | S ∰ Uni | | Cancel | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

| 2 | | | |
|--|--|--|--|
| nerali Ng | Device Manager Tile Action View Help | - | |
| | | × | |
| Û | > 💭 Cor > 🕳 Dial 🤄 📱 Update Drivers - Multimedia Audio Controller > 💷 Dia | | |
| • R | Sim Fin Sim Browse for drivers on your computer we be | | |
| Managers Mass | Key Search for drivers in this location Me Gillenstein Destroy Data C D Destroyed (d. d. b) and (d. d. b) | Browse For Folder X | |
| | > ■ Mo > ■ No > ■ No > ■ Include subfolders | Select the folder that contains drivers for your hardware. | |
| | | ✓ | |
| | > ■ Por > ₽ Por > ₽ Pir > > | > HDA > SST | |
| | Pre Pre Pre Sec Same category as the device. | | |
| | > B Set > Set | Cfg Fw | |
| | > B⊒ Synt > ÿ Uni | C >> | |
| | | OK Carcel | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

3. Select driver files path to INTEL_SST_10.29.00.8467 and press OK item

4. Press Next start install driver

| e | de Device Manager | × | |
|----------|--|---|--|
| | File Action View Help | | |
| | (+ +) (-) (-) (-) (-) (-) (-) (-) (-) (-) (- | × | |
| | ✓ discription Geo/SP7 Comparing Comparing Discription Disoreation Discription Discription Discription Di | Let me pick from a first of available drivers on my computer biscope for drivers on your computer sauchtre drivers in the location TUTSSURFACTIONUSSION/NETRONULENDUSS Deverse develop individues develop individues develop individues location pickup southink on the develop individues on the uner category is the develop location | |
| | | | |

5. Press Close

| aie | Device Manager | - C X | | |
|---------------|---|--|------|--|
| | file Action View Help | | | |
| Manager State | Image: Section 2 and 2 an | Lipster Down - Intel® Snart Sound Technology EUS Windows has successfully updated your drivers Windows has finited institling the drives for this drive Intel® Snart Sound Technology BUS | Core | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

6. You will found Intel Smart Sound Technology BUS already be installed and Intel High Definition Audio driver need to install

| | A Device Mercure | |
|------------|--|--|
| | | |
| | File Action View Help | |
| | | |
| | 😥 Intel High Definition Audio | |
| | > Portable Devices | |
| | > 💭 Ports (COM & LPT) | |
| | > (Fig Print queues | |
| - | > Processors | |
| | > Br Security devices | |
| | Final Software components | |
| MONDONS-SI | > g Software devices | |
| Dittor | 3 iii Sound, video and game controllers | |
| | > 2gg Storage controllers | |
| | En system deutes | |
| | Ep ACPI Pan | |
| | | |
| | Ear ACT I Sh | |
| | | |
| | By Arth End Ender Differe | |
| | E ACE Prove Button | |
| | ACPI Processor Aggregator | |
| | ACPI Thermal Zone | |
| | a ACPI Wake Alarm | |
| | Composite Bus Enumerator | |
| | High precision event timer | |
| | 🏣 Intel(R) Host Bridge/DRAM Registers - 4601 | |
| | To Intel(R) LPC Controller - 5182 | |
| | 🏣 Intel(R) Management Engine Interface #1 | |
| | To Intel(R) PCI Express Root Port #7 - 518E | |
| | 🚛 Intel(R) PCI Express Root Port #8 - 518F | |
| | Em Intel(R) Power Engine Plug-in | |
| | Em Intel(R) Serial ID GPIO Host Controller - INIC1055 | |
| | Em Intel(R) Serial IO (2) Host Controller - 51C5 | |
| | intel(R) Serial ID I2C Host Centreller - 51C6 | |
| | Intel(R) Seral IO I2C Host Controller - 518 | |
| | Intel(R) Senal ID IZ: Host Controller - 5113 | |
| | Intellity Serial to SPI Host Controller - SLap | |
| | Intelling Series to Govern Fred Controller - Stress | |
| | Intelling and the answer 2 model Intelling and the answer 2 model | |
| | Entropy Service - 3 Ms Ball Intellige Statistics - 515.4 | |
| | En Intelly Services Control of Arteriore BIC | |
| | E Intel Statt South School Detraine Matrices | |
| | The state - state state strategy better an entrolling | |



7. Please install Realtek_Audio_9509.1_UAD driver