mITX-Q870A (MQ870AI-SI)

Mini-ITX Motherboard

Copyright Notice

This document is copyrighted, 2026. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.
No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.
The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, GIGAIPC assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.
GIGAIPC reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
mITX-Q870A MB	1
SATA power cable	1
I/O Shield	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the GIGAIPC.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.

13. Watch out for high temperatures when the system is running.

14. Do not touch the heat sink or heat spreader when the system is running

15. Never pour any liquid into the openings. This could cause fire or electric shock.

16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
    i. Damaged power cord or plug
    ii. Liquid intrusion to the device
    iii. Exposure to moisture
    iv. Device is not working as expected or in a manner as described in this manual
    v. The device is dropped or damaged
    vi. Any obvious signs of damage displayed on the device

18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte.
Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量
GIGAIPC Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板及其电子组件	○	○	○	○	○	○
外部信号连接器及线材	○	○	○	○	○	○

O : 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。
X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。
备注 : 此产品所标示之环保使用期限，系指在一般正常使用状况下。

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products
GIGAIPC Main Board/ Daughter Board/ Backplane

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	O	O	O	O	O	○
Wires & Connectors for External Connections	O	O	O	O	O	O

O : The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.
X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.
Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

Table Contents

Mini-ITX Motherboard 1

Copyright Notice 2
Acknowledgement 3
Packing List 4
About this Document 5
Safety Precautions 6
FCC Statement 8
China RoHS Requirements (CN) 9
China RoHS Requirement (EN) 10

Chapter 1 - Product Specifications 14

1.1 Specifications 16

Chapter 2 – Hardware Information 18

2.1 Jumpers and Connectors 19
2.2.1 IO Connector Information 22
2.2.2 DC_IN1 (DC In Jack 4 Pin Din) 23
2.2.3 DC_IN2 (2x2 Pin DC Power Connector) 24
2.2.4 USB32C (USB 3.2 Type C (10 Gbps)) 25
2.2.5 COM1 (COM1 Port (RS-232/422/485 & RI/5V/12V)) 26
2.2.6 HDMI_DP (HDMI + DP Connector) 27
2.2.7 USB32_LAN1 (USB + 2.5GbE LAN Connector) 28
2.2.8 USB32_LAN2 (USB + 2.5GbE LAN Connector) 29
2.2.9 AUDIO (Mic in + Line out) 30
2.2.10 CPU Socket (LGA 1851 Socket) 31

2.2.11 LVDS (LVDS Connector) 32
2.2.12 COM2 (COM2 header (RS-232)) 33
2.2.13 SYS_FAN (System Fan Connector) 34
2.2.14 GPIO_CNT (General purpose input/out header)..... 35
2.2.15 SATA_PWR (SATA Power Connector) 36
2.2.16 SATA4, SATA5 (SATA 6Gb/s Connector)..... 37
2.2.17 SYS_PANEL (System Panel header) 38
2.2.18 CLR_CMOS (Clear CMOS jumper) 39
2.2.19 FUSB2_1, FUSB2_2 (USB 2.0 header)..... 40
2.2.20 SODIMM1, SODIMM2 (2 x DDR5 SO-DIMM Sockets)....41
2.2.21 CPU_FAN (CPU FAN Connector) 42
2.2.22 PCIEX16 (1 x PCIe x16 (Gen4 x16 Bus) Slot) 43
2.2.23 BATTERY (Battery Connector)..... 44
2.2.24 SPEAKER (Speaker Out Connector)..... 45
2.2.25 FP_AUDIO (Front Panel Audio header) 46
2.2.26 JCOM1 (RI# pin RI#/5V/12V Select jumper for COM1 Port)..... 47
2.2.27 BKL_CN (Backlight Control Connector) 48
2.2.28 M2E (M.2 Slot, 2230 E-Key) 49
2.2.29 AT_CN (AT/ATX mode select jumper)..... 50
2.2.30 M2M (M.2 Slot, 2280 M-Key) 51


Chapter 3 – BIOS 52

3.1 Introduction 53
3.2 The Main Menu..... 54
3.3 Advanced 55

3.3.1 SATA Configuration 56
3.3.2 AMT Configuration 57
3.3.3 TPM Configuration 60
3.3.4 CPU Configuration 62
3.3.5 IT8786 Super IO Configuration 63
3.3.6 Hardware Monitor 64
3.3.7 S5 RTC Wake Settings 65
3.3.8 Network Stack Configuration 66
3.3.9 NVMe Configuration 67
3.3.10 Digital IO Port Configuration 68
3.3.11 Intel(R) Ethernet Controller I226-LM - 30:56:0F:DD:3F:DE (MAC address may varied based on different motherboard) 69
3.3.12 Intel(R) Ethernet Controller I226-V - 30:56:0F:DD:3F:DF (MAC address may varied based on different motherboard) 70
3.4 Chipset 71
3.5 Security 73
3.6 Boot 76
3.7 Save & Exit 77
3.8 MEBx 78

Chapter 1

Chapter 1 - Product Specifications

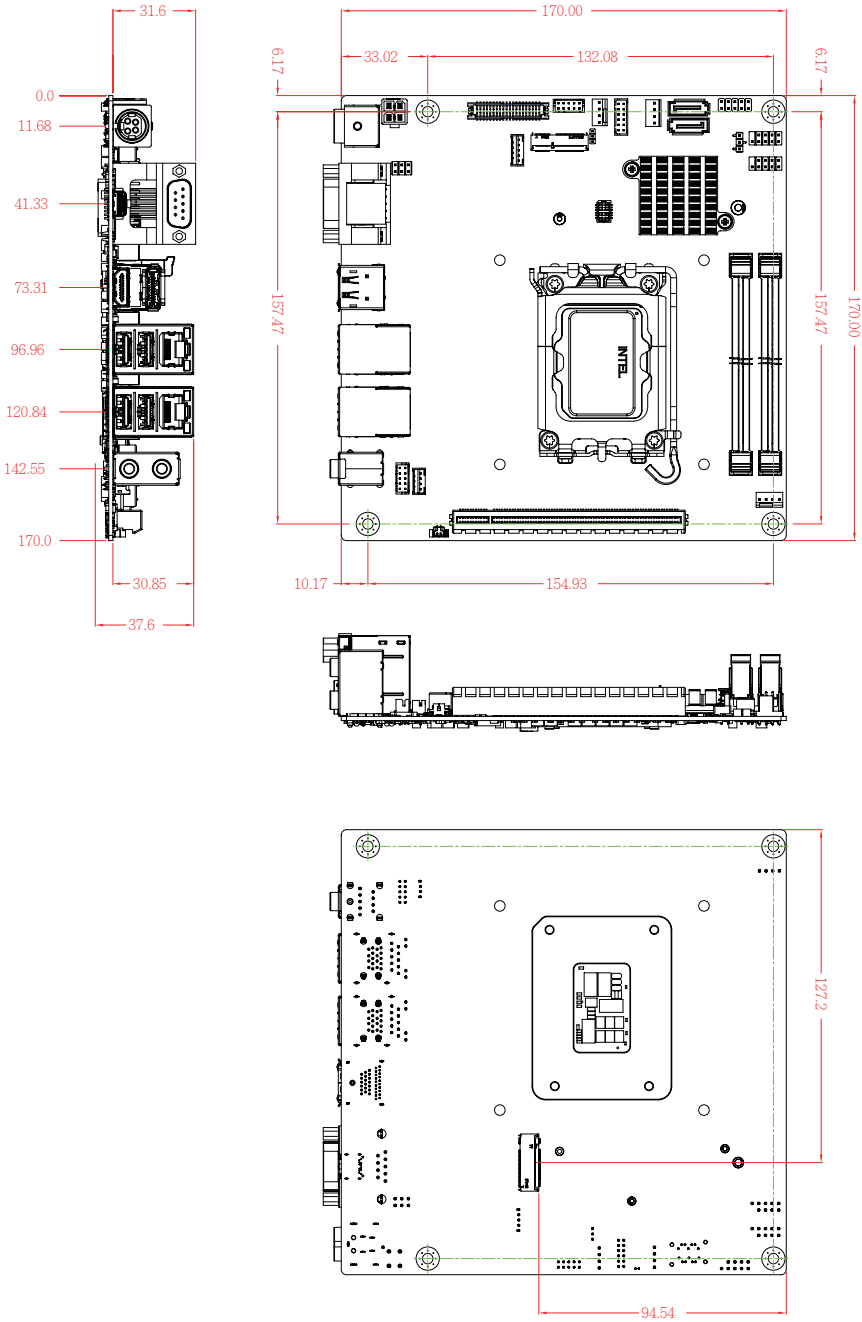
31.6
0.0
11.68
41.33
73.31
96.96
120.84
142.55
170.0
30.85
37.6
170.00
33.02
132.08
6.17
6.17
157.47
157.47
170.00
10.17
154.93
127.2
94.54

1.1 Specifications


Motherboard	mITX-Q870A (MQ870AI-SI)
Form Factor	Mini-ITX 170W x 170D (mm)
CPU	Support Intel® Core™ Ultra processors (Series 2) TDP under 65W
Socket	1 x LGA 1851
Chipset	Intel® Q870 Chipset
Memory	2 x DDR5 SO-DIMM sockets, Max. Capacity 96 GB Support Dual Channel DDR5 5600 MHz memory modules or 2 x DDR5 CSO-DIMM sockets, Max. Capacity 128 GB Support Dual Channel DDR5 6400 MHz memory modules
Ethernet	1 x 2.5GbE LAN Port (Intel® I226LM) 1 x 2.5GbE LAN Port (Intel® I226V)
Video	Integrated Graphics Processor - depends on CPU: 1 x HDMI 2.0 port, supporting a maximum resolution of 4096x2160 @60Hz 1 x DP 1.4 port, supporting a maximum resolution of 4096x2160 @60Hz 1 x LVDS port, supporting a maximum resolution of 1920x1200 @60Hz 1 x DP 1.4 through USB Type C (DP Alt mode), supporting a maximum resolution of 4096x2160 @60Hz (4 independent display outputs)
Audio	Realtek® ALC897
Storage	2 x SATA 6Gb/s Ports
RAID	RAID 0/1/5
Expansion Slots	1 x PCIe x16 (Gen4 x16) 1 x 2280 M.2 M-Key (PCIe Gen4x4, SATA 6Gb/s) 1 x 2230 M.2 E-Key (WiFi/BT)


Motherboard	mITX-Q870A (MQ870AI-SI)
Internal I/O	1 x 2x2-pin DC power connector (+12V/+19V~+24VDC) 2 x SATA power connectors 1 x CPU fan header 1 x System fan header 1 x Front panel header 1 x Front panel audio header 1 x 2W Speaker out header 4 x USB 2.0 headers 1 x COM header (RS-232) 1 x GPIO (8 bits) & SMBus header 1 x Backlight Control header 1 x Clear CMOS jumper 1 x AT/ATX mode select jumper
Rear I/O	2 x Audio Jacks (Line out, Mic in) 1 x COM Port (RS-232/422/485 & RI/5V/12V) 1 x HDMI 1 x Display Port 1 x USB 3.2 Type C with DP 1.4 (DP Alt mode) (10Gbps) 2 x RJ45 LAN Ports 4 x USB 3.2 Gen 1 (5Gbps) 1 x DC Jack (+12V/+19V~+24VDC)
TPM	Onboard TPM 2.0 security chip Infineon SLB9670VQ2.0
OS Compatibility	Windows 10 IoT Enterprise LTSC 2021, x64 Windows 11 IoT Enterprise LTSC 2024, x64
Operating Properties	Operating temperature: 0°C to 60°C Operating humidity: 60°C @ 20-95% (non-condensing) Non-operating temperature: -40°C to 85°C Non-operating humidity: 85°C @ 95% (non-condensing)
Order Information	Motherboard: 9MQ870AIMR-SI
Optional kit	CPU Cooler : 25ST0-037820-Y0R CPU Cooler Backplate : 12KRH-0A1700-00R

Chapter 2

Chapter 2 – Hardware Information

2.1 Jumpers and Connectors

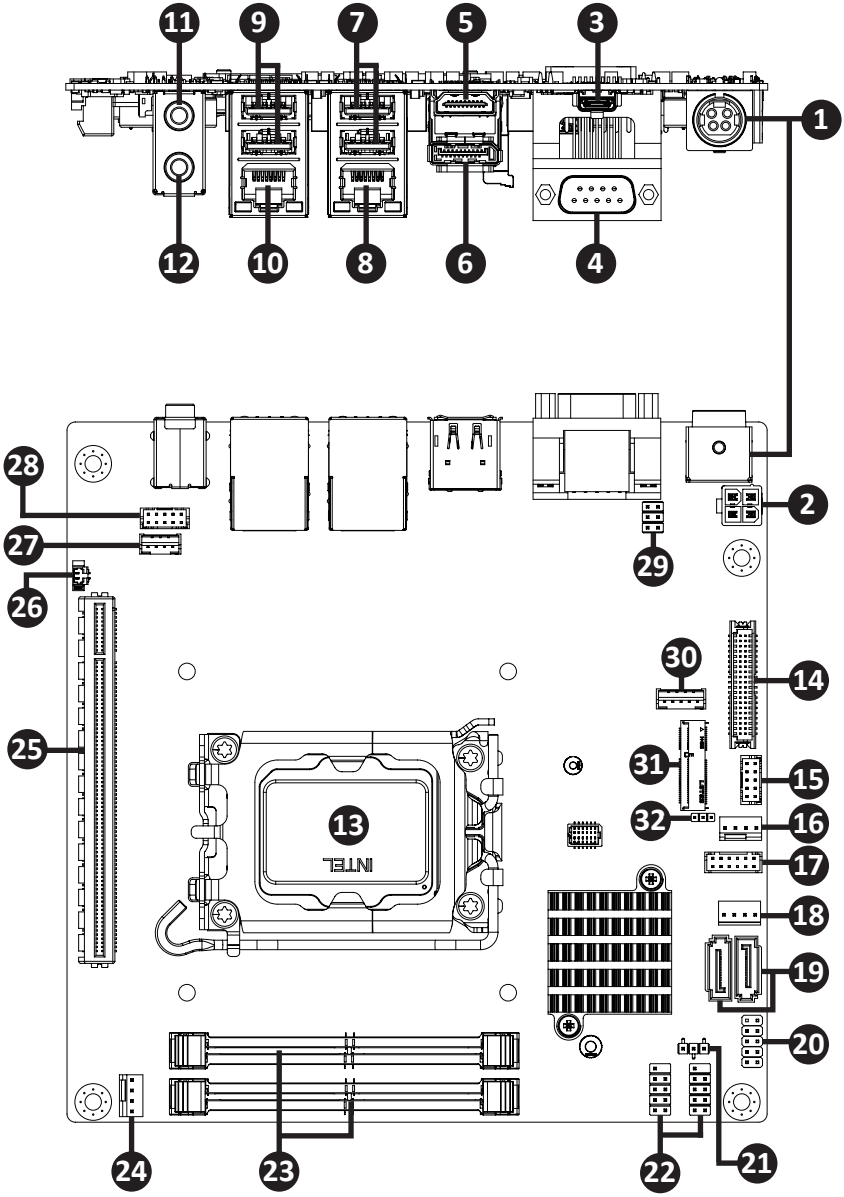


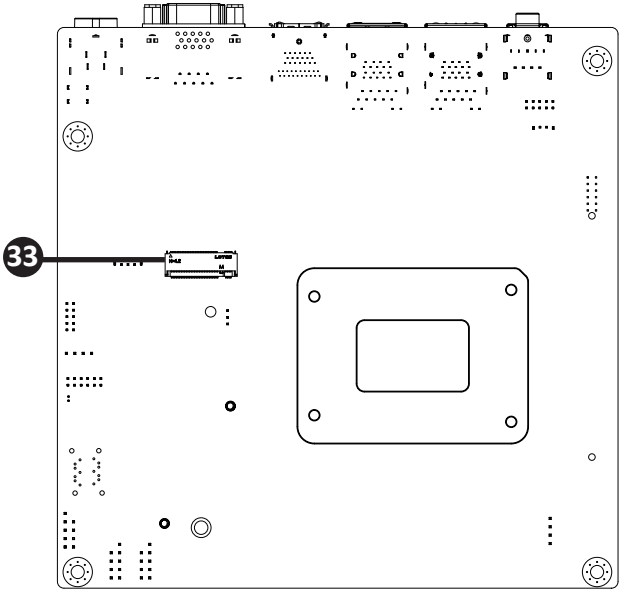

No	Code	Description
1	DC_IN1	DC In Jack 4 pin Din
2	DC_IN2	2x2 pin DC power Connector
3	USB32C	USB 3.2 Type C (10 Gbps)
4	COM1	COM1 Port (RS-232/422/485 & RI/5V/12V)
5	HDMI_DP	HDMI Connector
6		Display Port Connector
7	USB32_LAN1	USB 3.2 Gen 1 Port (5 Gbps)
8		2.5GbE LAN port
9	USB32_LAN2	USB 3.2 Gen 1 Port (5 Gbps)
10		2.5GbE LAN port
11	AUDIO	Mic in port (Pink)
12		Line Out port (Green)

No	Code	Description
13	CPU Socket	1 x LGA 1851 Socket
14	LVDS	LVDS Connector
15	COM2	COM2 header (RS-232)
16	SYS_FAN	System Fan Connector
17	GPIO_CNT	General purpose input/output header
18	SATA_PWR	SATA power Connector
19	SATA4, SATA5	SATA 6Gb/s Connector x 2
20	SYS_PANEL	System Panel header
21	CLR_CMOS	Clear CMOS jumper
22	FUSB2_1 FUSB2_2	USB 2.0 header
23	SODIMM1, SODIMM2	2 x DDR5 SO-DIMM Sockets
24	CPU_FAN	CPU FAN Connector
25	PCIEX16	1 x PCIe x16 (Gen4 x16 bus) slot
26	BATTERY	Battery Connector
27	SPEAKER	Speaker out Connector
28	FP_AUDIO	Front Panel Audio header
29	JCOM1	RI# pin RI#/5V/12V Select jumper for COM1 port
30	BKL_CN	Backlight Control connector
31	M2E	M.2 Slot, 2230 E-Key
32	AT_CN	AT/ATX mode select jumper
33	M2M	M.2 Slot, 2280 M-Key


2.2.1 IO Connector Information

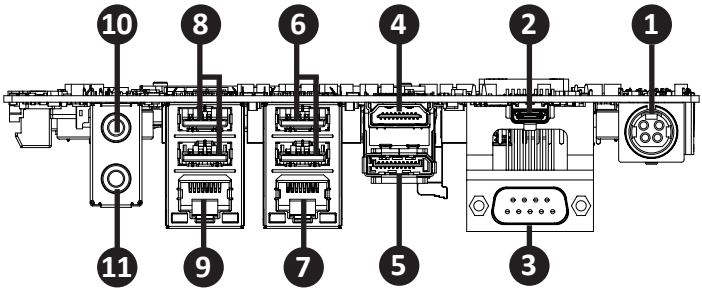


	Code	Description
1	DC_IN1	DC In Jack 4 pin Din
2	USB32C	USB 3.2 Type C (10 Gbps)
3	COM1	COM1 Port (RS-232/422/485 & RI/5V/12V)
4	HDMI_DP	HDMI Connector
5		Display Port Connector
6	USB32_LAN1	USB 3.2 Gen 1 Port (5 Gbps)
7		2.5GbE LAN port
8	USB32_LAN2	USB 3.2 Gen 1 Port (5 Gbps)
9		2.5GbE LAN port
10	AUDIO	Mic in port (Pink)
11		Line Out port (Green)

2.2.2 DC_IN1 (DC In Jack 4 Pin Din)


1

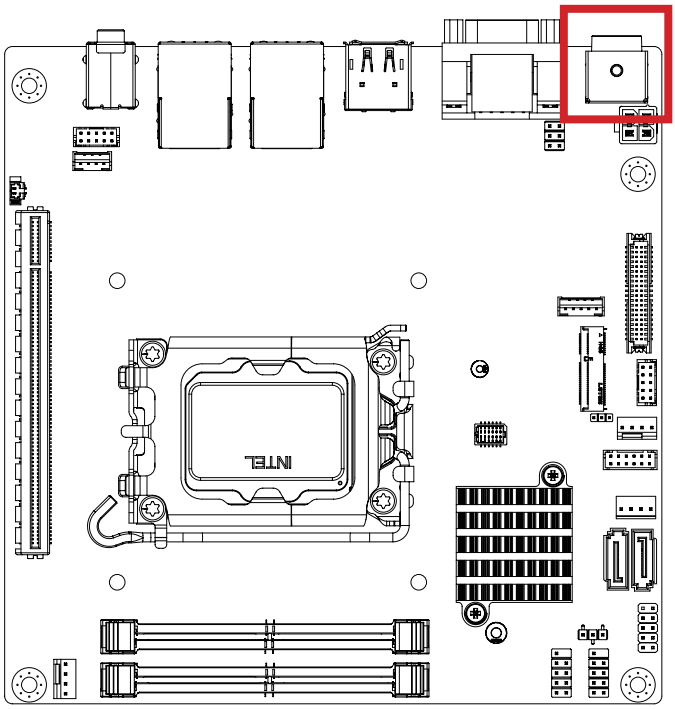

DC In Jack 4 Pin Din


Connector PN	Vendor
2MJ-3422A1I0	SINGATRON

2.2.3 DC_IN2 (2x2 Pin DC Power Connector)

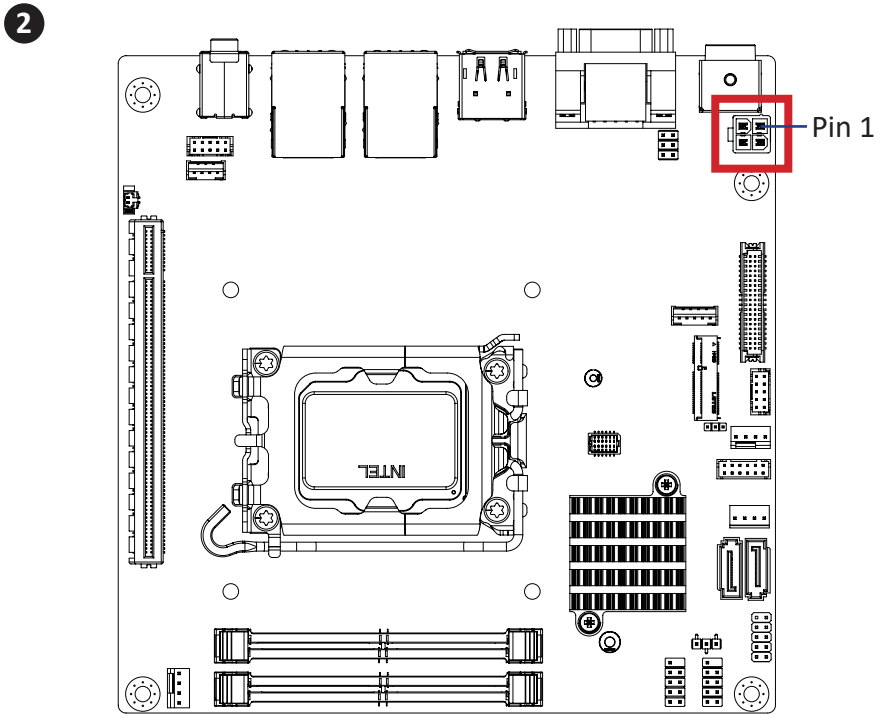

Power Connector
3 1 4 2


Connector PN	Vendor
740-81-04TW56	PINREX


Connector type
2x2pin header, pitch 4.2mm

Pin No.	Definition
1	GND
2	GND
3	DC IN
4	DC IN

2.2.4 USB32C (USB 3.2 Type C (10 Gbps))

❸

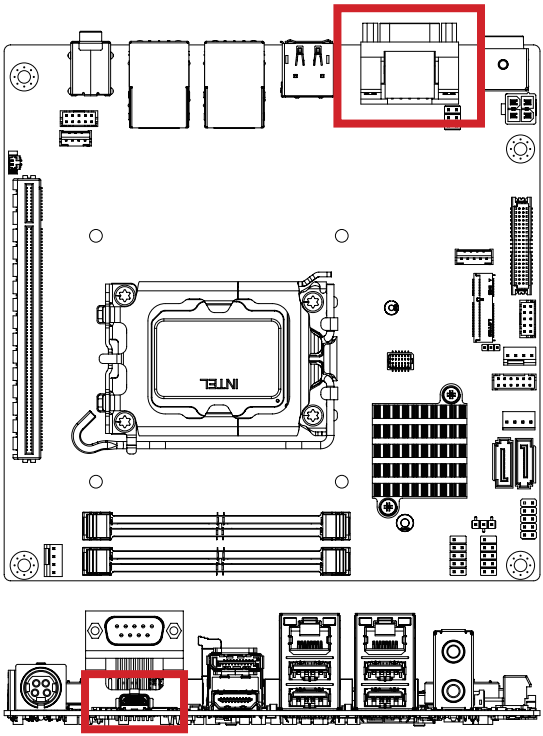


USB Type C Connector



Connector PN	Vendor
DZ11AA1-H5A7-4F	FOXCONN
D11015S021126N	FENYING

Pin No.	Definition	Pin No.	Definition
A1	GND	B1	GND
A2	TX1+	B2	TX2+
A3	TX1-	B3	TX2-
A4	VBUS	B4	VBUS
A5	CC1	B5	CC2
A6	D+	B6	D+
A7	D-	B7	D-
A8	SBU1	B8	SBU2
A9	VBUS	B9	VBUS
A10	RX2-	B10	RX1-
A11	RX2+	B11	RX1+
A12	GND	B12	GND

2.2.5 COM1 (COM1 Port (RS-232/422/485 & RI/5V/12V))

4

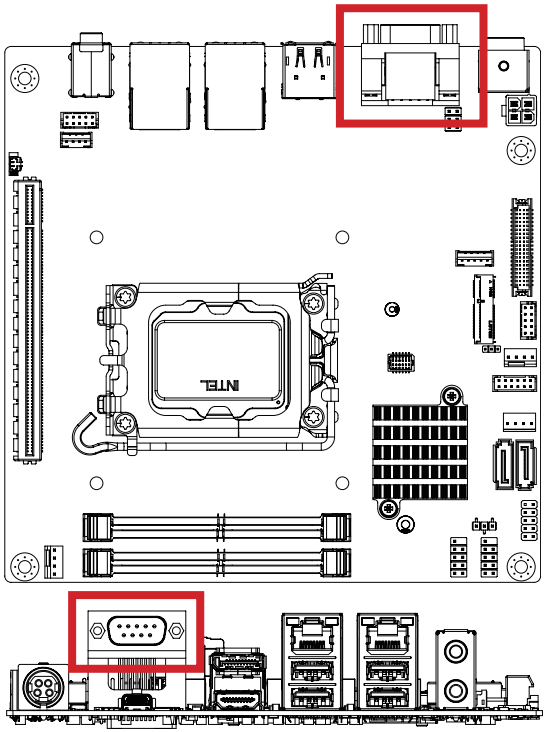

Serial Port Connector


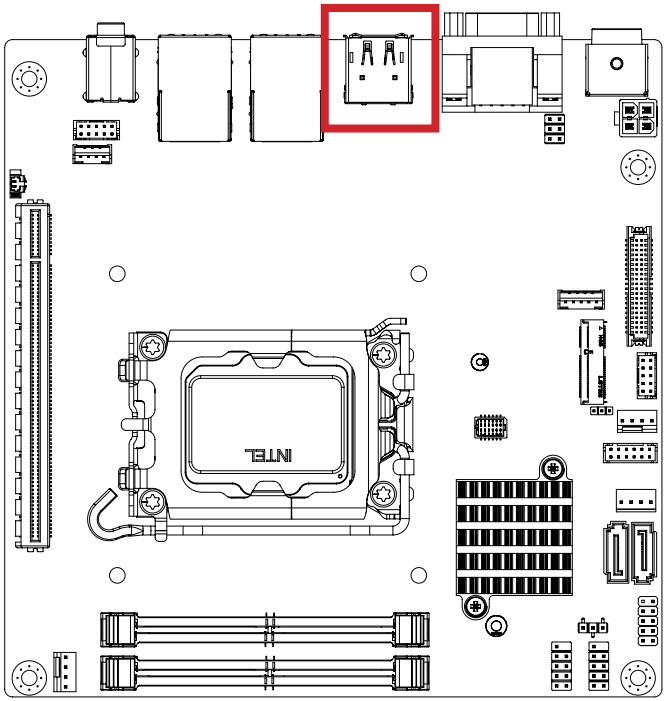
Pin No.	RS-232	RS-422 Full Duplex	RS-485 Half Duplex
1	DCD	TXD-	D-
2	RXD	TXD+	D+
3	TXD	RXD+	–
4	DTR	RXD-	–
5	GND		
6	DSR	–	–
7	RTS	–	–
8	CTS	–	–
9	RI	–	–


Connector PN	Vendor
DM10151-N5W3-4F	FOXCONN

Note :
For RI/5V/12V jumper setting, please see **P. 47**

2.2.6 HDMI_DP (HDMI + DP Connector)

5 6




HDMI & DP Connector
 DP port HDMI port


HDMI Connector			
Pin No.	Definition	Pin No.	Definition
1	TX2p	11	GND
2	GND	12	CLKn
3	TX2n	13	NC
4	TX1p	14	NC
5	GND	15	SCL
6	TX1n	16	SDA
7	TX0p	17	GND
8	GND	18	5V
9	TX0n	19	Hot Plug Detect
10	CLKp		

DP Connector			
Pin No.	Definition	Pin No.	Definition
1	TX0p	11	GND
2	GND	12	TX3n
3	TX0n	13	Dongle Detect
4	TX1p	14	GND
5	GND	15	AUXp
6	TX1n	16	GND
7	TX2p	17	AUXn
8	GND	18	Hot Plug Detect
9	TX2n	19	GND
10	TX3p	20	3.3V

2.2.7 USB32_LAN1 (USB + 2.5GbE LAN Connector)

7 8

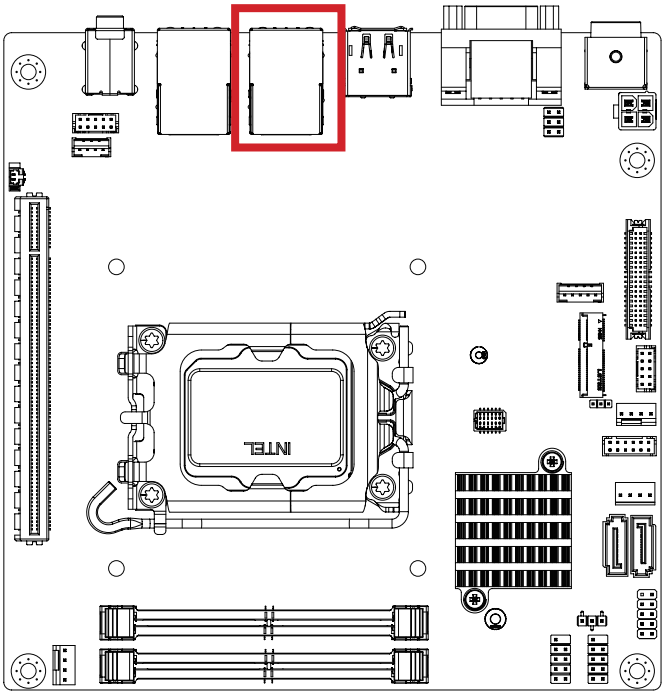

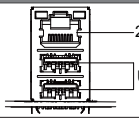USB & LAN Connector
 2.5GbE LAN connector USB 3.2 Gen 1 connector (5 Gbps)


USB Connector			
Pin No.	Definition	Pin No.	Definition
1	5V	10	5V
2	D1n	11	D0n
3	D1p	12	D0p
4	GND	13	GND
5	USB3_RX1n	14	USB3_RX2n
6	USB3_RX1p	15	USB3_RX2p
7	GND	16	GND
8	USB3_TX1n	17	USB3_TX2n
9	USB3_TX1p	18	USB3_TX2p


LAN Connector			
Pin No.	Definition	Pin No.	Definition
1	TX1+	4	TX3+
2	TX1-	5	TX3-
3	TX2+	7	TX4+
6	TX2-	8	TX4-

State	Description
Orange On	2.5Gbps data rate
Green On	1Gbps data rate
Off	100M&10Mbps data rate

2.2.8 USB32_LAN2 (USB + 2.5GbE LAN Connector)

9 10

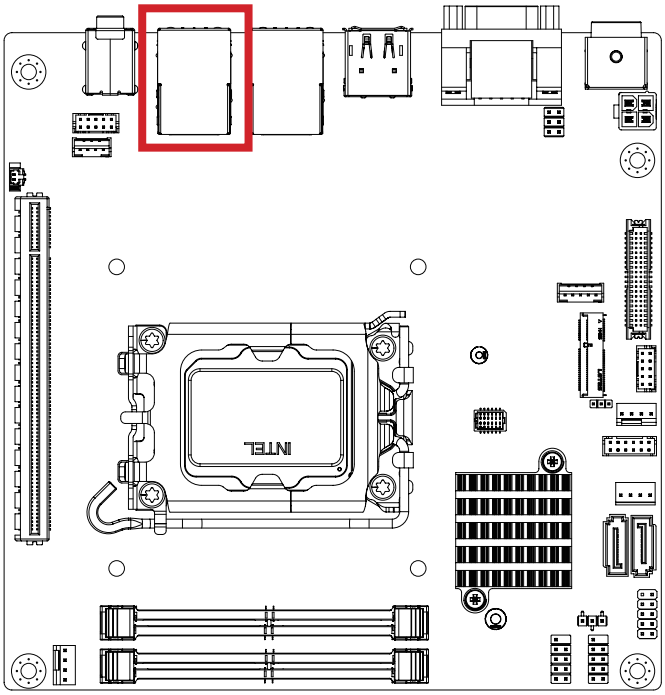

USB & LAN Connector
 2.5GbE LAN connector USB 3.2 Gen 1 connector (5 Gbps)


USB Connector			
Pin No.	Definition	Pin No.	Definition
1	5V	10	5V
2	D1n	11	D0n
3	D1p	12	D0p
4	GND	13	GND
5	USB3_RX1n	14	USB3_RX2n
6	USB3_RX1p	15	USB3_RX2p
7	GND	16	GND
8	USB3_TX1n	17	USB3_TX2n
9	USB3_TX1p	18	USB3_TX2p

LAN Connector			
Pin No.	Definition	Pin No.	Definition
1	TX1+	4	TX3+
2	TX1-	5	TX3-
3	TX2+	7	TX4+
6	TX2-	8	TX4-

State	Description
Orange On	2.5Gbps data rate
Green On	1Gbps data rate
Off	100M&10Mbps data rate


2.2.9 AUDIO (Mic in + Line out)

11 12

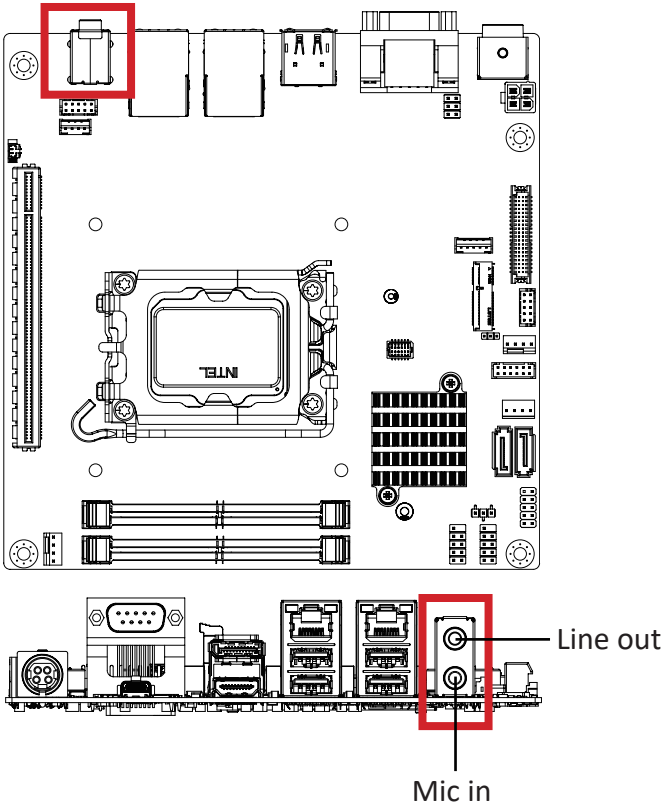


2.2.10 CPU Socket (LGA 1851 Socket)

13

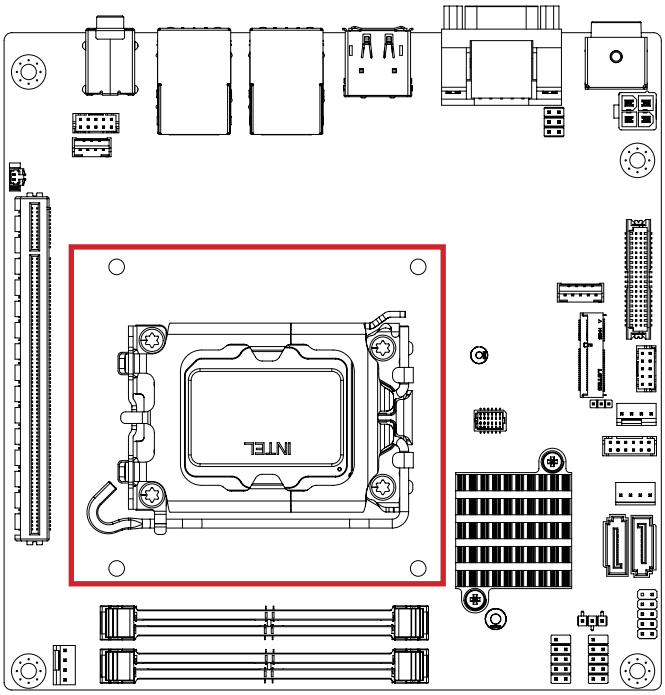


2.2.11 LVDS (LVDS Connector)

14

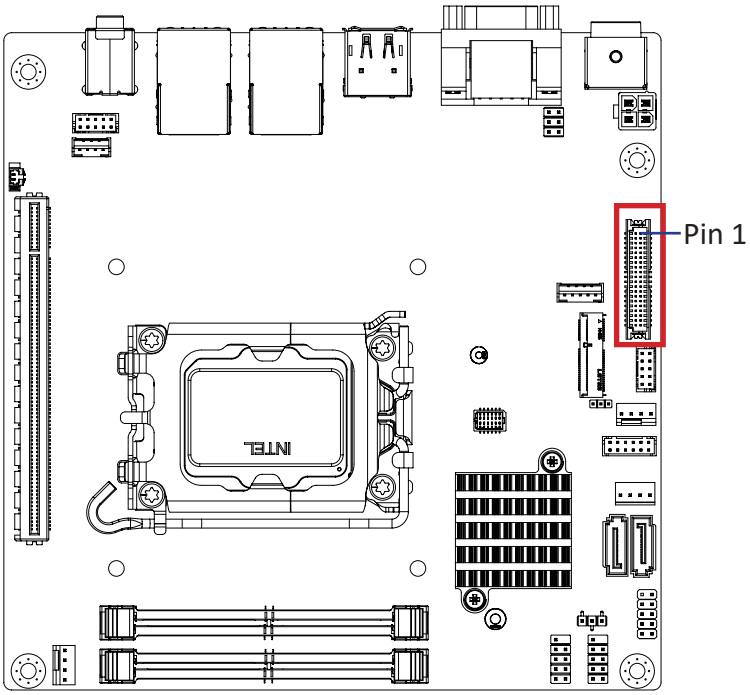

LVDS Connector



Pin No.	Definition	Pin No.	Definition
1	3.3V	21	A5+
2	5V	22	A4+
3	3.3V	23	A5-
4	5V	24	A4-
5	SPC0(DDC CLK)	25	GND
6	SPD0(DDC DATA)	26	GND
7	GND	27	A7+
8	GND	28	A6+
9	A1+	29	A7-
10	A0+	30	A6-
11	A1-	31	GND
12	A0-	32	GND
13	GND	33	CLK2+
14	GND	34	CLK1+
15	A3+	35	CLK2-
16	A2+	36	CLK1-
17	A3-	37	GND
18	A2-	38	GND
19	GND	39	12V
20	GND	40	12V

Connector PN	Vendor
712-76-40GWE0	PINREX
A1252WV-SF-2X20PD01	JOINT-TECH


Connector type
2x20pin header, pitch 1.25mm


For each model support LVDS function.
But below model no need to add.
A0~A3 is odd channel 0~3, A4~A7 is even channel.

Note: *The LVDS output connector of the unit is only intended to be connected to an UL/IEC/EN approval equipment with fire enclosure.

2.2.12 COM2 (COM2 header (RS-232))

15

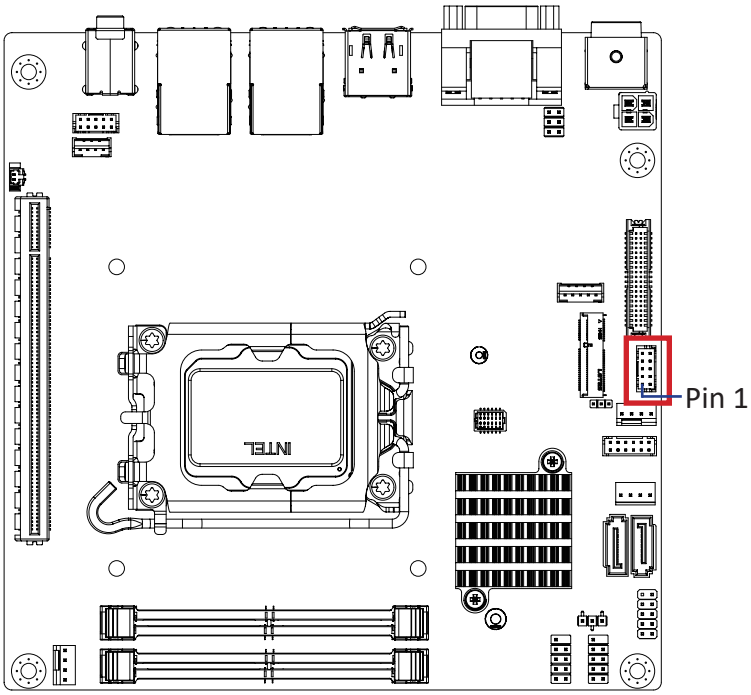

COM 2 header


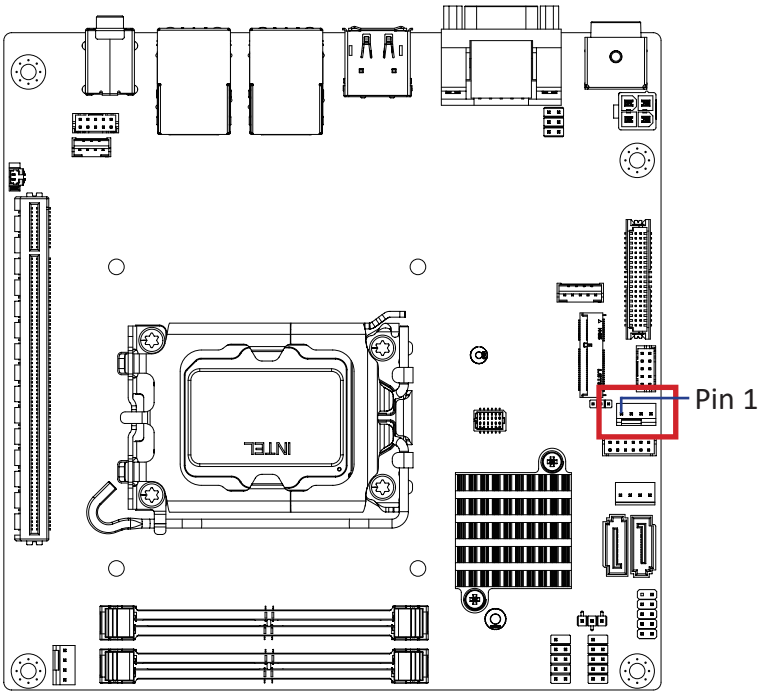
Pin No.	Definition
1	RXD
2	DCD
3	DTR
4	TXD
5	DSR
6	GND
7	CTS
8	RTS
9	No connect
10	RI

Connector PN	Vendor
725-81-10TW00	PINREX

Connector type
2x5pin header, pitch 2.0mm

2.2.13 SYS_FAN (System Fan Connector)

16



System FAN
1 4


Connector PN	Vendor
744-81-045R11	PINREX


Connector type
1x4pin header, pitch 2.54mm

Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

2.2.14 GPIO_CNT (General purpose input/out header)

17

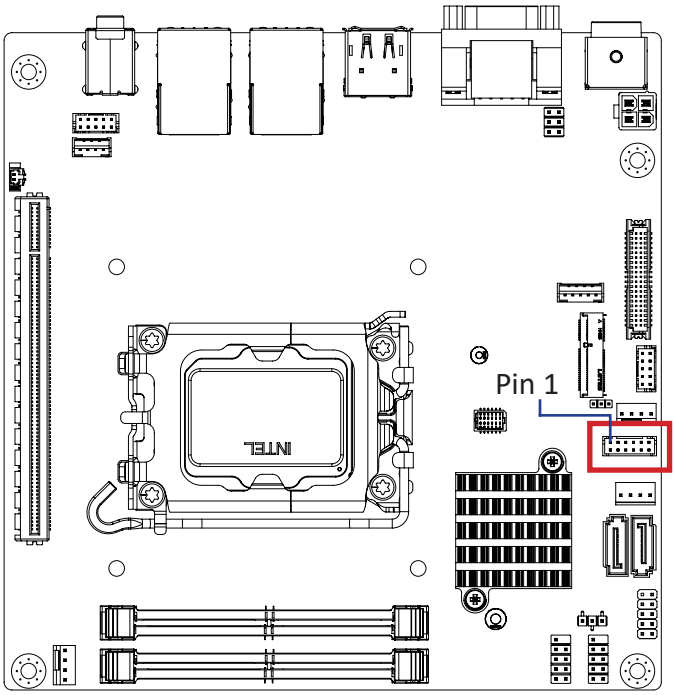

GPIO Connector


Pin No.	Definition
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4


Pin No.	Definition
9	SMBus Clock
10	SMBus DATA
11	5V
12	GND

Connector PN	Vendor
725-81-12TW00	PINREX

Connector type
2x6pin header, pitch 2.0mm

2.2.15 SATA_PWR (SATA Power Connector)

18

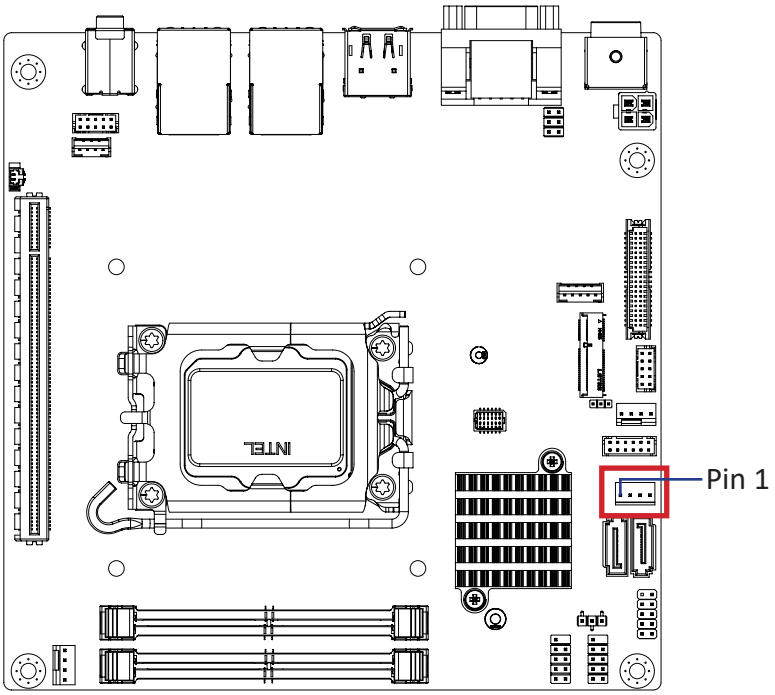

SATA Power Connector
1 ■■■■ 4


Connector PN	Vendor
743-91-045W00	PINREX


Connector type
1x4pin header, pitch 2.54mm

Pin No.	Definition
1	5V
2	GND
3	GND
4	5V

2.2.16 SATA4, SATA5 (SATA 6Gb/s Connector)

19

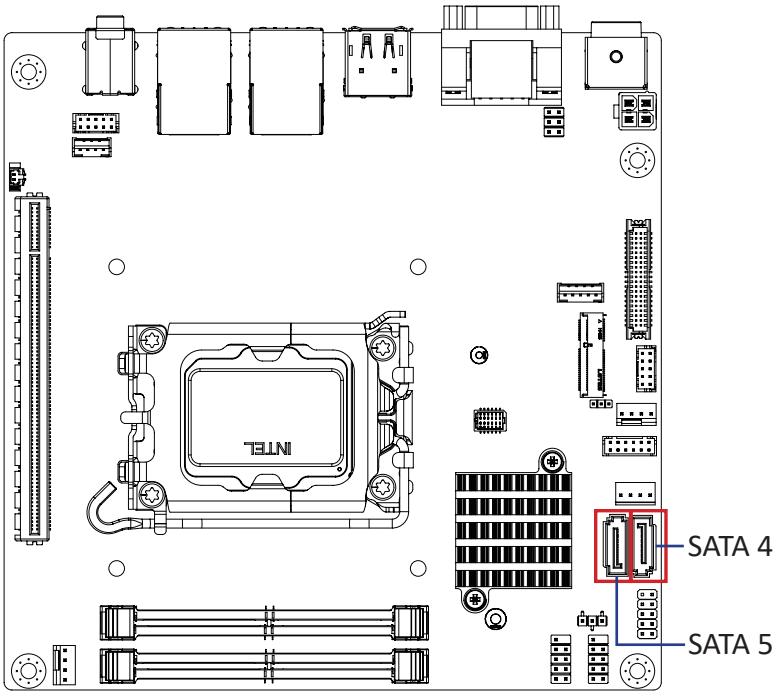


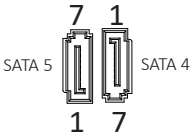SATA 6Gb/s Connector


Pin No.	Definition
1	GND
2	TXp
3	TXn
4	GND
5	RXn
6	RXp
7	GND

2.2.17 SYS_PANEL (System Panel header)

20

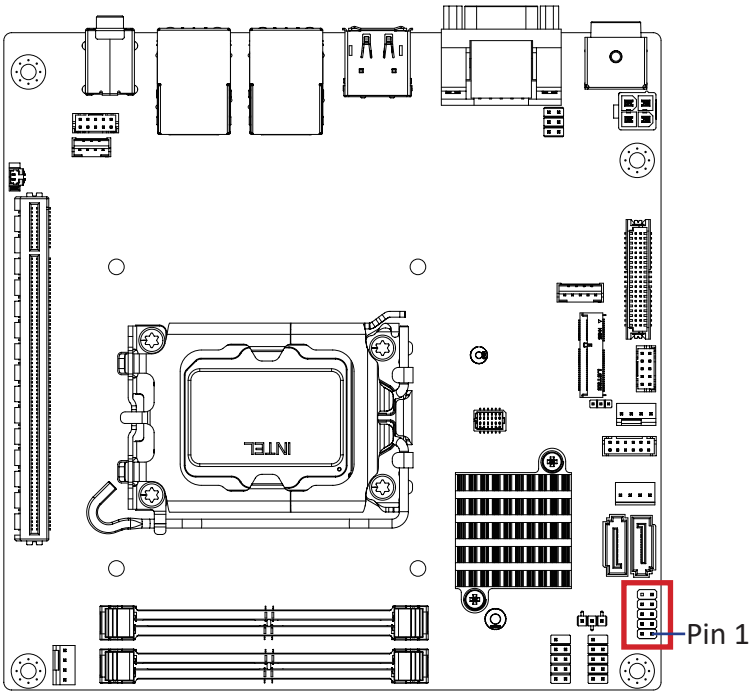

System Panel Header
10 9 2 1


Pin No.	Definition
1	HD-P
2	MPD-P
3	HD-N
4	MPD-N
5	GND
6	POWER-ON
7	Reset
8	GND
9	Reserved
10	NC

Connector PN	Vendor
210-92-05GW5W	PINREX

Connector type
2x5pin header, pitch 2.54mm

2.2.18 CLR_CMOS (Clear CMOS jumper)

21

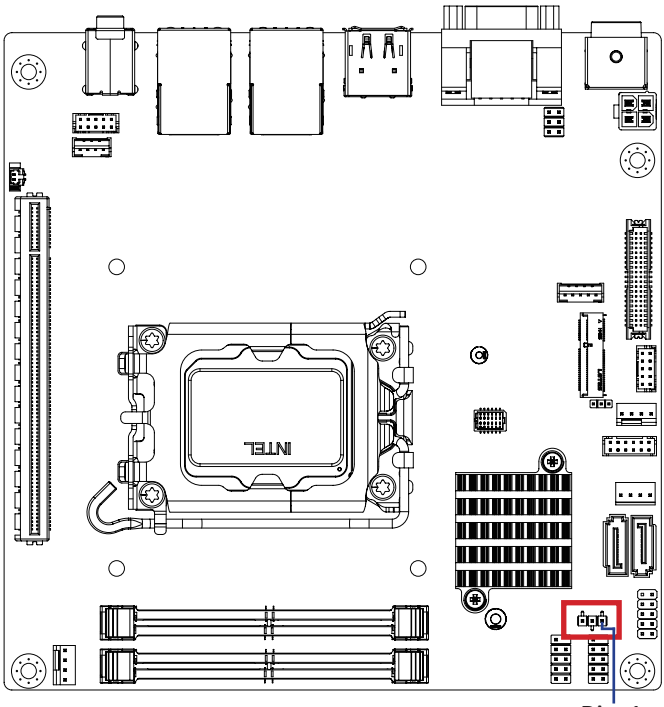

Clear CMOS Jumper
1 


Connector PN	Vendor
212-91-03GBE04D	PINREX
212-91-03GBE00K	PINREX

Connector type
1x3pin header, pitch 2.54mm

Pin No.	Definition
1	NC
2	GND
3	Clear CMOS
1-2 Close: Normal Operator (Default setting) 2-3 Close: Clear CMOS data	

2.2.19 FUSB2_1, FUSB2_2 (USB 2.0 header)

22

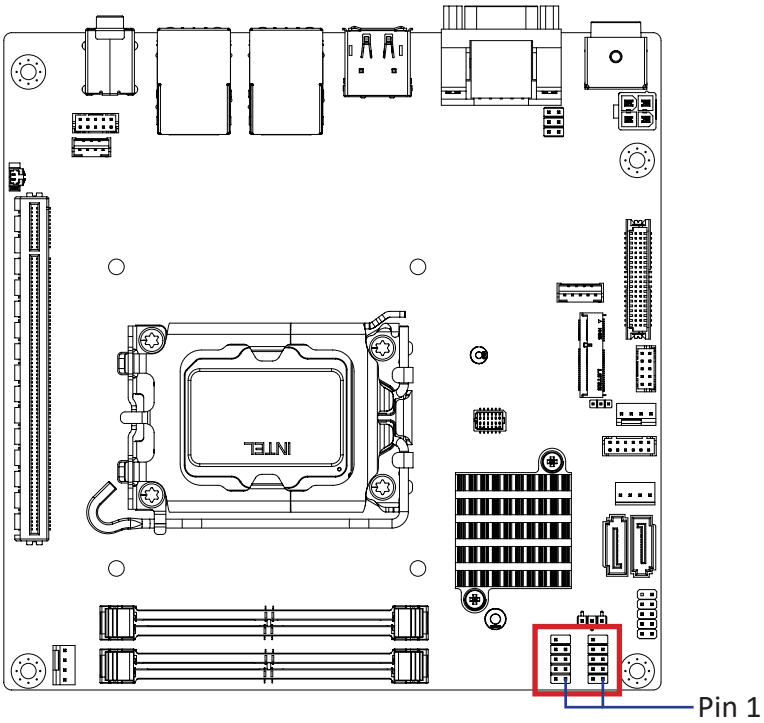

USB 2.0 Header
10 9 2 1


Pin No.	Definition
1	5V
2	5V
3	D2n
4	D1n
5	D2p
6	D1p
7	GND
8	GND
9	No Pin
10	NC

Connector PN	Vendor
210-92-05GB04	PINREX
PH10R53BAZ009	HORNGTONG


Connector type
2x5pin header, pitch 2.54mm

2.2.20 SODIMM1, SODIMM2 (2 x DDR5 SO-DIMM Sockets)

23

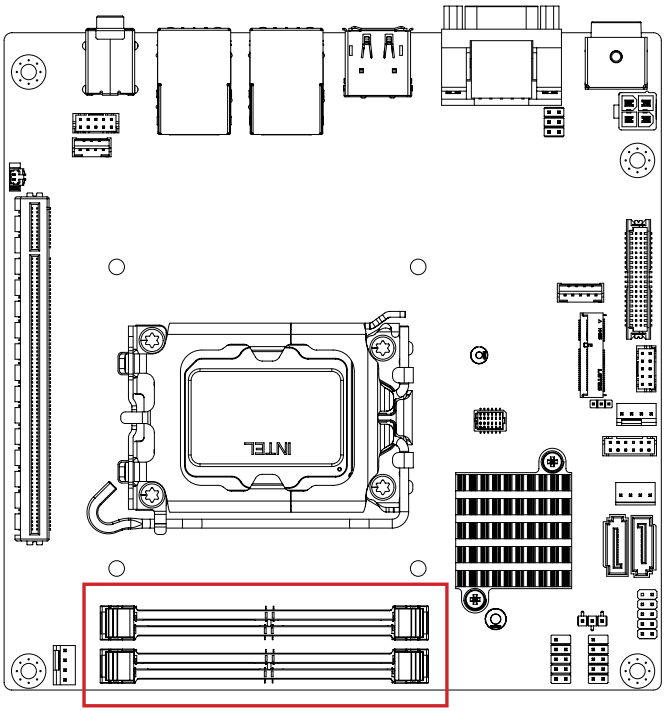

2.2.21 CPU_FAN (CPU FAN Connector)

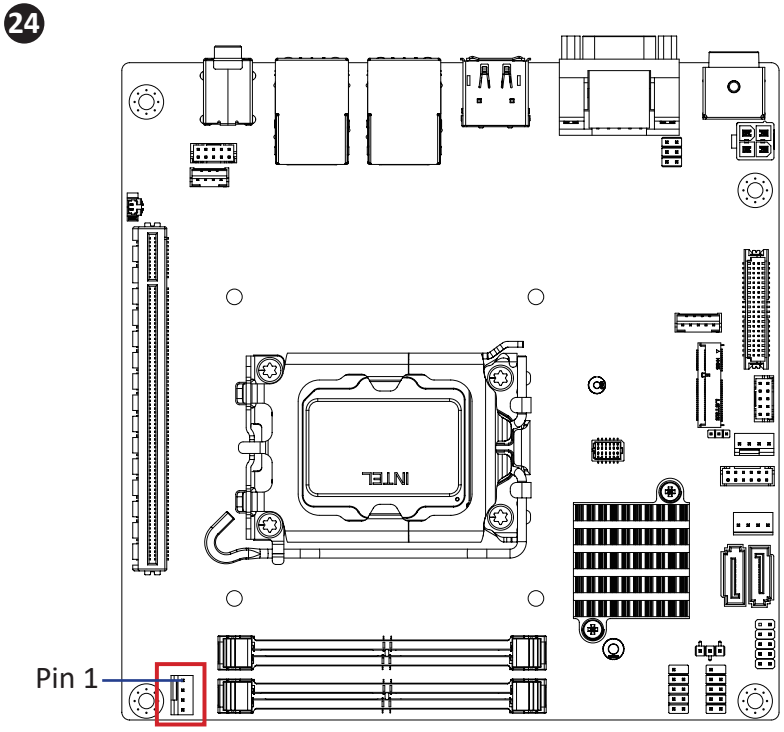

CPU Fan Connector
1 4


Connector PN	Vendor
744-81-045W1Z	PINREX

Connector type
1x4pin header, pitch 2.54mm


Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

2.2.22 PCIEX16 (1 x PCIe x16 (Gen4 x16 Bus) Slot)


25

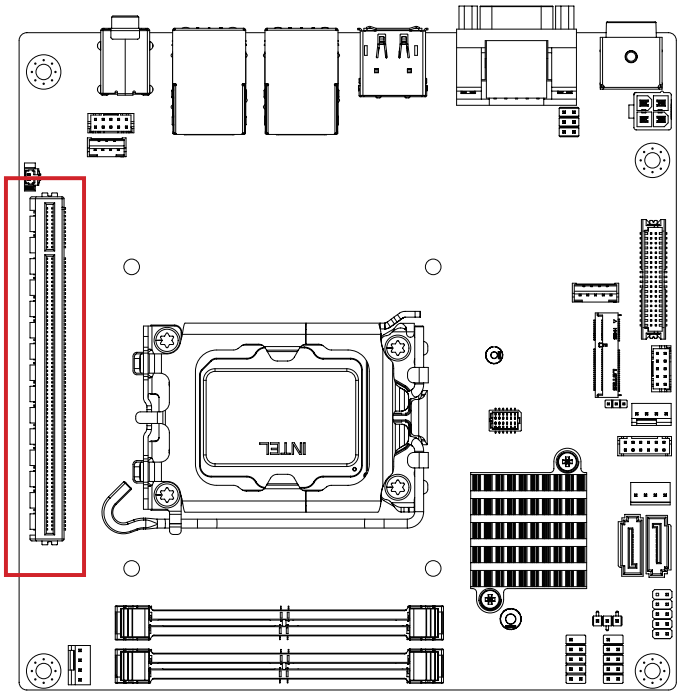

PCIEX16 connector



2.2.23 BATTERY (Battery Connector)

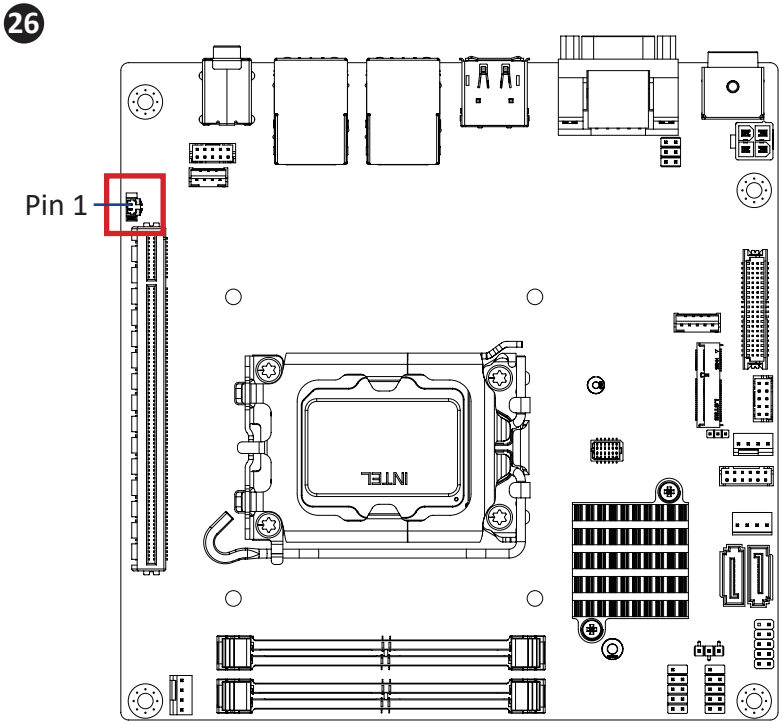



Battery Connector


Pin No.	Definition
1	3V
2	GND

2.2.24 SPEAKER (Speaker Out Connector)

27

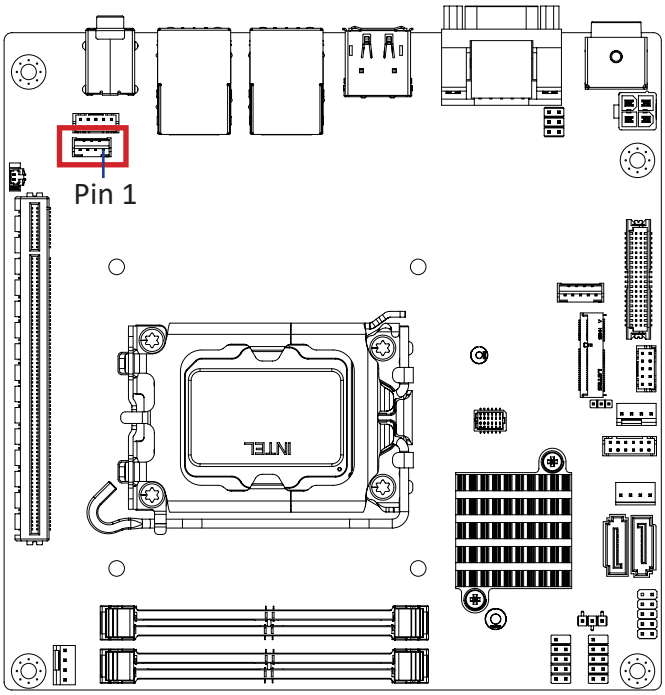

Speaker Out Connector
4 1 


Connector PN	Vendor
A2001WV-04P146	JOINT-TECH

Connector type
1x4pin header, pitch 2.0mm

Pin No.	Definition
1	SPEAKER L+
2	SPEAKER L-
3	SPEAKER R-
4	SPEAKER R+

2.2.25 FP_AUDIO (Front Panel Audio header)

28

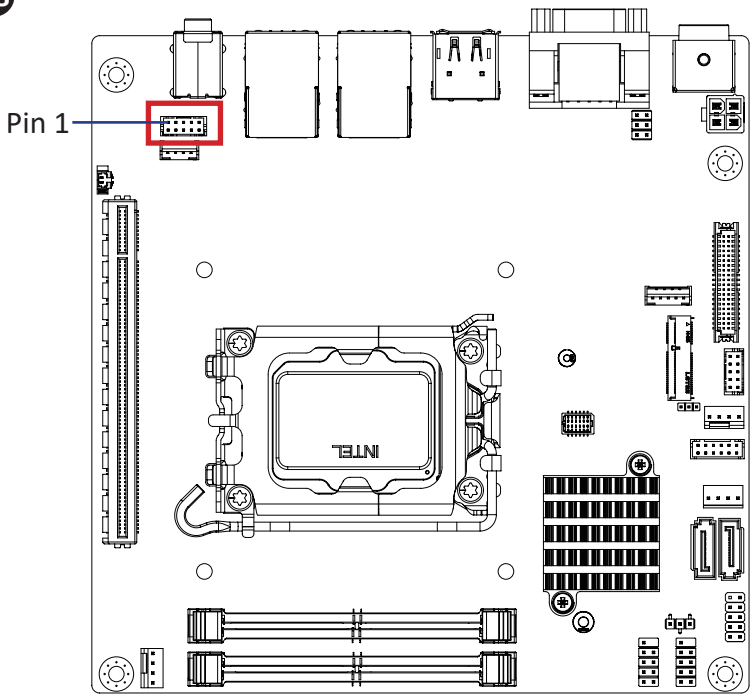

Front Audio Connector
1 9 2 10


Connector PN	Vendor
725-81-10TW00	PINREX

Connector type
2x5pin header, pitch 2.0mm

Pin No.	Definition	Pin No.	Definition
1	MIC-LEFT	6	MIC2-JD
2	GND	7	JACK SENCE DETECT
3	MIC-RIGHT	8	NC
4	DETECT	9	LINE-LEFT
5	LINE-RIGHT	10	LINE2-JD

2.2.26 JCOM1 (RI# pin RI#/5V/12V Select jumper for COM1 Port)

29

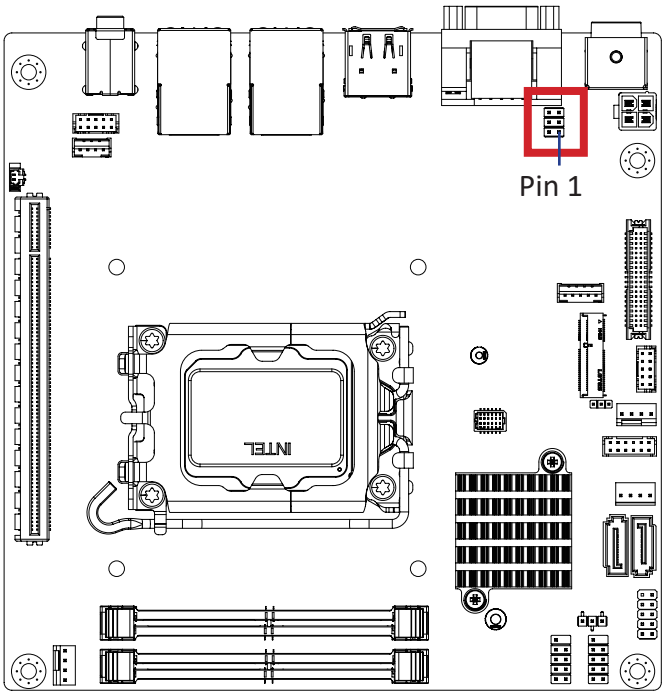


JCOM1 Jumper Select	
6 5 2 1	1-2 Close: 5V (Power COM)
6 5 2 1	3-4 Close: RI (Stand COM)
6 5 2 1	5-6 Close: 12V (Power COM)

Connector PN	Vendor
210-92-03GB01	PINREX
PH06R53BAZ000	HORNGTONG

Connector type
2x3pin header, pitch 2.54mm

2.2.27 BKL_CN (Backlight Control Connector)

30

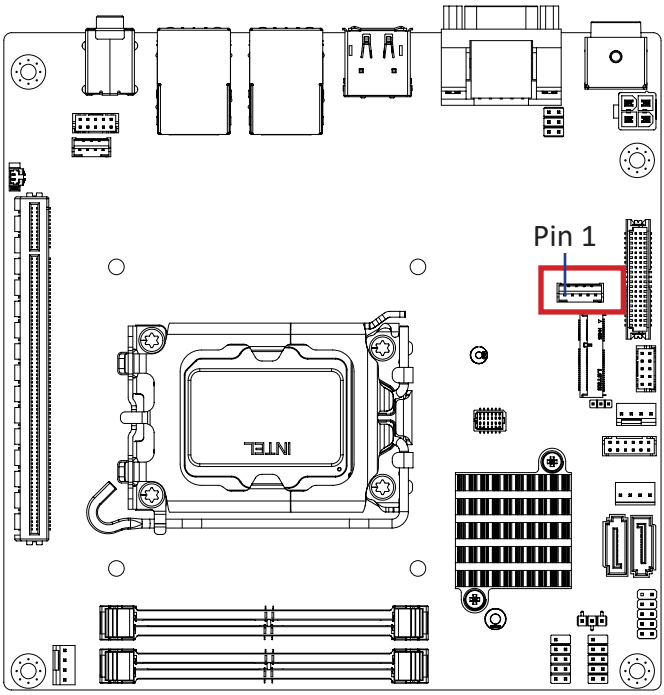

Backlight Control Connector
1 ▪▪▪▪▪ 5


Connector PN	Vendor
721-81-05TW00	PINREX

Connector type
1x5pin header, pitch 2.0mm

Pin No.	Definition
1	5V (12V optional)
2	PWM
3	Backlight enable
4	GND
5	12V

2.2.28 M2E (M.2 Slot, 2230 E-Key)

31

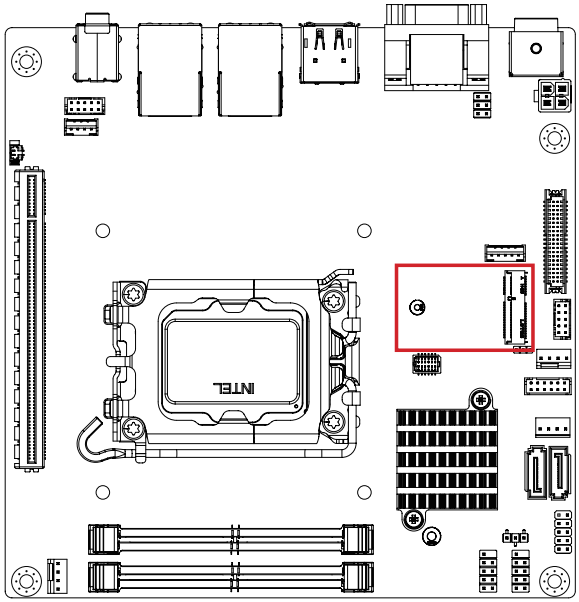

M.2 E Key Connector
2 1 74 75


Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	D1p	4	3.3V
5	D1n	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	GND	14	NC
15	NC	16	NC
17	NC	18	GND
19	GND	20	NC
21	NC	22	NC
23	NC		

Pin No.	Definition	Pin No.	Definition
33	GND	32	NC
35	PCIE_TXp	34	NC
37	PCIE_TXn	36	NC
39	GND	38	NC
41	PCIE_RXp	40	NC
43	PCIE_RXn	42	NC
45	GND	44	NC
47	PCIE CLOCKp	46	NC
49	PCIE CLOCKn	48	NC
51	GND	50	SUSCLK
53	PCIE Clock Request	52	PCIRST
55	PCIE wake up	54	BT_Disable
57	GND	56	WLAN_DISABLE
59	NC	58	NC
61	NC	60	NC
63	GND	62	NC
65	NC	64	NC
67	NC	66	NC
69	GND	68	NC
71	NC	70	NC
73	NC	72	3.3V
75	GND	74	3.3V

Connector PN	Vendor
2E0BC21-S85BE-7H	FOXCONN
80152-8521	BELLWETHER
APCI0095-P002A	LOTES

2.2.29 AT_CN (AT/ATX mode select jumper)

32

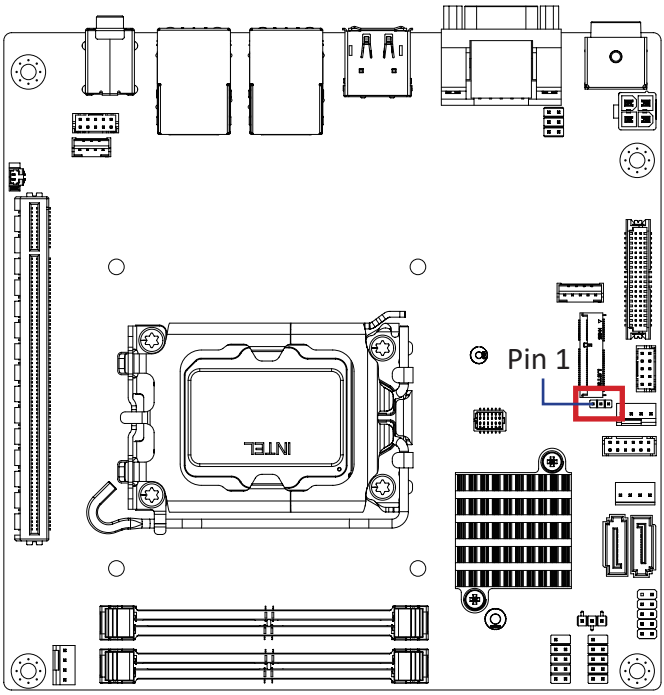

AT/ATX mode select jumper
1 


Connector PN	Vendor
220-96-03GB001K	PINREX

Connector type
1x3pin header, pitch 2.0mm

Pin No.	Definition
1	AT MODE
2	Detect
3	ATX MODE
Jumper setting 1-2 Close : AT mode. 2-3 Close : ATX mode.(Default setting)	

2.2.30 M2M (M.2 Slot, 2280 M-Key)

33

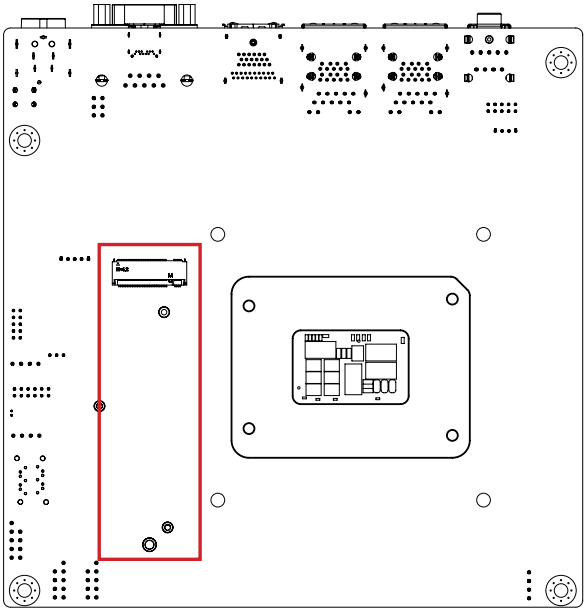

M.2 M Key Connector			
1		75	
2		74	

Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	GND	4	3.3V
5	PCIE3 RXn	6	NC
7	PCIE3 RXp	8	NC
9	GND	10	SSD LED
11	PCIE3 TXn	12	3.3V
13	PCIE3 TXp	14	3.3V
15	GND	16	3.3V
17	PCIE2 RXn	18	3.3V
19	PCIE2 RXp	20	NC
21	GND	22	NC
23	PCIE2 TXn	24	NC
25	PCIE2 TXp	26	NC
27	GND	28	NC
29	PCIE1 RXn	30	NC
31	PCIE1 RXp	32	NC
33	GND	34	NC
35	PCIE1 TXn	36	NC

Pin No.	Definition	Pin No.	Definition
37	PCIE1 TXp	38	DEVSLP
39	GND	40	NC
41	PCIE0 RXn	42	NC
43	PCIE0 RXp	44	NC
45	GND	46	NC
47	PCIE0 TXn	48	NC
49	PCIE0 TXp	50	PCI Reset
51	GND	52	PCIE Clock Request
53	PCIE Clockn	54	Wakeup
55	PCIE Clockp	56	NC
57	GND	58	NC

Pin No.	Definition	Pin No.	Definition
67	NC	68	SUSCLK
69	Detect	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Connector PN	Vendor
AS0BC21-S40BM-7H	FOXCONN
APCI0073-P001A	LOTES

Chapter 3

Chapter 3 – BIOS

3.1 Introduction

BIOS (Basic input/output system) provides hardware detailed information and boot-up options, which include firmware to control, set-up and test all hardware settings. Therefore, BIOS is the communication bridge between OS/application software and hardware.

3.1.1 How to Entering into BIOS menu


Once the system is power on, press the <DEL> key as soon as possible to access into BIOS Setup program.

3.1.2 Function Keys to setup in BIOS Setup program

Function keys	Description
→←	Select Screen
↑↓	Select Item
Enter	Execute command or enter the submenu
+	Increase the numeric value or make changes
—	Decrease the numeric value or make changes
F1	General Help
F2	Previous Values
F3	Load Optimized Defaults Settings
F4	Save changes & Exit the BIOS Setup program
ESC	Exit the BIOS Setup program

3.2 The Main Menu


The main menu shows the basic system information.
Use arrow keys to move among the items.

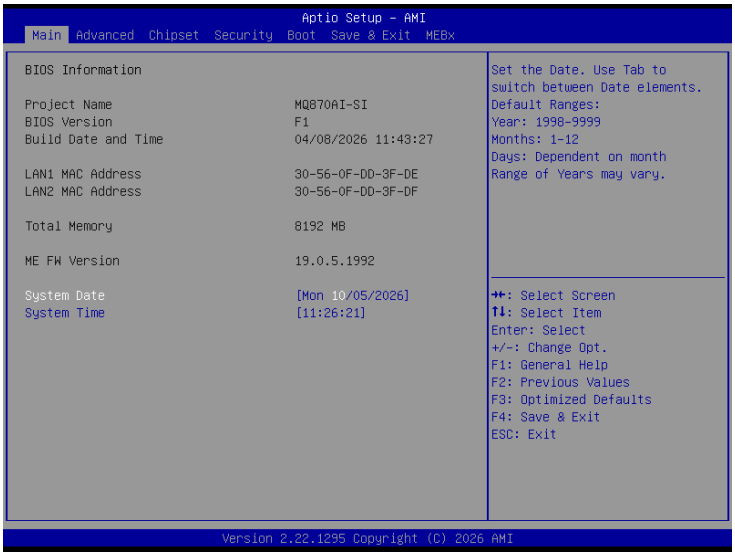


Items	Description
Project Name	Shows Project name information
BIOS Version	Shows the BIOS version of the system
Build Date and Time	Shows the Build Date and Time when the BIOS was created.
LAN1 MAC Address	Shows LAN 1 MAC Address information
LAN2 MAC Address	Shows LAN 2 MAC Address information
Total Memory	Shows the total memory size of the installed memory
ME FW version	Shows ME firmware version
System Date	Set the Date for the system (Format : Week - Month - Day - Year)
System Time	Set the time for the system (Format : Hour - Minute - Second)

3.3 Advanced

The Advanced menu is to configure the functions of hardware settings through submenu. Use arrow keys to move among the items, and press <Enter> to access into the related submenu.

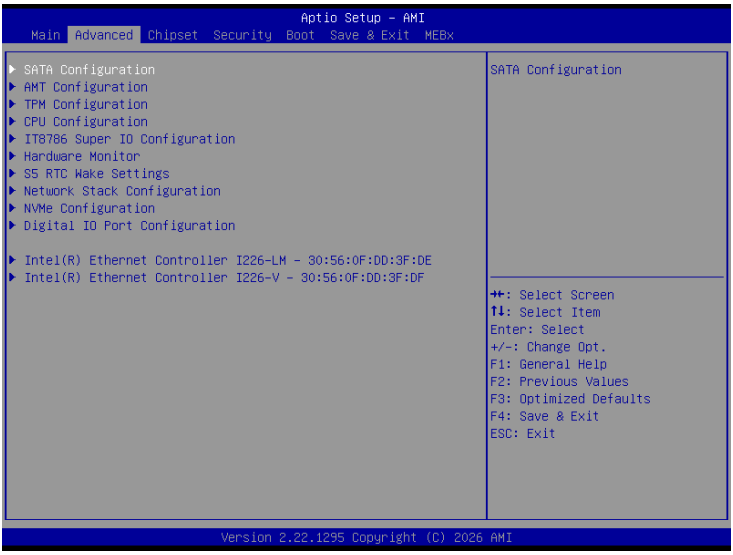


3.3.1 SATA Configuration

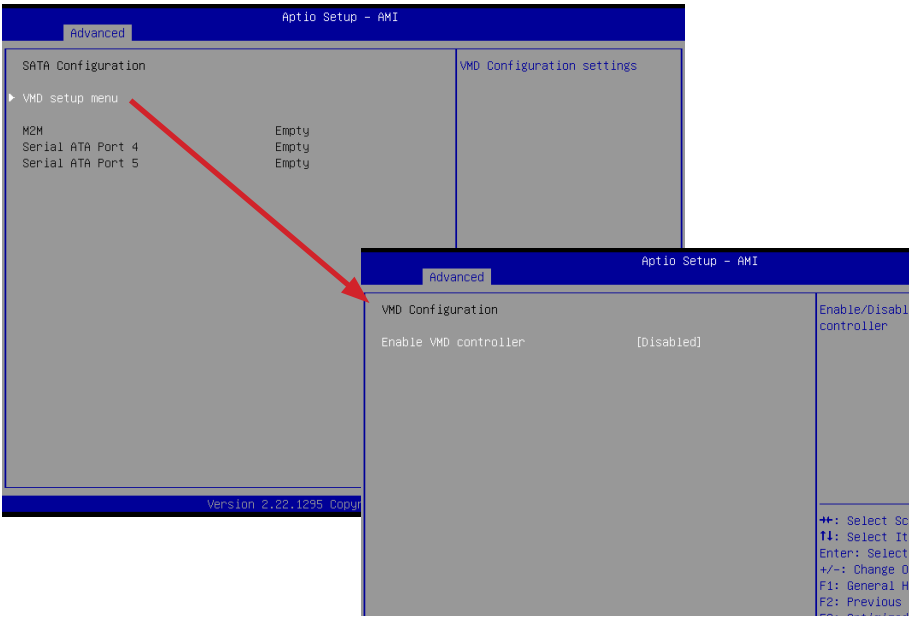


Item	Description
VMD setup menu / Enable VMD controller	Intel VMD feature helps you to control and manage NVMe PCIe SSD. **Enabled : Enables Intel VMD feature** **Disabled : Disables Intel VMD feature (Default setting)**
M2M	shows M.2 PCIe SSD information
Serial ATA Port 4	shows 2.5" SATA HDD/SSD information
Serial ATA Port 5	shows 2.5" SATA HDD/SSD information

3.3.2 AMT Configuration

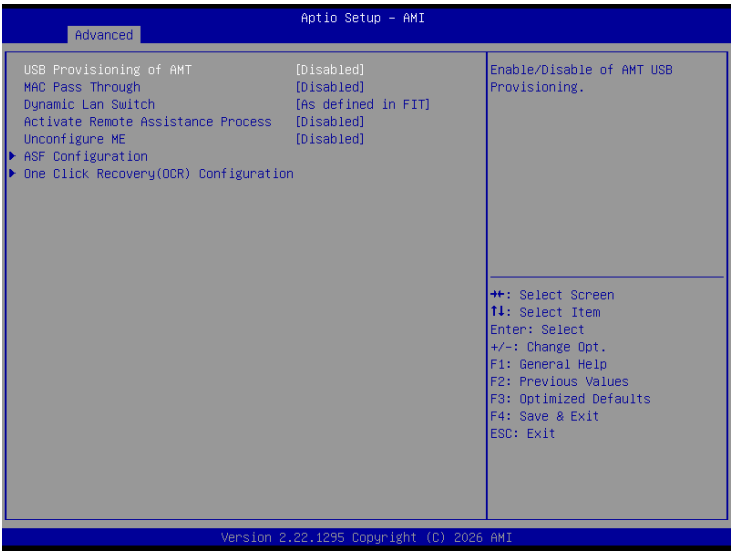


Item	Description
USB Provisioning of AMT	Inserting a specially formatted USB drive into a system, to let the other system remotely control. **Disabled : Disables USB Provisioning of AMT (Default setting)** **Enabled : Enables USB Provisioning of AMT**
MAC Pass Through	**Disabled : Disables MAC Pass Through function (Default setting)** **Enabled : Enables MAC Pass Through function**
Dynamic Lan Switch	Allow switching AMT support from Integrated LAN to Discrete LAN. **Option items : As defined in FIT (Default setting), Integrated LAN, Discrete LAN.**
Activate Remote Assistance Process	Trigger CIRA boot **Disabled : Disables TPM feature (Default setting)** **Enabled : Enables TPM feature**
Unconfigure ME	To Un-configure ME without password. **Disabled : Disables Unconfigure ME (Default settings)** **Enabled : Enables Unconfigure ME**

ASF Congifuration

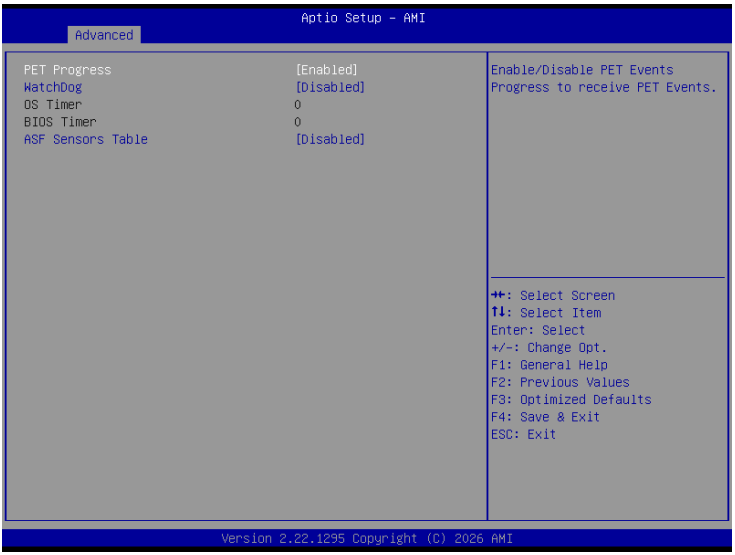

Item	Description
PET Progress	Choose to receive PET events or not **Disabled : Disables PET Progress** **Enabled : Enables PET Progress (Default setting)**
WatchDog	Choose to enables watchdog timer or not **Disabled : Disables watchdog Timer (Default setting)** **Enabled : Enables watchdog Timer**
OS Timer	Sets OS Watchdog Timer.
BIOS Timer	Sets BIOS Timer.
ASF Sensors Table	**Disabled : Disables ASF Sensors Table (Default setting)** **Enabled : Enables ASF Sensors Table**


One Click Recovery (OCR) Configuration

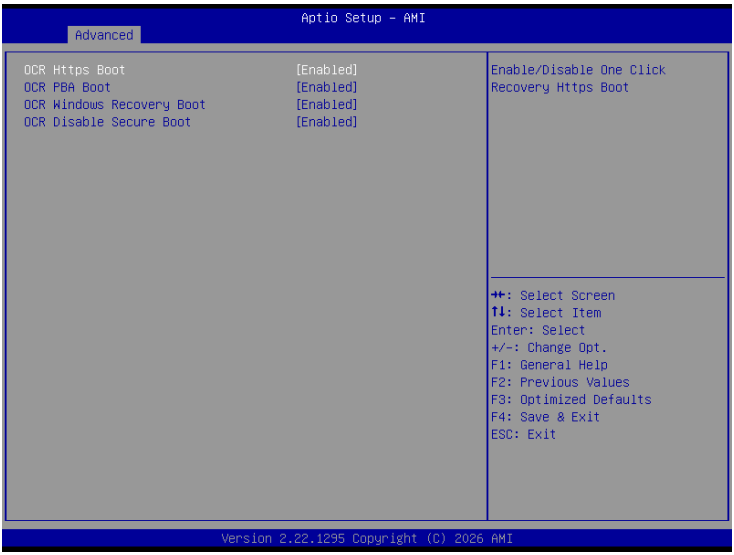

Item	Description
OCR Https Boot	**Enabled : Enables One Click Recovery Https Boot. (Default setting)** **Disabled : Disables One Click Recovery Https Boot.**
OCR PBA Boot	**Enabled : Enables One Click Recovery PBA Boot. (Default setting)** **Disabled : Disables One Click Recovery PBA Boot.**
OCR Windows Recovery Boot	**Enabled : Enables One Click Recovery Windows recovery boot. (Default setting)** **Disabled : Disables One Click Recovery Windows recovery boot.**
OCR Disable Secure Boot	Allows CSME to request Secureboot to be disabled for One Click Recovery. **Enabled : Enables One Click Recovery disable Secure Boot function. (Default setting)** **Disabled : Disables One Click Recovery disable Secure Boot function.**


3.3.3 TPM Configuration

Use TPM Configuration submenu to choose TPM interface.

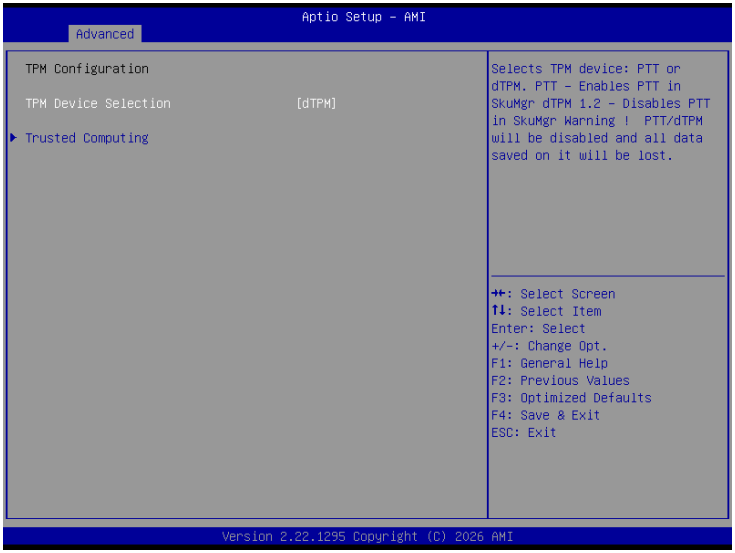

Item	Description
TPM Device Selection	**PTT : Internal TPM** **dTPM : External TPM (When using External TPM module or having TPM chip on MB) (Default setting)**


Trusted Computing : Shows TPM information, and TPM module configuration setting.

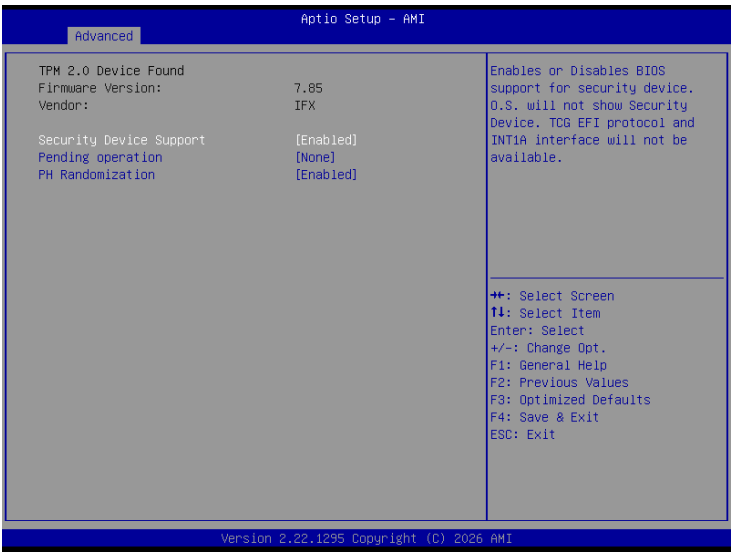

Item	Description
Security Device Support	**Enabled : Enables TPM feature (Default setting)** **Disabled : Disables TPM feature**
Pending operation	**None : No execution will be conducted (Default setting)** **TPM clear : Set to clear data on TPM**
PH Randomization	**Enabled : Enables Platform Hiearchy (PH) Randomization. (Default setting)** **Disabled : Disables Platform Hiearchy (PH) Randomization.**


3.3.4 CPU Configuration

This submenu shows detailed CPU informations.

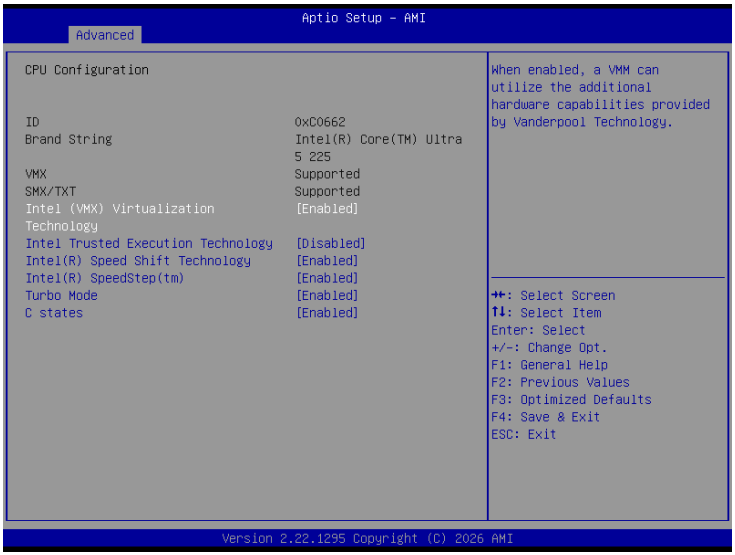


Item	Description
Intel (VMX) Virtualization Technology	Virtualization enhanced by Intel® Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple virtual systems. **Enabled : Enables Intel Virtualization Technology (Default setting)** **Disabled : Disables Intel Virtualization Technology**
Intel Trusted Execution Technology	**Disabled : Disables Intel Trusted Execution Technology (Intel® TXT) (Default setting)** **Enabled : Enables Intel Trusted Execution Technology (Intel® TXT)**
Intel(R) Speed Shift Technology	To speed up CPU frequency transition time from basic frequency to maximum frequency. **Enabled : Enables Intel(R) Speed Shift Technology Interrupt control (Default setting)** **Disabled : Disables Intel(R) Speed Shift Technology Interrupt control**
Intel(R) SpeedStep(tm)	According to Intel CPU loading, Intel SpeedStep Technology will automatically adjust the CPU voltage and core frequency to decrease heat and power consumption for power saving. **Enabled : Enables Intel SpeedStep Technology (Default setting)** **Disabled : Disables Intel SpeedStep Technology**
Turbo Mode	**Enabled : Enables Turbo Mode (Default setting)** **Disabled : Disables Turbo Mode**
C states	Command CPU to enter into low power consumption mode when CPU is under idle mode. **Enabled : Enables CPU C states function (Default setting)** **Disabled : Disables CPU C states function**

3.3.5 IT8786 Super IO Configuration

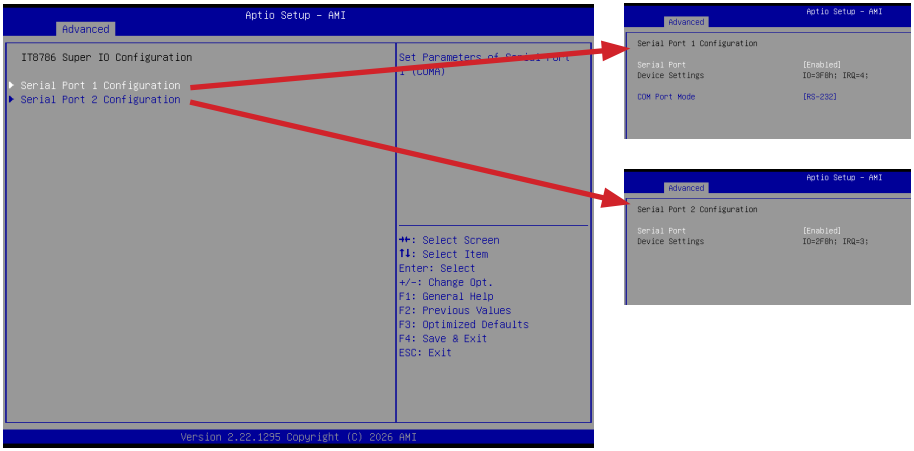

Item	Description
Serial Port 1 Configuration	Press [Enter] to configure advanced items : Serial Port : **Enabled : Enables allows you to configure the serial port settings** **Disabled : if Disabled, displays no configuration for the serial port** Device settings : Display the specified Serial Port base I/O address and IRQ COM Port Mode : Choose RS-232, RS-422, or RS-485 feature
Serial Port 2 Configuration	Press [Enter] to configure advanced items : Serial Port : **Enabled : Enables allows you to configure the serial port settings** **Disabled : if Disabled, displays no configuration for the serial port** Device settings : Display the specified Serial Port base I/O address and IRQ

3.3.6 Hardware Monitor

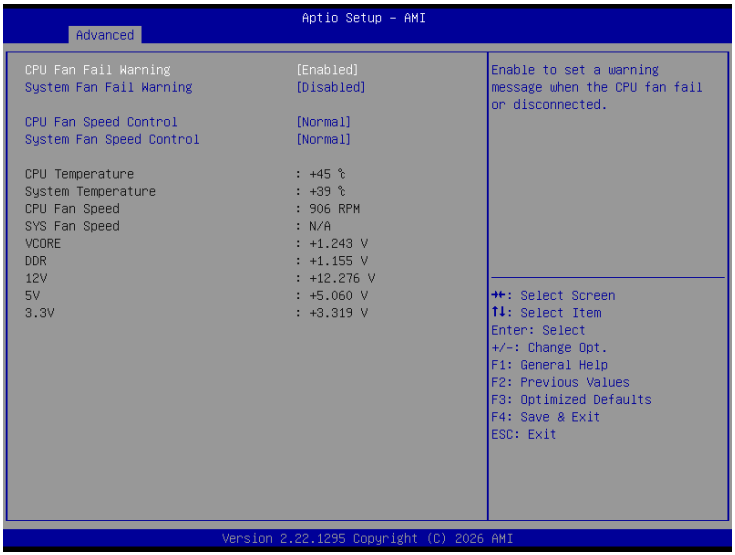


Item	Description
CPU Fan Fail Warning	**Enabled : Enables CPU FAN Fail warning alert function (Default setting)** **Disabled : Disables CPU FAN Fail warning alert function**
System Fan Fail Warning	**Enabled : Enables System FAN Fail warning alert function** **Disabled : Disables System FAN Fail warning alert function (Default setting)**
CPU Fan Speed Control	**Normal : Fan speed set by BIOS default (Default setting)** **Full Speed : Set Fan operates at full speed**
System Fan Speed Control	**Normal : Fan speed set by BIOS default (Default setting)** **Full Speed : Set Fan operates at full speed**
CPU Temperature	Shows current CPU temperature
System Temperature	Shows current system temperature
CPU Fan Speed	Shows current CPU fan Speed
SYS Fan Speed	Shows current System fan Speed

3.3.7 S5 RTC Wake Settings




Item	Description
Wake system from S5	Enable or Disable System to wake on a specific time. **Disabled : Disables system to wake on a specific time (Default setting)** **Fixed Time : Enables system to wake on a specific time (Format : hr : min : sec)**

3.3.8 Network Stack Configuration

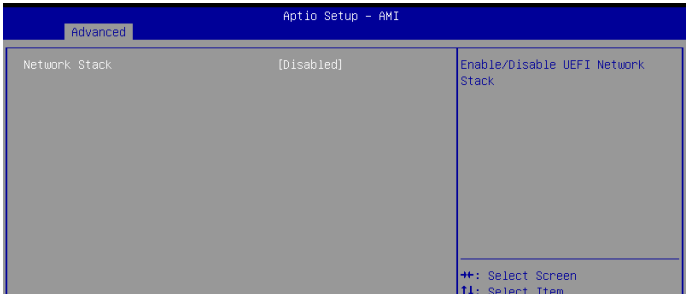


When Network stack is enabled :

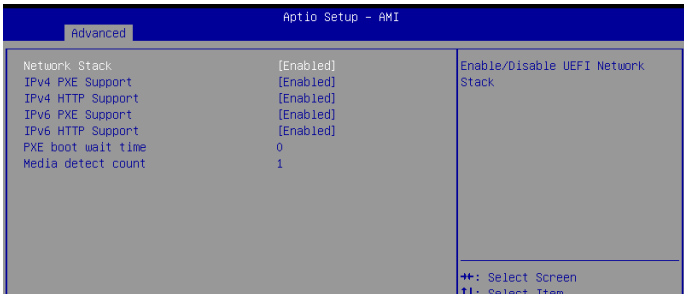


Item	Description
Network Stack	When system is power on, install LAN driver under UEFI mode **Disabled : Disables UEFI Network Stack (Default setting)** **Enabled : Enables UEFI Network Stack**
IPv4 PXE Support	When Network stack is enabled : **Disabled : Disables IPv4 PXE Support** **Enabled : Enables IPv4 PXE Support**
IPv4 HTTP Support	When Network stack is enabled : **Disabled : Disables IPv4 HTTP Support** **Enabled : Enables IPv4 HTTP Support**
IPv6 PXE Support	When Network stack is enabled : **Disabled : Disables IPv6 PXE Support** **Enabled : Enables IPv6 PXE Support**
IPv6 HTTP Support	When Network stack is enabled : **Disabled : Disables IPv6 HTTP Support** **Enabled : Enables IPv6 HTTP Support**
PXE boot wait time	Wait time in seconds, or use ESC key to abort the PXE boot.
Media detect count	Number of times the presence of media will be checked.

3.3.9 NVMe Configuration

NVMe Configuration shows information when your M.2 NVMe PCIe SSD is installed.

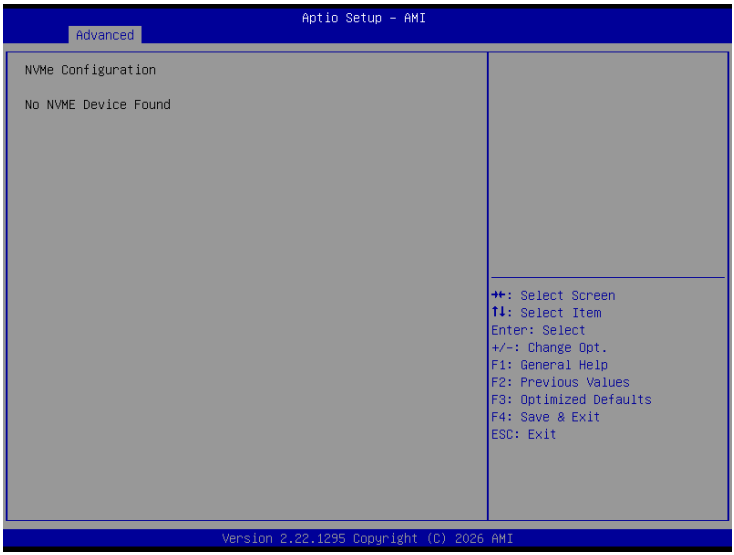


3.3.10 Digital IO Port Configuration

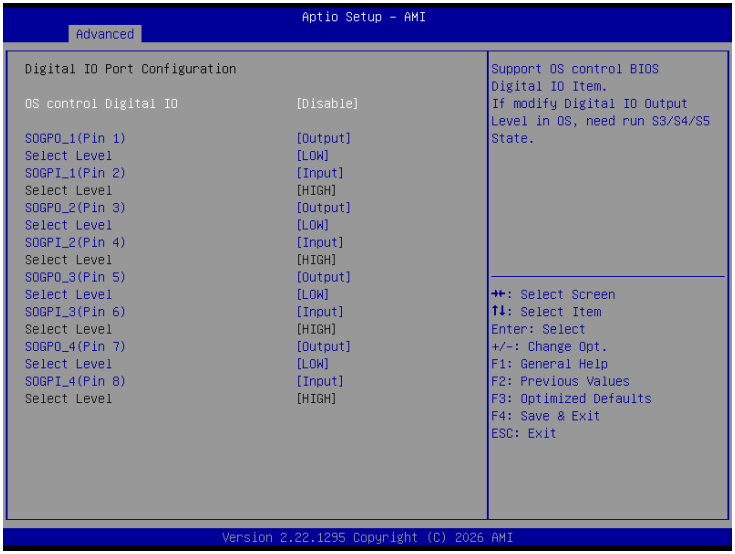

Item	Description
OS control Digital IO	**Disabled : If Digital IO Output value/level is modified in OS, they will not be memorized and kept. (Default setting)** **Enabled : If Digital IO Output value/level is modified in OS, they will be memorized and kept.**
SOGPO_1 (Pin 1) **SOGPI_1 (Pin 2)** **SOGPO_2 (Pin 3)** **SOGPI_2 (Pin 4)** **SOGPO_3 (Pin 5)** **SOGPI_3 (Pin 6)** **SOGPO_4 (Pin 7)** **SOGPI_4 (Pin 8)**	Configure Digital IO Input or Output values for each pin.


3.3.11 Intel(R) Ethernet Controller I226-LM - 30:56:0F:DD:3F:DE (MAC address may varied based on different motherboard)

Shows Intel Ethernet controller information

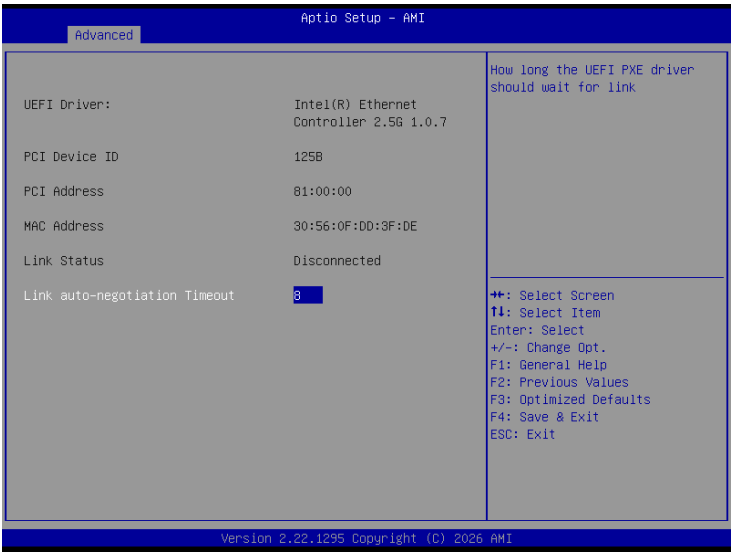


3.3.12 Intel(R) Ethernet Controller I226-V - 30:56:0F:DD:3F:DF (MAC address may varied based on different motherboard)

Shows Intel Ethernet controller information

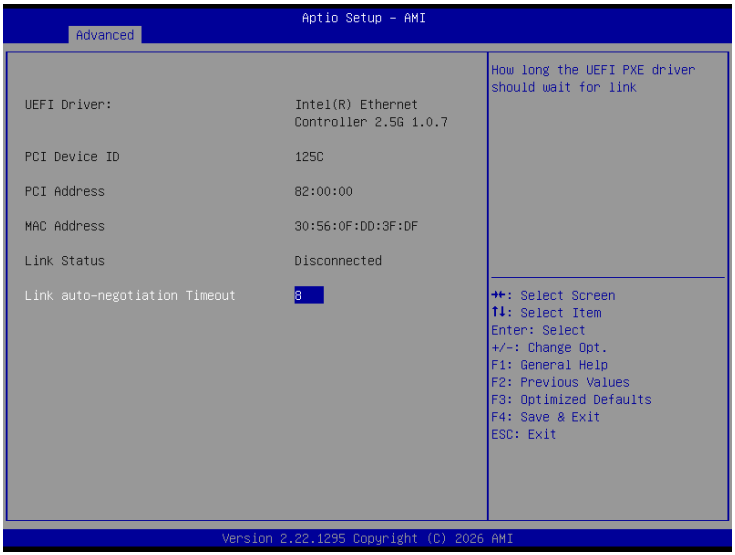

3.4 Chipset

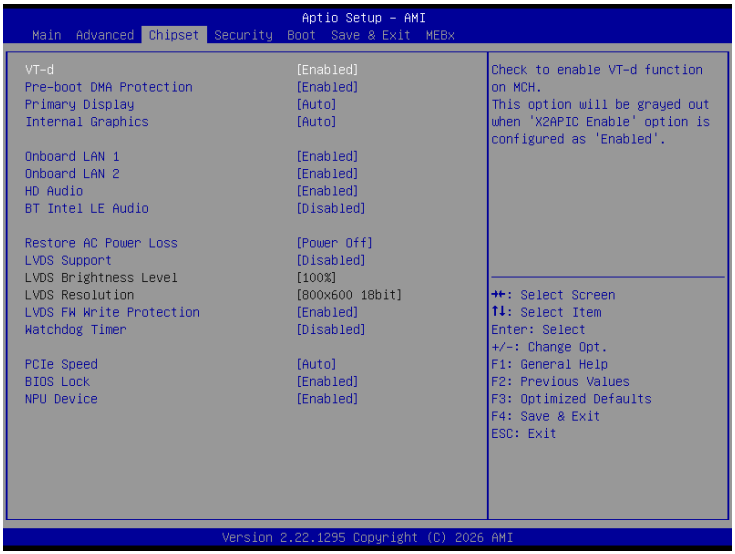


Item	Description
VT-d	**Enabled : Enables VT-d function (Default setting)** **Disabled : Disables VT-d function**
Pre-boot DMA Protection	Protects the system memory (RAM) from unauthorized access prior to the operating system boot process. **Enabled : Enables Pre-boot DMA Protection (Default setting)** **Disabled : Disables Pre-boot DMA Protection**
Primary Display	**Auto : When detects PCIe Graphic card, primary display will set to PCIe (Default setting)** **IGFX : Force IGFX Graphic card as the primary display device** **PEG : Force PEG Graphic card as the primary display device**
Internal Graphics	Enables or disables the onboard graphics function **Auto : Detects display device automatically (Default setting)** **Enabled : Enables onboard graphics** **Disabled : Disables onboard graphics**
Onboard LAN1 **Onboard LAN2**	Enable/Disable onboard LAN controller **Enabled : Enables onboard LAN controller (Default setting)** **Disabled : Disables onboard LAN controller**

HD Audio	Enable/Disable onboard audio controller **Enabled : Enables onboard audio controller (Default setting)** **Disabled : Disables onboard audio controller**
BT Intel LE Audio	Enable/Disable BT Intel LE Audio function **Enabled : Enables BT Intel LE Audio function** **Disabled : Disabled BT Intel LE Audio function (Default setting)** (※Bluetooth LE Audio is not supported on Windows 10 and Windows 11, version 21H2.)
Restore AC Power Loss	To set which option the system should returns if a sudden power loss occured **Power off : Do not power on when the power is back (Default setting)** **Power on : System power on when the power is back** **Last state : Restore the system to the state before power loss occures**
LVDS Support	**Disabled : Disables LVDS Support (Default setting)** **Enabled : Enables LVDS Support**
LVDS Brightness Level	When LVDS Support is enabled : To modified the backlight brightness of the LVDS panel **Option items : 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100% (Default Setting)**
LVDS Resolution	When LVDS Support is enabled : To modified the LVDS resolution **Option items : 800x600 18bit (Default Setting) , 1024x768 18bit, 1024x768 24bit, 1024x600 18bit, 1280x800 18bit, 1280x960 18bit, 1280x1024 24bit, 1366x768 18bit, 1366x768 24bit, 1440x900 24bit, 1400x1050 24bit, 1600x900 24bit, 1680x1050 24bit, 1600x1200 24bit, 1920x1080 24bit, 1920x1200 24bit**
LVDS FW Write Protection	Prevent accidental firmware overwrite or removal. **Disabled : Disables LVDS FW Write Protection** **Enabled : Enables LVDS FW Write Protection (Default setting)**
Watchdog Timer	Enable/Disable Watchdog Timer function **Disabled : Disables Watchdog Timer function (Default setting)** **Enabled : Enables Watchdog Timer function**
PCIe Speed	Configure PCIe Speed **Option items : Gen1 , Gen2, Gen3, Auto (Default setting)**
BIOS Lock	Enable/Disable BIOS Lock function **Enabled : Enables BIOS Lock function (Default setting)** **Disabled : Disabled BIOS Lock funtion**
NPU Device	Enable/Disable NPU Device function **Enabled : Enables NPU Device function (Default setting)** **Disabled : Disabled NPU Device funtion** ※Suggest to disable this function when using Windows 10


3.5 Security



Item	Description
Administrator Password	To set up Administrator's password **Minimum length : 3** **Maximum length : 20**
User Password	To set up User's password **Minimum length : 3** **Maximum length : 20**
Secure Boot	Press <Enter> to configure the advanced items

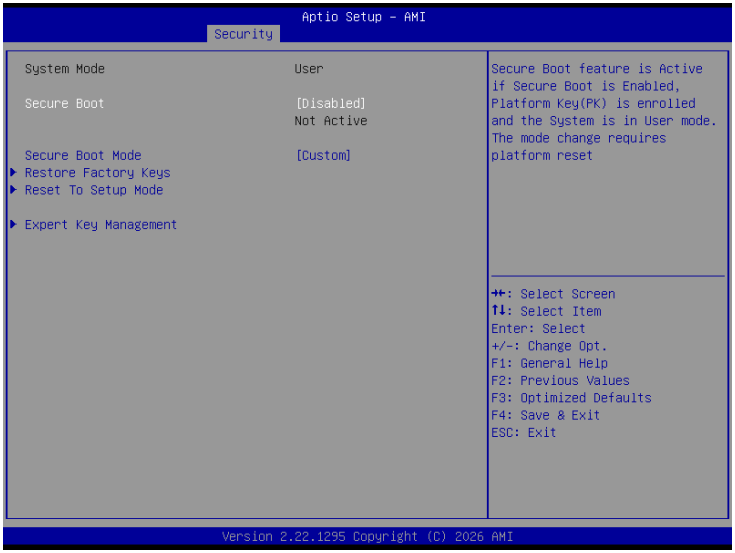

Item	Description
Secure Boot	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates **Enabled : Enables Secure Boot function** **Disabled : Disables Secure Boot function (Default setting)**
Secure Boot Mode	**Standard : Standard mode** **Custom : Custom mode (Default setting)**
Restore Factory Keys	To restore factory settings **Yes : Agree to restore factory settings** **No : Cancel to restore factory settings**
Reset To Setup Mode	**Yes : Agree to setup mode** **No : Cancel to setup mode**
Expert Key Management	Enables expert users to modify Secure boot policy variables without full authentication Press <Enter> to configure the advanced items

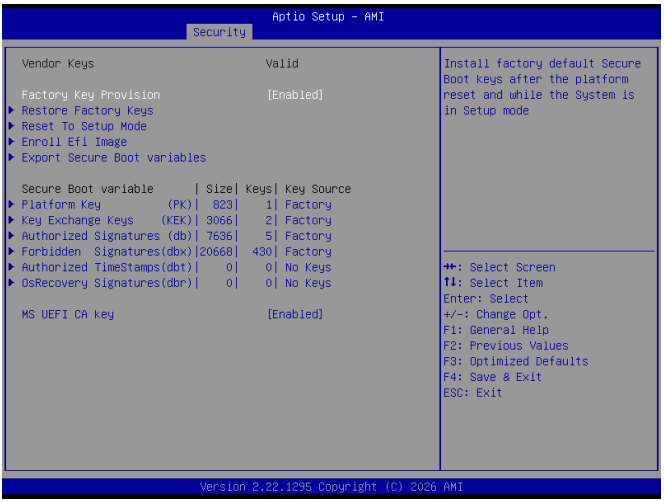


Item	Description
Factory Key Provision	Install factory default Secure Boot keys after the platform reset and while the system is in Setup mode **Enabled : Enables Factory Key Provision (Default setting)** **Disabled : Disables Factory Key Provision**
Restore Factory Keys	To restore factory settings **Yes : Agree to restore factory settings** **No : Cancel to restore factory settings**
Reset To Setup Mode	**Yes : Agree to setup mode** **No : Cancel to setup mode**
Enroll Efi Image	Allow the image to run in Secure Boot mode
Export Secure Boot variables	Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device

Item	Description
Platform Key (PK)	These items allows you to enroll factory defaults or load Certificates from a file.
Key Exchange Keys (KEK)	
Authorized Signatures (db)	
Forbidden Signatures (dbx)	
Authorized TimeStamps (dbt)	
OsRecovery Signatures (dbr)	
MS UEFI CA Key	Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature database(db)


3.6 Boot

This Boot menu allows you to set/change system boot options

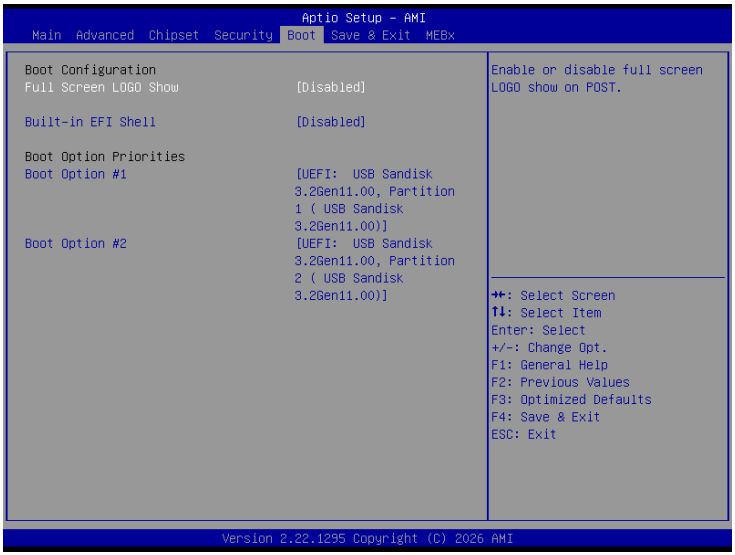

Item	Description
Full Screen LOGO Show	Enable/Disable full screen LOGO show on POST screen **Enabled : Enables Full screen LOGO Show on POST screen** **Disabled : Disables Full screen LOGO Show on POST screen (Default setting)**
Built-in EFI Shell	Enable/Disable Built-in EFI Shell **Enabled : Enables Built-in EFI Shell** **Disabled : Disables Built-in EFI Shell (Default setting)**
Boot Option #1 **Boot Option #2**	Shows the information of the storage that be installed in the system **Choose/set the boot priority**

3.7 Save & Exit

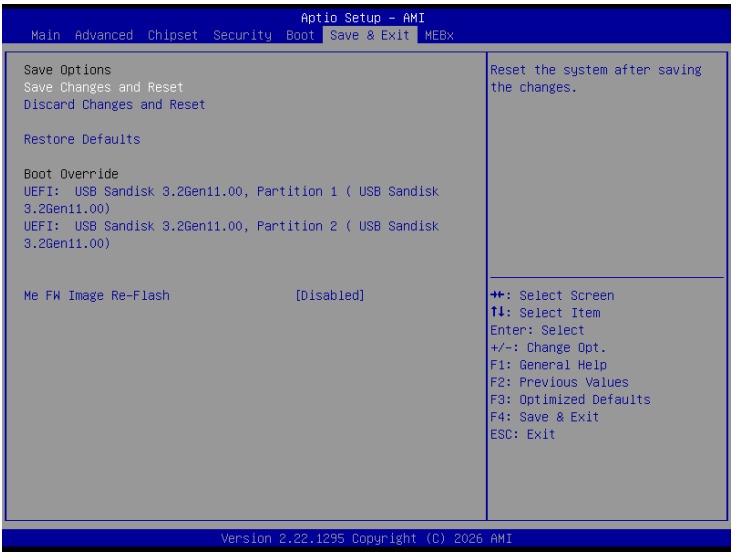

Item	Description
Save Changes and Reset	After configuring all the options that you wish to change, choose this option to save all the changes and reboot the system **Yes : Agree to save and reset** **No : Cancel to save and reset**
Discard Changes and Reset	Choose this option to reboot the system without saving any changes **Yes : Agree to discard changes and reset** **No : Cancel to discard changes and reset**
Restore Defaults	Restore/Load default values for all the setup options **Yes : Agree to load optimized defaults** **No : Cancel to load optimized defaults**
Me FW Image Re-Flash	Enable/Disable Me FW image re-flash function **Enabled : Enables Me FW image re-flash function** **Disabled : Disables Me FW image re-flash function (Default setting)**

3.8 MEBx



Item	Description
Intel(R) ME Password	For MEBx Login