

QBiX-Lite-AMDA2314H-A1 (QL-2314A-SI)

QBiX-Lite Industrial Embedded System
Quick Start Guide

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, GIGAIPC assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

GIGAIPC reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- AMD is trademark of Advanced Micro Devices.
- Microsoft Windows is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

| Item | Quantity |
|--|----------|
| Power Cord (Optional, by region) | 1 |
| PSU ADP 19V 65W 100-240VAC (25EP0-1065W1-A3S) | 1 |
| Bracket Wall Mount (25HBA-160520-S9R) | 2 |
| Wall Mount Screw M3.0*L6.0 (25KS9-130600-S0R) | 4 |
| HDD Screw #2-M3x4L (25KS2-13004G-S0R) | 4 |
| SATA Cable (25CF4-160000-S9R) | 1 |
| Thermal pad for M.2 WiFi module (25ST3-223220-Z0R) | 1 |
| Thermal pad for Memory (25ST3-200086-T5R) | 1 |
| Exsiccator (10g) | 1 |

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the GIGAIPC.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.

13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**
19. This product should be connected by means of a power cord to a socket-outlet with earthing connection.
20. Before you open chassis to exchange an internal component, you need to power off the device and let the device cool down at least 10 minutes.

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

Table Contents

| | |
|---|-----------|
| QBiX-Lite Industrial Embedded System | 1 |
| Quick Start Guide | |
| Copyright Notice | 2 |
| Acknowledgement | 3 |
| Packing List..... | 4 |
| About this Document..... | 5 |
| Safety Precautions | 6 |
| FCC Statement..... | 8 |
| | |
| Chapter 1 - Product Specifications | 13 |
| 1.1 Specifications | 15 |
| | |
| Chapter 2 – QBiX-Lite-AMDA2314H-A1 (QL-2314A-SI) | 17 |
| Industrial Embedded System Kit | |
| 2.1 Dimension | 18 |
| 2.2 Getting Familiar with Your Unit..... | 19 |
| 2.3 A) Memory Installation: DDR4 SO-DIMM | 21 |
| 2.4 B) Mini PCIe Card Installation: How to safely install the Mini PCIe Card | 22 |
| 2.5 C) Wireless Module: How to safely install the Module (Wireless Module inclusion may vary based on local distribution) | 23 |
| 2.6 D) M.2 SSD Installation: How to safely install the M.2 2280 SSD | 24 |

| | | |
|------|---|----|
| 2.7 | E) 2.5" HDD/SSD installation: How to install 2.5" HDD/SSD | 25 |
| 2.8 | Antenna Installation (Antenna inclusion may vary based on local distribution) | 26 |
| 2.9 | Wall mount Bracket Installation..... | 27 |
| 2.10 | VESA mount Bracket Installation | 28 |
| 2.11 | DB9 COM Pin Define | 29 |
| 2.12 | Support | 30 |
| 2.13 | Safety and Regulatory Information..... | 31 |

Chapter 3 – Hardware Information 32

| | | |
|--------|---|----|
| 3.1 | Jumpers and Connectors | 33 |
| 3.2.1 | HDMI2_1, HDMI4_3 (HDMI Connector) | 36 |
| 3.2.2 | LAN1, LAN2 (LAN Connector) | 37 |
| 3.2.3 | USB32_1 (USB 3.2 Gen 2x1 Connector) | 38 |
| 3.2.4 | BKL_CN (Backlight Control header) | 39 |
| 3.2.5 | SPKR (Speaker out connector) | 40 |
| 3.2.6 | F_AUDIO (Front panel audio header) | 41 |
| 3.2.7 | SODIMM1, SODIMM2 (DDR4 SO-DIMM slot)..... | 42 |
| 3.2.8 | SATAPW (SATA power connector)..... | 43 |
| 3.2.9 | SATA (SATA 6Gb/s connector) | 44 |
| 3.2.10 | F_USB2_2 (USB 2.0 header) | 45 |
| 3.2.11 | F_USB2_1 (USB 2.0 header) | 46 |
| 3.2.12 | GPIO_CNT (General purpose input/output header)... | 47 |

| | | |
|--------|---|----|
| 3.2.13 | SYS_PANEL (Front panel header) | 48 |
| 3.2.14 | M2M (M.2 Slot, 2280 M-key)..... | 49 |
| 3.2.15 | AT_CN (AT/ATX mode select jumper)..... | 50 |
| 3.2.16 | COM1, COM2, COM3, COM4 (Serial port header) | 51 |
| 3.2.17 | MPCIE (Mini PCIE slot)..... | 52 |
| 3.2.18 | DC IN (DC IN 1 x 4pin power connector) | 53 |
| 3.2.18 | M2E (M.2 Slot, 2230 E-key)..... | 54 |
| 3.2.19 | JCOM1 (RI pin RI/5V/12V Select jumper for COM1 port) .. | 55 |
| 3.2.20 | Battery (Battery Connector) | 56 |
| 3.2.21 | CPU_FAN (CPU FAN connector) | 57 |
| 3.2.22 | SYS_FAN (System FAN connector) | 58 |
| 3.2.23 | EDP (Embedded Display port connector) | 59 |






Chapter 4 – BIOS 60

| | | |
|-------|----------------------------------|----|
| 4.1 | Introduction | 61 |
| 4.2 | The Main Menu..... | 62 |
| 4.3 | Advanced | 63 |
| 4.3.1 | TPM Configuration..... | 64 |
| 4.3.2 | Super IO Configuration | 65 |
| 4.3.3 | Hardware Monitor | 66 |
| 4.3.4 | CPU Configuration | 67 |
| 4.3.5 | Network Stack Configuration..... | 68 |
| 4.3.6 | S5 RTC Wake Settings | 69 |
| 4.3.7 | NVMe Configuration..... | 70 |
| 4.3.8 | SATA Configuration | 71 |

| | | |
|--------|---|----|
| 4.3.9 | OffBoard SATA Controller Configuration | 72 |
| 4.3.10 | Realtek PCIe GBE Family Controller (MAC : 10:FF:E0:3D: 69:7A) (MAC address may varied based on different motherboard) | 73 |
| 4.3.11 | Realtek PCIe GBE Family Controller (MAC : 10:FF:E0:3D: 69:7B) (MAC address may varied based on different motherboard) | 74 |
| 4.4 | Chipset | 75 |
| 4.5 | Security | 76 |
| 4.6 | Boot..... | 79 |
| 4.7 | Save & Exit | 80 |

Chapter 1

Chapter 1 - Product Specifications

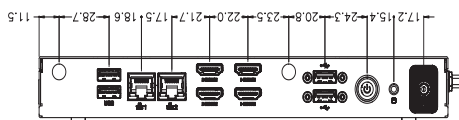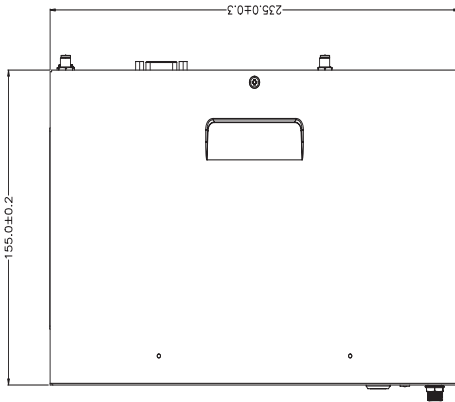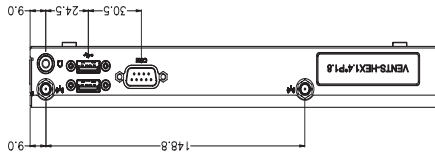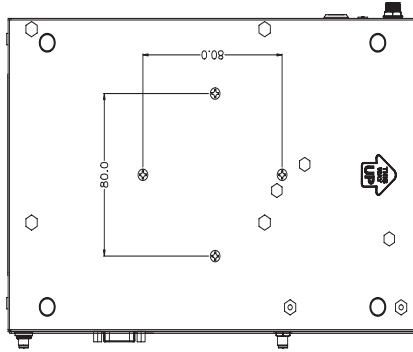

1.1 Specifications


| System | QBiX-Lite-AMDA2314H-A1 (QL-2314A-SI) |
|-----------------|--|
| Dimension | System Size : 234W x 155D x 30H (mm) |
| CPU | AMD Ryzen™ R2314 Embedded Processor 14nm, 4 cores, 4 threads, 2.1 GHz, up to 3.5 GHz |
| Chipset | SoC |
| Memory | 2 x DDR4 SO-DIMM sockets, Max. Capacity 64 GB Support Dual Channel DDR4 2677 MHz memory modules |
| Ethernet | 2 x GbE LAN Ports (Realtek RTL8111H-CG) |
| Graphic support | Integrated Graphics Processor - AMD Radeon™ Graphics: 4 x HDMI 2.0 ports, supporting a maximum resolution of 4096x2160 @60Hz *Support EDID emulation with AMD graphic driver/utility (4 independent display outputs) |
| Audio | Realtek® ALC269 |
| Storage | 1 x 2.5" HDD/SSD (SATA 6Gb/s) |
| Expansion Slots | 1 x 2280 M.2 M-Key (PCIe Gen3x4, SATA 6Gb/s) 1 x 2230 M.2 E-Key (WiFi/BT) 1 x Full-size Mini PCIe with SIM slot (PCIe x1 + USB2.0) |
| Front I/O | 2 x RJ45 LAN Ports 2 x USB 3.2 Gen 2x1 2 x USB 2.0 4 x HDMI 1 x Power button with LED 1 x HDD LED 1 x Screw type DC Jack |
| Rear I/O | 1 x COM Port (RS-232/422/485 & RI/5V/12V) 2 x USB 2.0 1 x Headphone jack 2 x External Antenna Holes (Optional) |
| Side I/O | — |
| TPM | Onboard TPM 2.0 security chip INFINEON SLB9665TT2.0 |
| Power | +9V~36VDC (Adapter 19V/65W) |

| System | QBiX-Lite-AMDA2314H-A1 (QL-2314A-SI) |
|----------------------------|---|
| Operation Temperature | Operating temperature: 0°C to 50°C Operating humidity: 40°C @ 20-95% (non-condensing) Non-operating temperature: -40°C to 85°C Non-operating humidity: 60°C @ 95% (non-condensing) Use wide temperature range memory and storage |
| Vibration During Operation | Operation: IEC 60068-2-64, 1 Grms, random, 5 ~ 500 Hz, 1 hr / Per Axis, with SSD/M.2 2280 Non-operation: IEC 60068-2-6, 2 G, Sine, 10 ~ 500 Hz, 1 Oct/min, 1 hr / Per Axis |
| Shock During Operation | Operation: IEC 60068-2-27, 50 G, half sine, 11 ms duration, With SSD |
| Packaging Content | Carton size: 481 x 300 x 375 (mm) Packing Capacity: 5pcs Single Box size: 336 x 279 x 90 (mm) Including: Bracket for Wall Mount x 2 (P/N: 25HBA-160520-S9R) + Screw x 4 (P/N: 25KS9-130600-S0R) HDD screw M3x4Lx 4 (P/N: 25KS2-13004G-S0R) Thermal pad for M.2 WiFi module x 1 (P/N: 25ST3-223220-Z0R) Thermal pad for Memory x 1 (P/N: 25ST3-200086-T5R) PSU ADP 19V 65W 100-240VAC x 1 (P/N: 25EP0-1065W1-A3S) Power Cord : Optional (by region) SATA Cable x 1 (P/N: 25CF4-160000-S9R) |
| Order Information | System : 6BQL2314AMR-SI |

Chapter 2


Chapter 2 – QBiX-Lite-AMDA2314H-A1 (QL-2314A-SI)
Industrial Embedded System Kit

2.1 Dimension

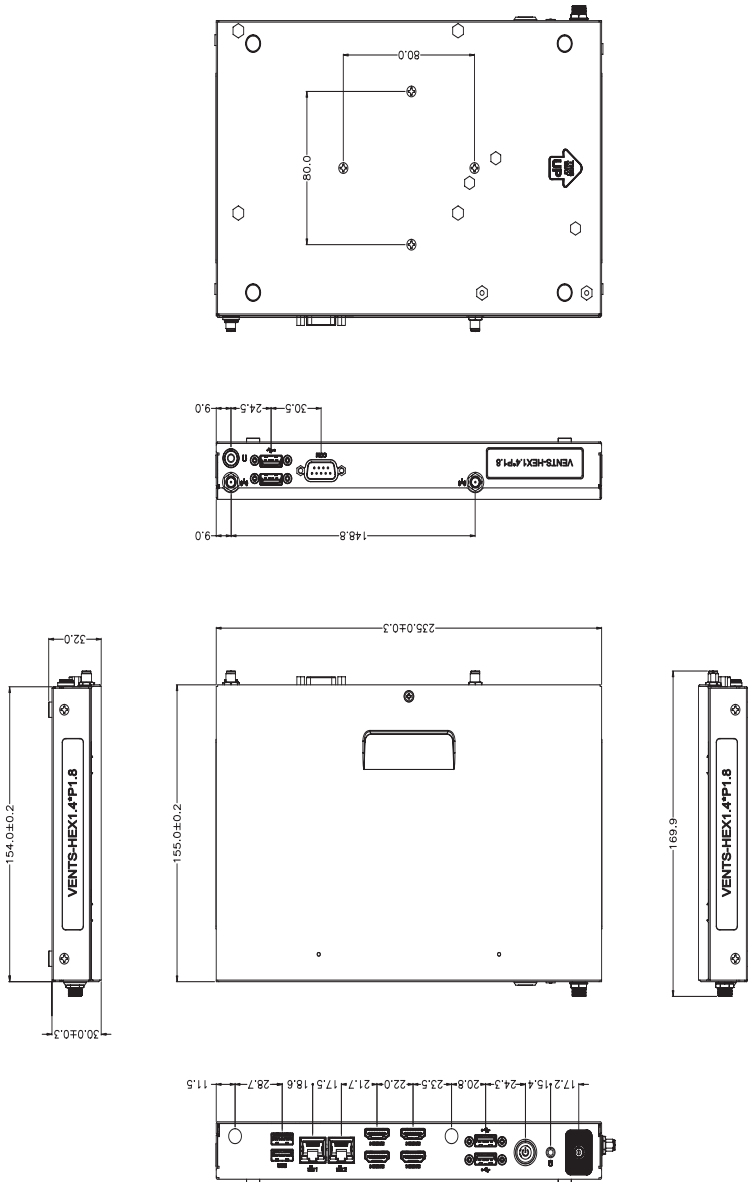

2.2 Getting Familiar with Your Unit


[Front I/O Side]

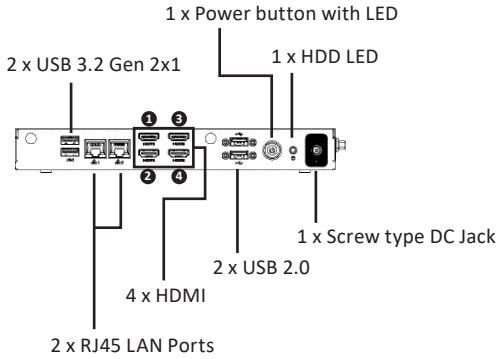

[Left Side]



[Rear I/O Side]

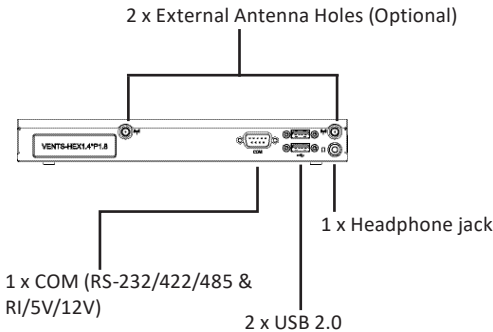

[Right Side]




[Install]

* Before opening the chassis, make sure to unplug the power cord.

* Remove the screw to open the chassis.

* Before Connecting the power, make sure to fasten the chassis securely.


* Secure the chassis with the previously removed screws.

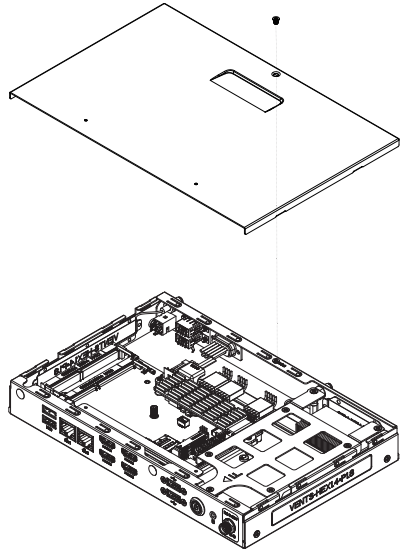

[Bottom PCB Side]

| Information | |
|-------------|----------------------------------|
| A | 2 x DDR4 SO-DIMM sockets |
| B | 1 x Mini PCIe slot with SIM slot |
| C | 1 x M.2 slot 2230 E-key |


| Information | |
|-------------|------------------------------|
| D | 1 x M.2 slot 2280 M-Key |
| E | support 2.5" Hard drive/ SSD |

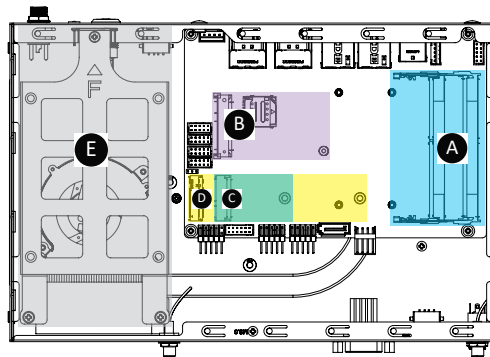


2.3 A) Memory Installation: DDR4 SO-DIMM

1


Carefully insert SO-DIMM memory modules.

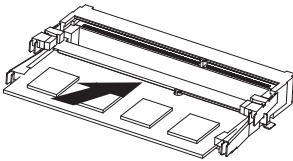**2**


Push down until the modules click into place.

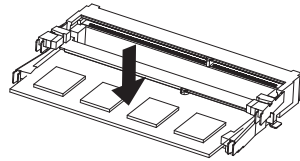**3**

Carefully insert SO-DIMM memory modules.

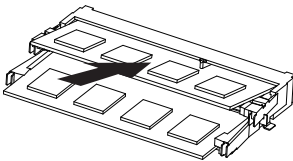**4**


Push down until the modules click into place.

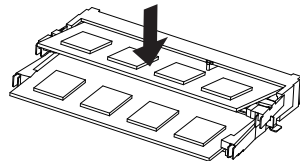

2.4 B) Mini PCIe Card Installation: How to safely install the Mini PCIe Card


1

Remove the screw from the screw hole.
(Location : MSO2)

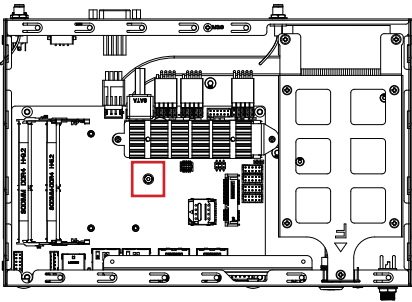


2

Carefully insert the Mini PCIe Card into the slot.

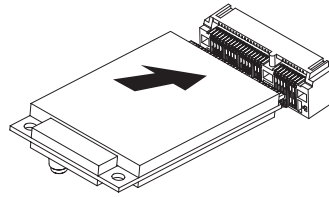

3


The Mini PCIe Card is secured in place with screw in the left corner.

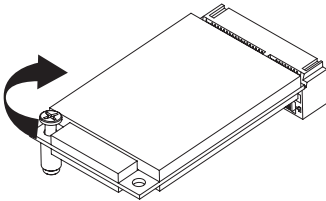

2.5 C) Wireless Module: How to safely install the Module (Wireless Module inclusion may vary based on local distribution)


1

Remove the M.2 Heatsink.

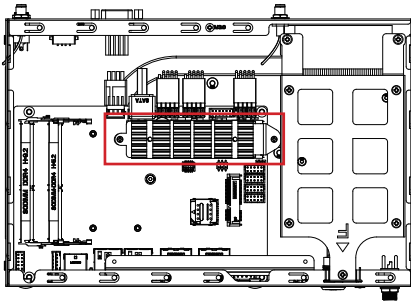


2

Carefully insert the wireless module into the M.2 slot.

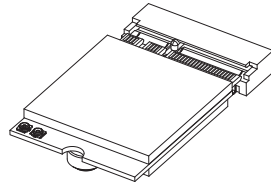


3

Lock the screw in the middle.

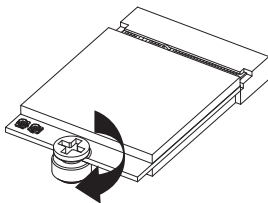

4


Install the antenna on the left side of the connection wireless module down.

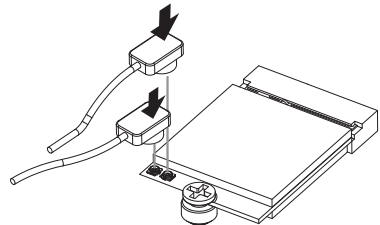

2.6 D) M.2 SSD Installation: How to safely install the M.2 2280 SSD


1

Remove the M.2 Heatsink.

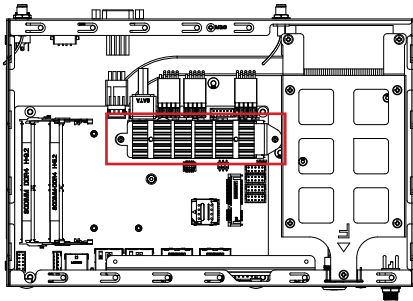

2


Carefully insert the M.2 SSD into the slot, and secure with the screw.

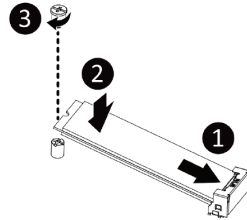


2.7 E) 2.5" HDD/SSD installation: How to install 2.5" HDD/SSD

1

Remove 3 screws from the HDD Tray.

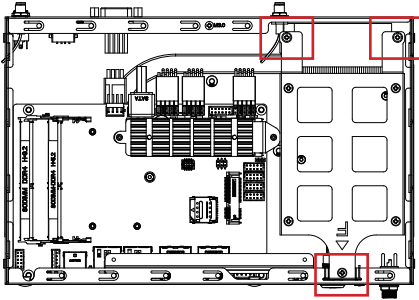**2**


Secure 2.5" HDD/SSD on the HDD Tray with 4 screws.
(The gold finger must face up)

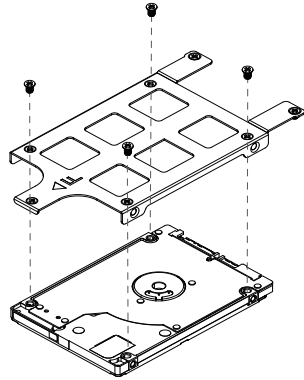

2.8 Antenna Installation (Antenna inclusion may vary based on local distribution)


1

Carefully insert the antennas into the connectors.

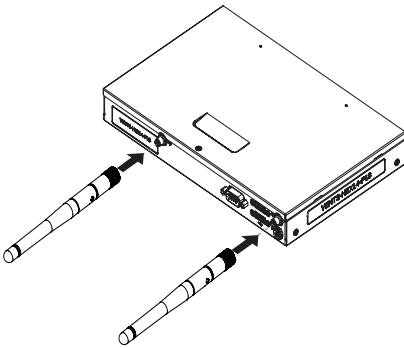


2

Turn the antennas clockwise until they are completely secure on the connectors.

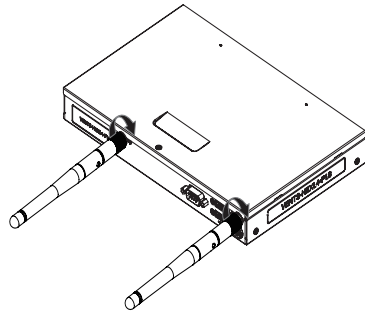

3


Flip up the antenna heads so that they are perpendicular to the machine.

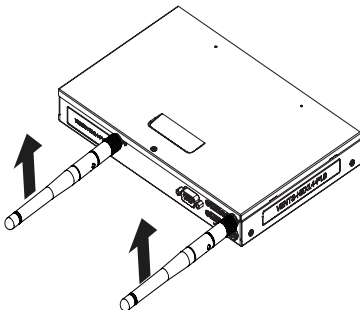

2.9 Wall mount Bracket Installation


1

Remove the screws that are pre-installed on both sides of the chassis.

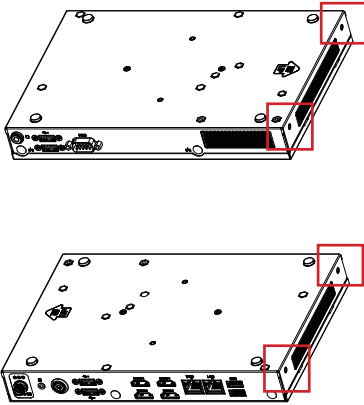


2

Install the wall mount brackets using the screws included in the accessory kit.

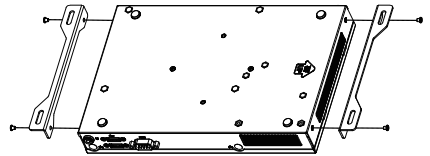

3


Wall mount bracket installation completed.

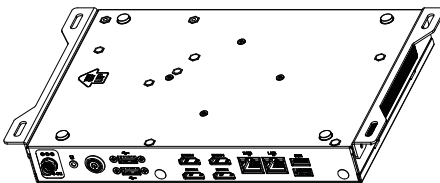


4

Suggest screws as below for different type of surface.


Concrete wall



Electric drill




Wall anchors
ST3.2 x 30mm




Self-tapping screw
ST3.2 x 25mm

Wooden wall



Self-tapping screw
ST3.2 x 25mm

Machine




Machine screw
M3 x 10mm pan head, with
Spring washer + flat washer

2.10 VESA mount Bracket Installation

1

Lock 2 screws on the bottom cover.


Screws type : M3-3L x 2pcs, including in the optional kit.

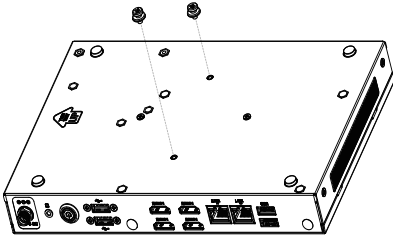

2

Attach the VESA mount to the rear of a compatible display using the screws provided.

VESA hole patterns : 75 x 75mm and 100 x 100mm
Screws type : M4-10L x 4pcs

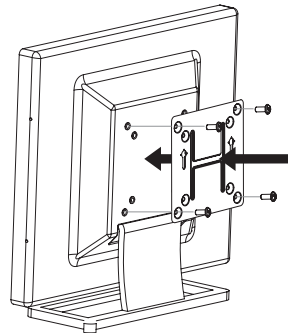


NOTE : The VESA mount brackets are the optional parts.

3


The QBix-Lite can now be mounted by sliding the device into place.

When installing the equipment on the back of the monitor, please keep stability in mind.
(Recommended for monitors that weigh 6kg or less.)

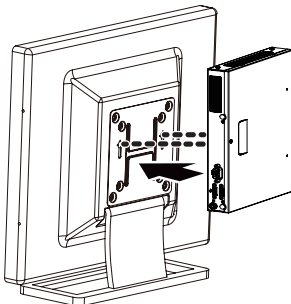

NOTE : The VESA mount brackets are the optional parts.

2.11 DB9 COM Pin Define

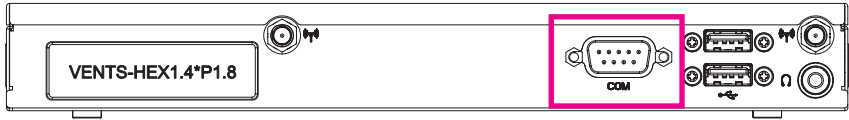

| DB9 COM | |
|------------------|------------|
| | |
| 25CF8-180620-S9R | |
| Pin No. | Pin Define |
| 1 | DCD |
| 2 | RXD |
| 3 | TXD |
| 4 | DTR |
| 5 | GND |
| 6 | DSR |
| 7 | RTS |
| 8 | CTS |
| 9 | RI |

2.12 Support

- For AVL list, go to: <http://www.gigaipc.com>
- To download the latest drivers, go to: <http://www.gigaipc.com>
- For product support, go to: <http://www.gigaipc.com>

2.13 Safety and Regulatory Information

Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible.

Disposal of used Batteries must be in accordance with local environmental regulations.

Failure to use the included Power Adapter may violate regulatory compliance and may expose the user to safety hazards.

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE




At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Chapter 3

Chapter 3 – Hardware Information

3.1 Jumpers and Connectors


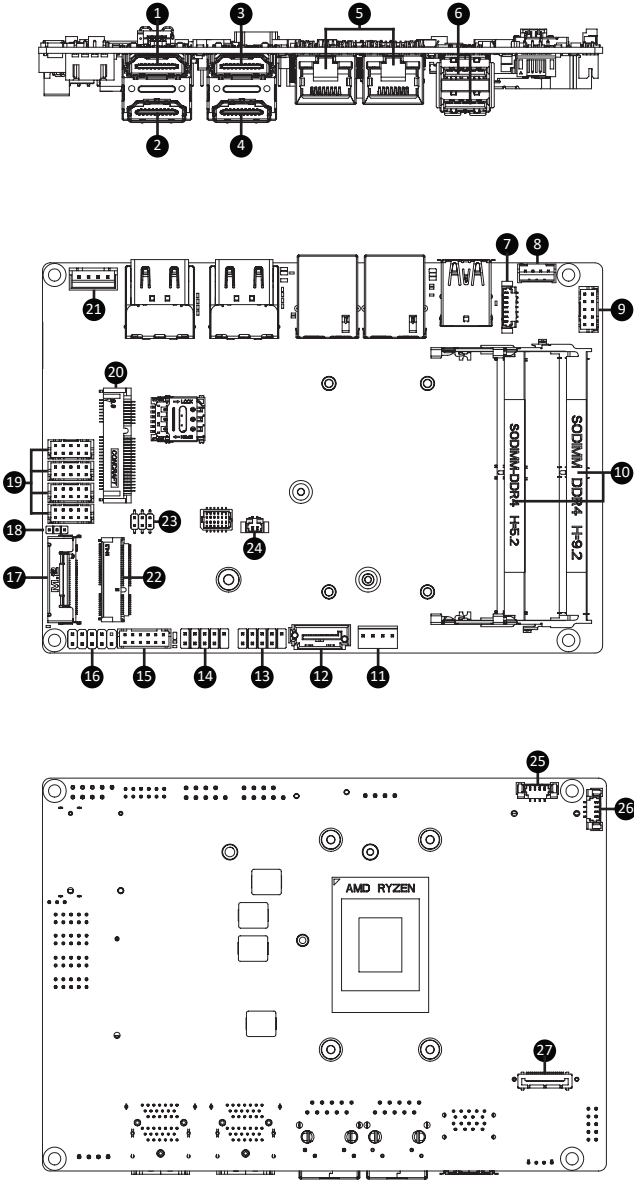


| No | Code | Description |
|----|---------------------------|---|
| 1 | HDMI2_1 | HDMI 2 connector |
| 2 | | HDMI 1 connector |
| 3 | HDMI4_3 | HDMI 4 connector |
| 4 | | HDMI 3 connector |
| 5 | LAN1, LAN2 | LAN connectors |
| 6 | USB32_1 | USB 3.2 Gen 2x1 connector |
| 7 | BKL_CN | Backlight control header |
| 8 | SPKR | Speaker out connector |
| 9 | F_AUDIO | Front Audio connector |
| 10 | SODIMM1 SODIMM2 | DDR4 SO-DIMM Slot |
| 11 | SATAPWR | SATA power connector |
| 12 | SATA | SATA 6Gb/s connector |
| 13 | F_USB2_2 | USB 2.0 header |
| 14 | F_USB2_1 | USB 2.0 header |
| 15 | GPIO_CNT | General Purpose input/output header |
| 16 | SYS_PANEL | Front panel header |
| 17 | M2M | M.2 Slot, 2280 M-key |
| 18 | AT_CN | AT/ATX mode select jumper |
| 19 | COM1, COM2, COM3, COM4 | Serial port header COM1 : RS-232/422/485 & RI/5V/12V COM2 : RS-232/422/485 COM3, COM4 : RS-232 |
| 20 | MPCIE | Mini PCIE slot |

| No | Code | Description |
|----|---------|--|
| 21 | DC_IN | DC IN 1x4 pin power connector |
| 22 | M2E | M.2 Slot, 2230 E-key |
| 23 | JCOM1 | RI pin RI/5V/12V Select jumper for COM1 port |
| 24 | BATTERY | Battery cable connector |
| 25 | CPU_FAN | CPU fan connector |
| 26 | SYS_FAN | System fan connector |
| 27 | EDP | Embedded Display Port Connector |

3.2.1 HDMI2_1, HDMI4_3 (HDMI Connector)

- 1 2 3 4

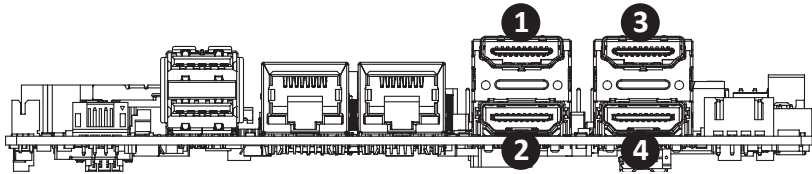
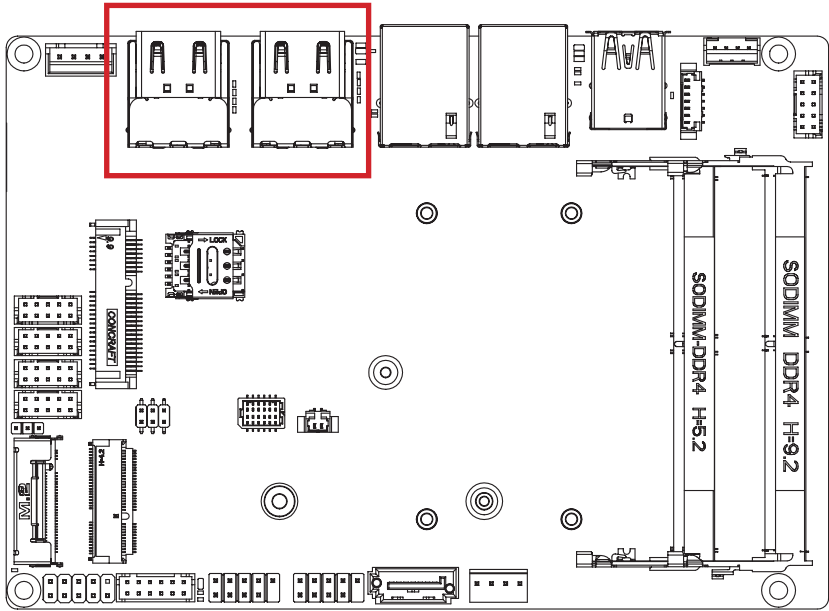


| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1 | TX2p | 20 | TX2p |
| 2 | GND | 21 | GND |
| 3 | TX2n | 22 | TX2n |
| 4 | TX1p | 23 | TX1p |
| 5 | GND | 24 | GND |
| 6 | TX1n | 25 | TX1n |
| 7 | TX0p | 26 | TX0p |
| 8 | GND | 27 | GND |
| 9 | TX0n | 28 | TX0n |
| 10 | CLKp | 29 | CLKp |
| 11 | GND | 30 | GND |


| Pin No. | Definition | Pin No. | Definition |
|---------|-----------------|---------|-----------------|
| 12 | CLKn | 31 | CLKn |
| 13 | NC | 32 | NC |
| 14 | NA | 33 | NA |
| 15 | DDC Clock | 34 | DDC Clock |
| 16 | DDC Data | 35 | DDC Data |
| 17 | GND | 36 | GND |
| 18 | 5V | 37 | 5V |
| 19 | Hot Plug Detect | 38 | Hot Plug Detect |

3.2.2 LAN1, LAN2 (LAN Connector)

5

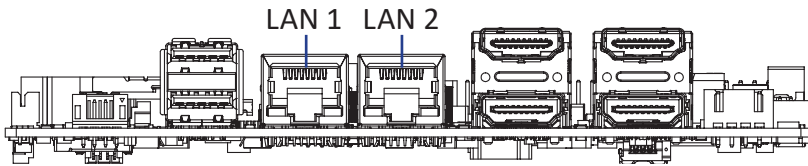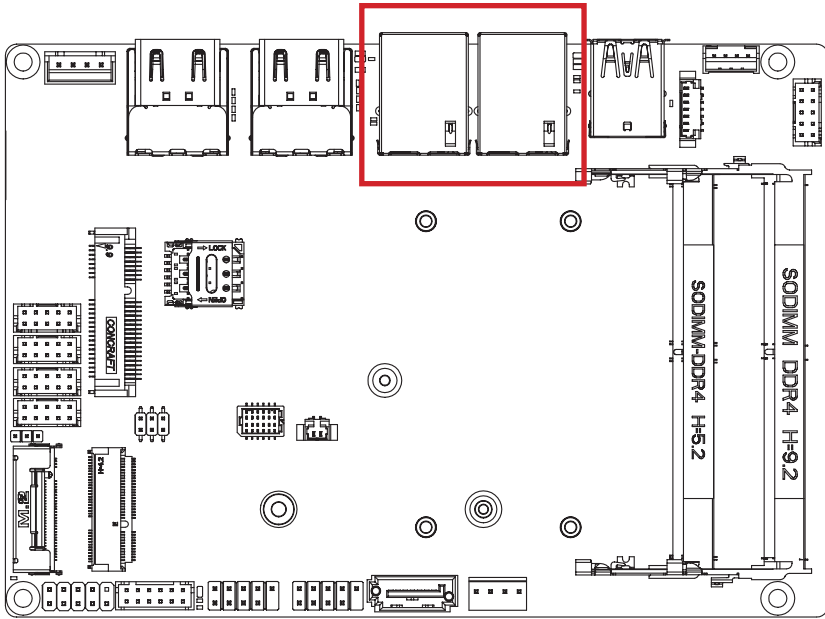

LAN connector




| State | Description |
|-----------|-------------------|
| Orange On | 1Gbps data rate |
| Green On | 100Mbps data rate |
| Off | 10Mbps data rate |


| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1 | TX1+ | 4 | TX3+ |
| 2 | TX1- | 5 | TX3- |
| 3 | TX2+ | 7 | TX4+ |
| 6 | TX2- | 8 | TX4- |

3.2.3 USB32_1 (USB 3.2 Gen 2x1 Connector)

6

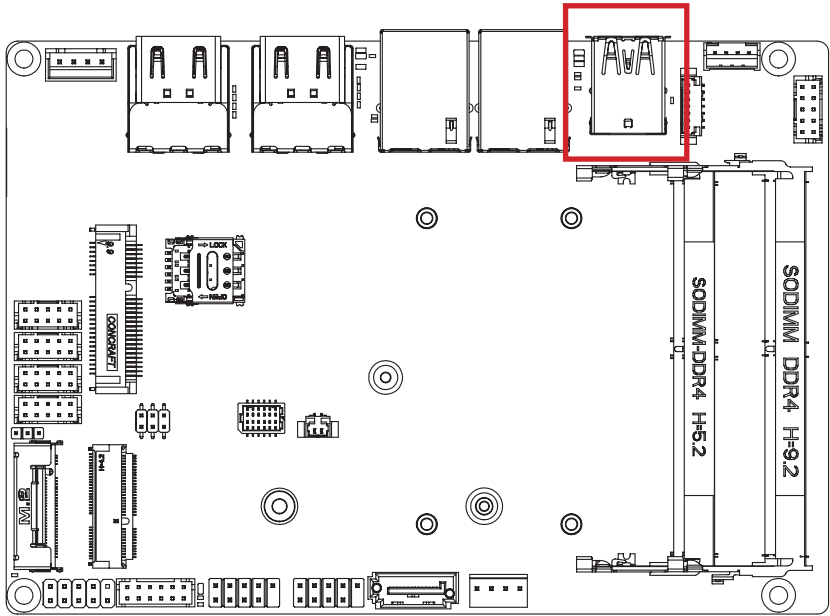



USB 3.2 Gen 2x1 connector



| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1 | 5V | 10 | 5V |
| 2 | D1n | 11 | D0n |
| 3 | D1p | 12 | D0p |
| 4 | GND | 13 | GND |
| 5 | USB3_RX1n | 14 | USB3_RX2n |
| 6 | USB3_RX1p | 15 | USB3_RX2p |
| 7 | GND | 16 | GND |
| 8 | USB3_TX1n | 17 | USB3_TX2n |
| 9 | USB3_TX1p | 18 | USB3_TX2p |

3.2.4 BKL_CN (Backlight Control header)

7

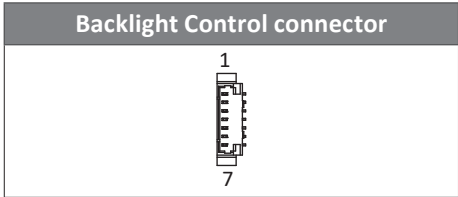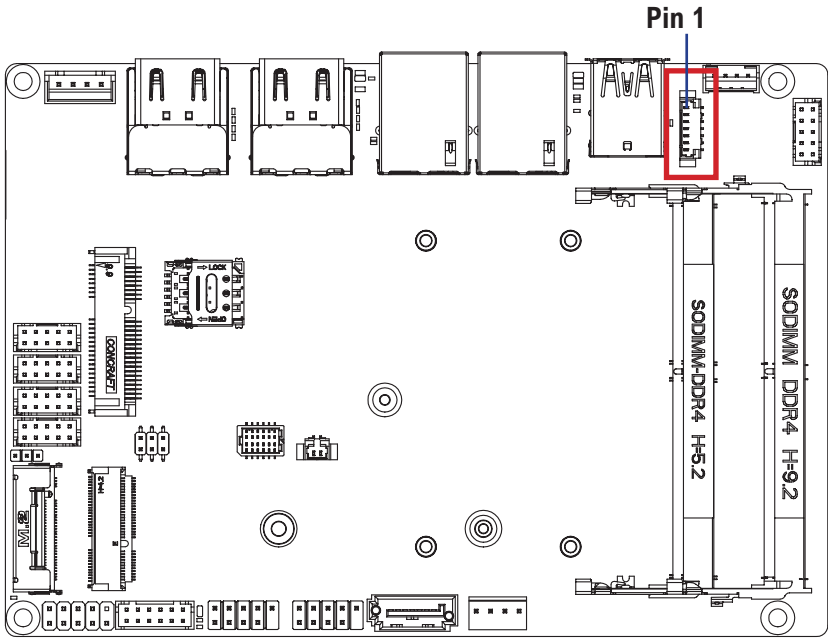


| Connector PN | Vendor |
|-----------------------------|------------|
| 85205-0770N | ACES |
| A1250WV-S-07PC | JOINT-TECH |
| Connector type | |
| 1x7pin header, pitch 1.25mm | |


| Pin No. | Definition |
|---------|------------|
| 1 | NC |
| 2 | NC |
| 3 | VDD |
| 4 | GND |
| 5 | GND |
| 6 | 12V |
| 7 | 12V |

3.2.5 SPKR (Speaker out connector)

8

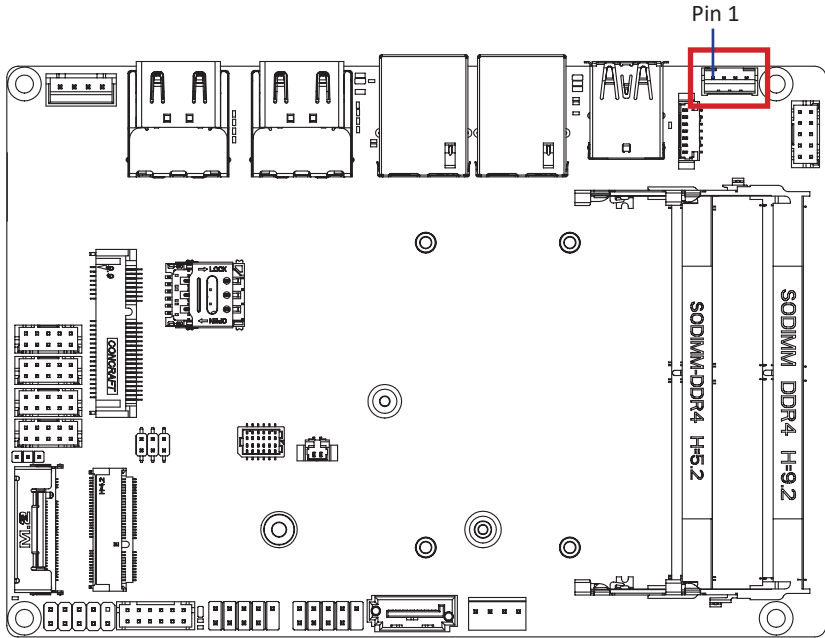

Speaker out connector



Connector PN

A2001WV-04P146

Vendor

JOINT-TECH

Connector type

1x4pin header, pitch 2.0mm


Pin No.

Definition

| | |
|---|----------------|
| 1 | Speaker Out R+ |
| 2 | Speaker Out R- |
| 3 | Speaker Out L- |
| 4 | Speaker Out L+ |

3.2.6 F_AUDIO (Front panel audio header)

9

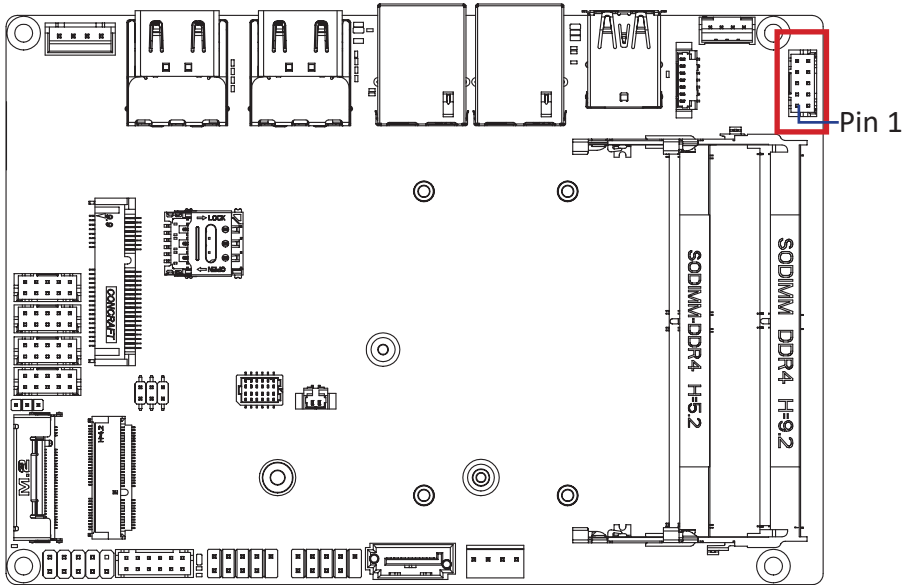


| Front panel audio header | |
|--------------------------|----|
| 9 | 10 |
| 1 | 2 |

| Connector PN | Vendor |
|---------------|--------|
| 725-81-10TW00 | PINREX |

| Connector type |
|----------------------------|
| 2x5pin header, pitch 2.0mm |



| Pin No. | Definition | Pin No. | Definition |
|---------|--------------|---------|------------|
| 1 | MIC-Left | 2 | GND |
| 3 | MIC-Right | 4 | NC |
| 5 | HPOUT_ Right | 6 | MIC_JD |
| 7 | FAUDIO_JD | 8 | NC |
| 9 | HPOUT_Left | 10 | HPOUT_JD |

3.2.7 SODIMM1, SODIMM2 (DDR4 SO-DIMM slot)

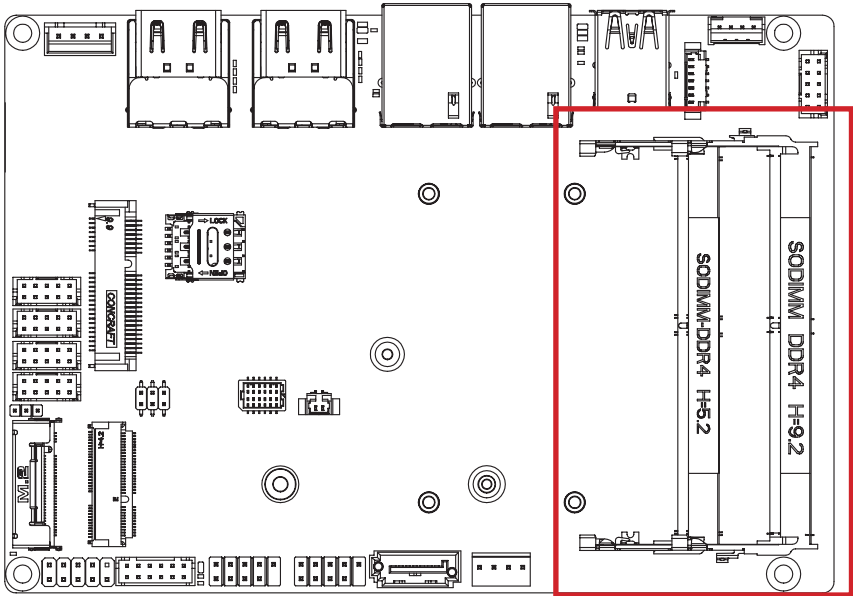10

3.2.8 SATAPW (SATA power connector)

11

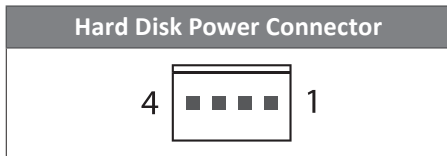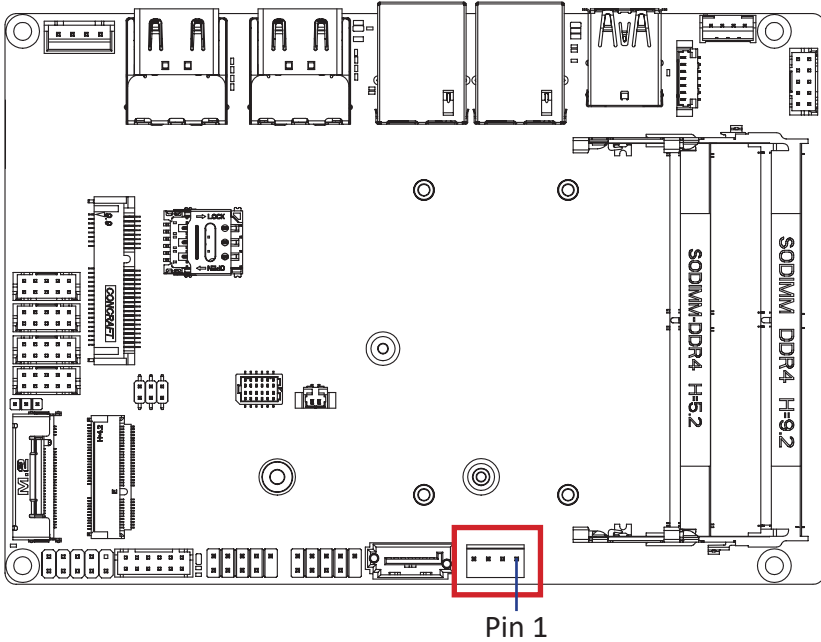


| Connector PN | Vendor |
|---------------|--------|
| 743-91-045W00 | PINREX |

| Connector type |
|-----------------------------|
| 1x4pin header, pitch 2.54mm |

| Pin No. | Definition |
|---------|------------|
| 1 | 12V |
| 2 | GND |
| 3 | GND |
| 4 | 5V |


3.2.9 SATA (SATA 6Gb/s connector)

12

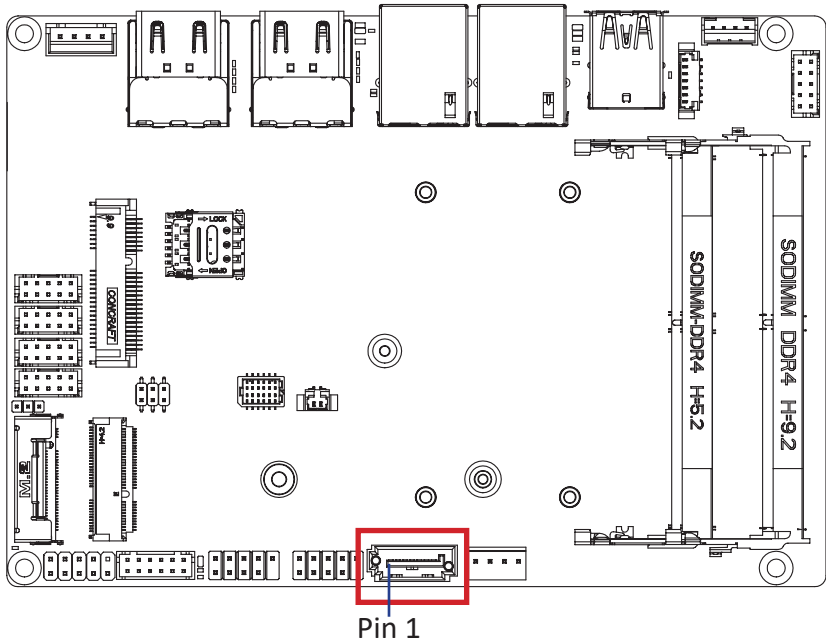

Pin 1



SATA 6Gb/s Connector



| Pin No. | Definition |
|---------|------------|
| 1 | GND |
| 2 | TXp |
| 3 | TXn |
| 4 | GND |
| 5 | RXn |
| 6 | RXp |
| 7 | GND |

3.2.10 F_USB2_2 (USB 2.0 header)

13

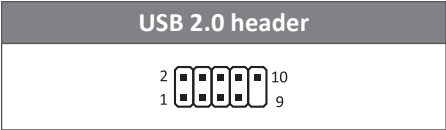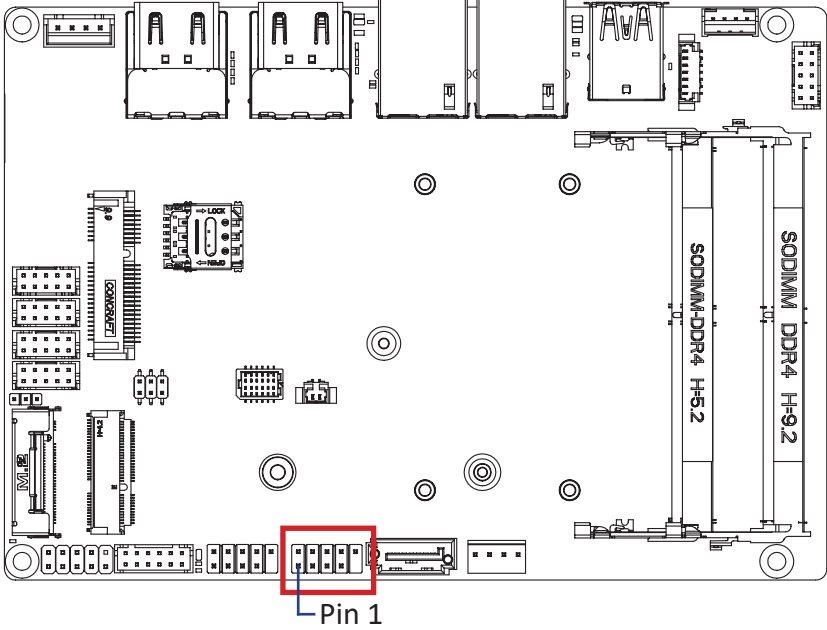


| Connector PN | Vendor |
|---------------|--------|
| 210-92-05G117 | PINREX |

| Connector type |
|-----------------------------|
| 2x5pin header, pitch 2.54mm |

| Pin No. | Definition |
|---------|------------|
| 1 | 5V |
| 2 | 5V |
| 3 | D1n |
| 4 | D2n |
| 5 | D1p |
| 6 | D2p |
| 7 | GND |
| 8 | GND |
| 9 | No Pin |
| 10 | GND |

3.2.11 F_USB2_1 (USB 2.0 header)

14

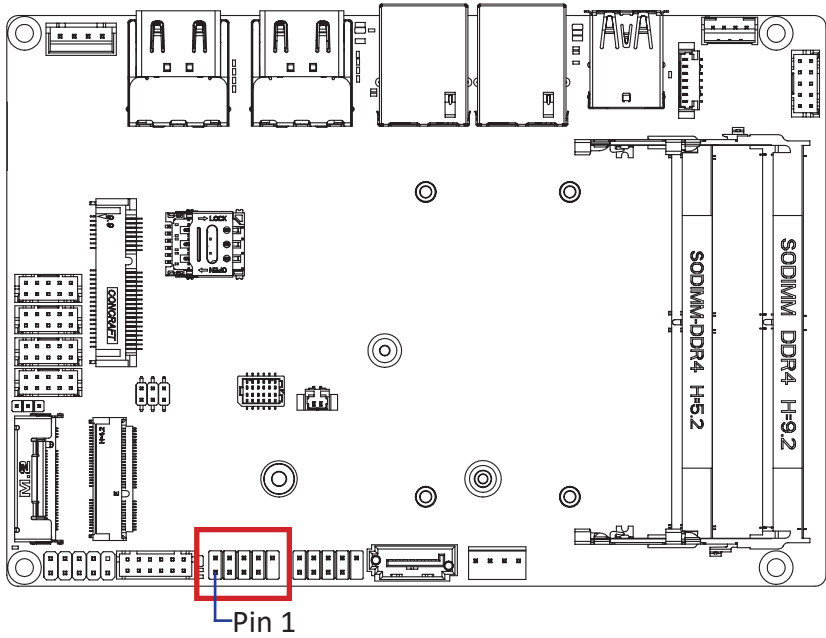

USB 2.0 header



Connector PN

210-92-05G117

Vendor

PINREX



Connector type

2x5pin header, pitch 2.54mm

| Pin No. | Definition |
|---------|------------|
| 1 | 5V |
| 2 | 5V |
| 3 | D1n |
| 4 | D2n |
| 5 | D1p |
| 6 | D2p |
| 7 | GND |
| 8 | GND |
| 9 | No Pin |
| 10 | GND |

3.2.12 GPIO_CNT (General purpose input/output header)

15

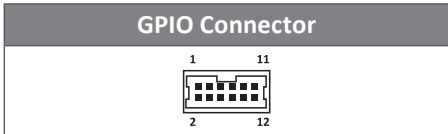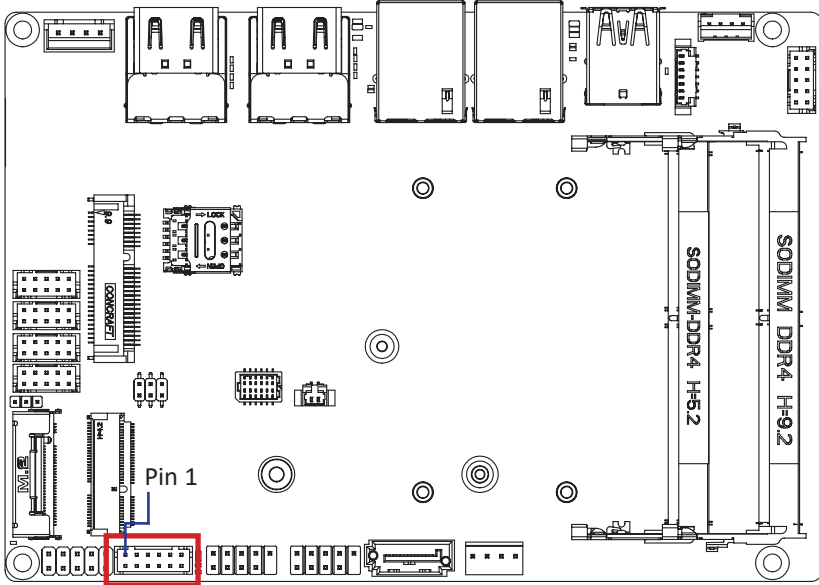


| Pin No. | Definition |
|---------|---------------|
| 1 | GPIO-input_1 |
| 2 | GPIO-output_1 |
| 3 | GPIO-input_2 |
| 4 | GPIO-output_2 |
| 5 | GPIO-input_3 |
| 6 | GPIO-output_3 |
| 7 | GPIO-input_4 |
| 8 | GPIO-output_4 |
| 9 | SMBus Clock |
| 10 | SMBus DATA |
| 11 | 5V |
| 12 | GND |

| | |
|----------------------------|--------|
| Connector PN | Vendor |
| 725-81-12TW00 | PINREX |
| Connector type | |
| 2x6pin header, pitch 2.0mm | |

3.2.13 SYS_PANEL (Front panel header)

16

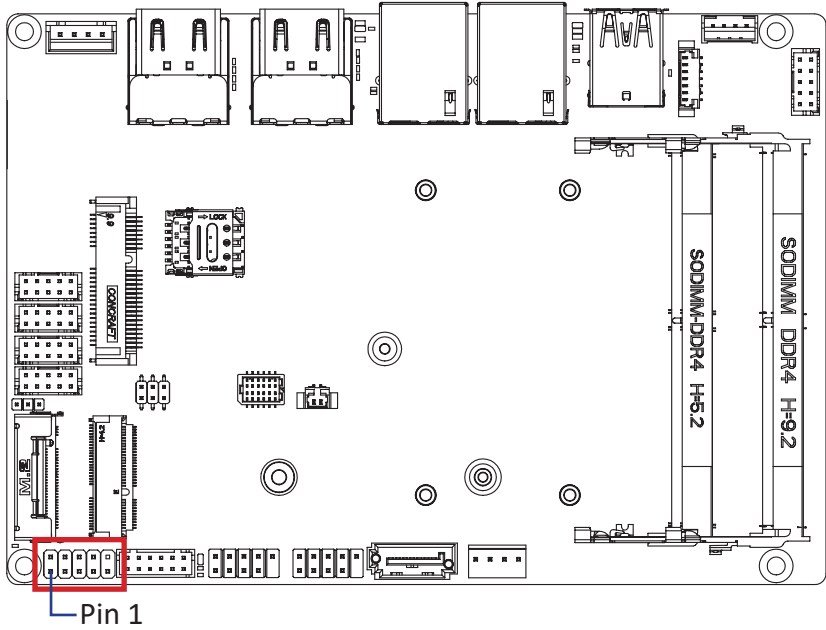

System Panel Header



Connector PN

210-92-05GW5W

Vendor

PINREX


Connector type

2x5pin header, pitch 2.54mm

| Pin No. | Definition |
|---------|---------------|
| 1 | HDD LED+ |
| 2 | Power LED+ |
| 3 | HDD LED- |
| 4 | Power LED- |
| 5 | GND |
| 6 | Power Button+ |
| 7 | Reset Button |
| 8 | Power Button- |
| 9 | No Connect |
| 10 | No Pin |

3.2.14 M2M (M.2 Slot, 2280 M-key)

17

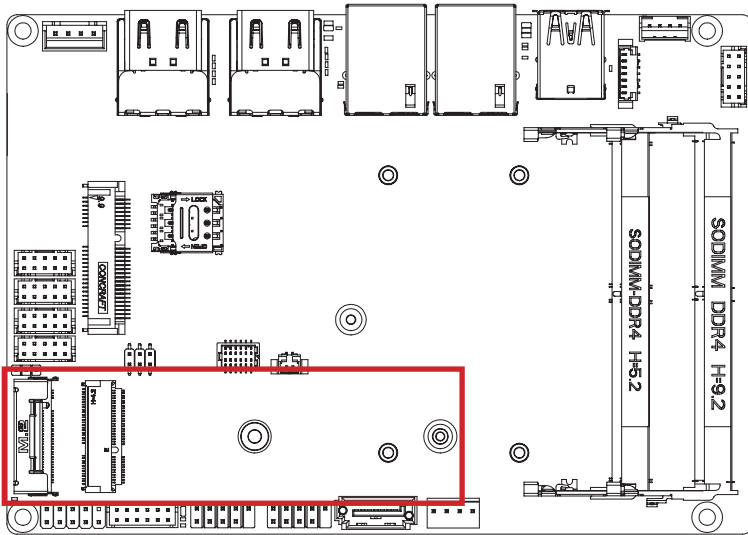

M.2 M Key Connector



| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1 | GND | 2 | 3.3V |
| 3 | GND | 4 | 3.3V |
| 5 | RX3n | 6 | NC |
| 7 | RX3p | 8 | NC |
| 9 | GND | 10 | M2_LED |
| 11 | TX3n | 12 | 3.3V |
| 13 | TX3p | 14 | 3.3V |
| 15 | GND | 16 | 3.3V |
| 17 | RX2n | 18 | 3.3V |
| 19 | RX2p | 20 | NC |
| 21 | GND | 22 | NC |
| 23 | TX2n | 24 | NC |
| 25 | TX2p | 26 | NC |
| 27 | GND | 28 | NC |
| 29 | RX1n | 30 | NC |
| 31 | RX1p | 32 | NC |
| 33 | GND | 34 | NC |
| 35 | TX1n | 36 | NC |


| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 37 | TX1p | 38 | DEVSLP |
| 39 | GND | 40 | NC |
| 41 | SATA_RXp | 42 | NC |
| 43 | SATA_RXn | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | SATA_TXn | 48 | NC |
| 49 | SATA_TXp | 50 | PLT_RST |
| 51 | GND | 52 | CK_REQ |
| 53 | CLK_n | 54 | PCIE_WAKE# |
| 55 | CLK_p | 56 | NC |
| 57 | GND | 58 | NC |

| Pin No. | Definition | Pin No. | Definition |
|---------|---------------|---------|------------|
| 67 | NC | 68 | SUSCLK |
| 69 | M2_SSD_Detect | 70 | 3.3V |
| 71 | GND | 72 | 3.3V |
| 73 | GND | 74 | 3.3V |
| 75 | GND | | |

| Connector PN | Vendor |
|------------------|---------|
| 2E0BC41-C85CM-LH | FOXCONN |

3.2.15 AT_CN (AT/ATX mode select jumper)

18

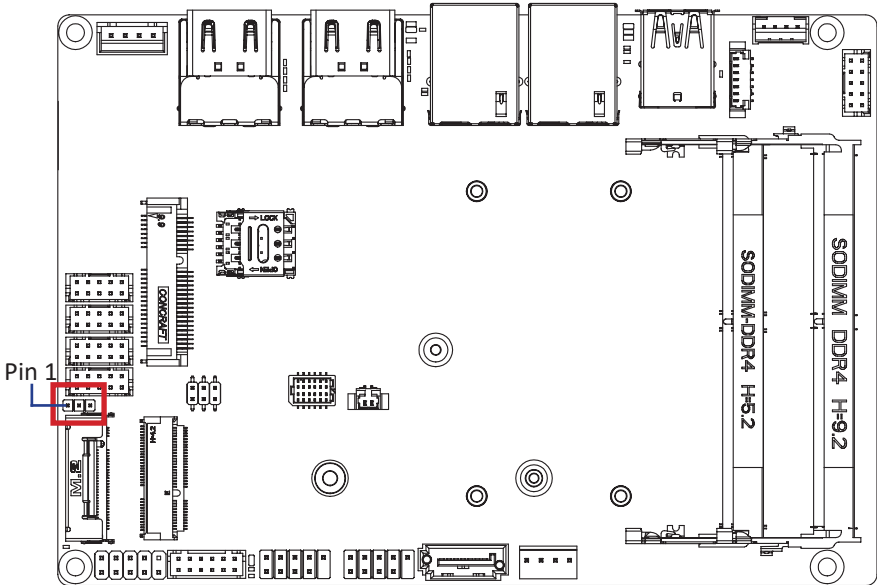

| AT/ATX mode select jumper | |
|---------------------------|--|
| | 1-2 Close : AT mode. |
| | 2-3 Close : ATX mode. (Default setting) |



| Pin No. | Definition |
|---------|------------|
| 1 | AT mode |
| 2 | Detect |
| 3 | ATX mode |

| Connector PN | Vendor |
|-----------------|------------|
| 220-96-03GB001K | PINREX |
| A2015WV-03P6T | JOINT-TECH |

| Connector type |
|----------------------------|
| 1x3pin header, pitch 2.0mm |

3.2.16 COM1, COM2, COM3, COM4 (Serial port header)

19

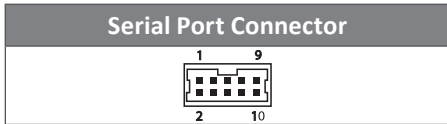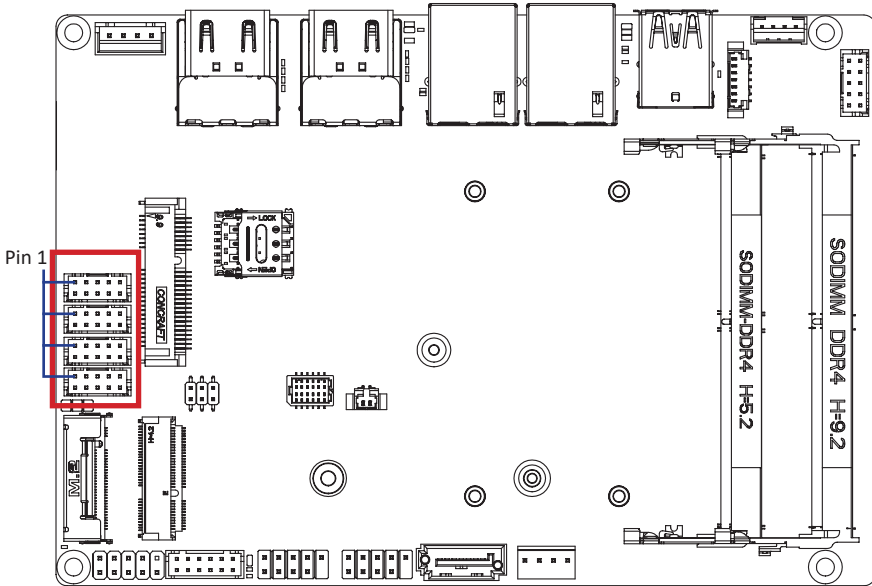

| | |
|----------------------------|---------------|
| Connector PN | Vendor |
| A2004WV-2X05P46 | JOINT-TECH |
| Connector type | |
| 2x5pin header, pitch 2.0mm | |


| Pin No. | RS-232 | RS-422 Full Duplex | RS-485 Half Duplex |
|---------|------------|--------------------|--------------------|
| 1 | RXD | TXD+ | D+ |
| 2 | DCD | TXD- | D- |
| 3 | DTR | RXD- | — |
| 4 | TXD | RXD+ | — |
| 5 | DSR | — | — |
| 6 | GND | — | — |
| 7 | CTS | — | — |
| 8 | RTS | — | — |
| 9 | No Connect | — | — |
| 10 | RI/5V/12V | — | — |

Note :


COM1 : Support RS-232/422/485 & RI/5V/12V, for RI/5V/12V jumper setting, please see P. 41
 COM2 : Support RS-232/422/485
 COM3, COM4 : Support RS-232

3.2.17 MPCIE (Mini PCIE slot)

20

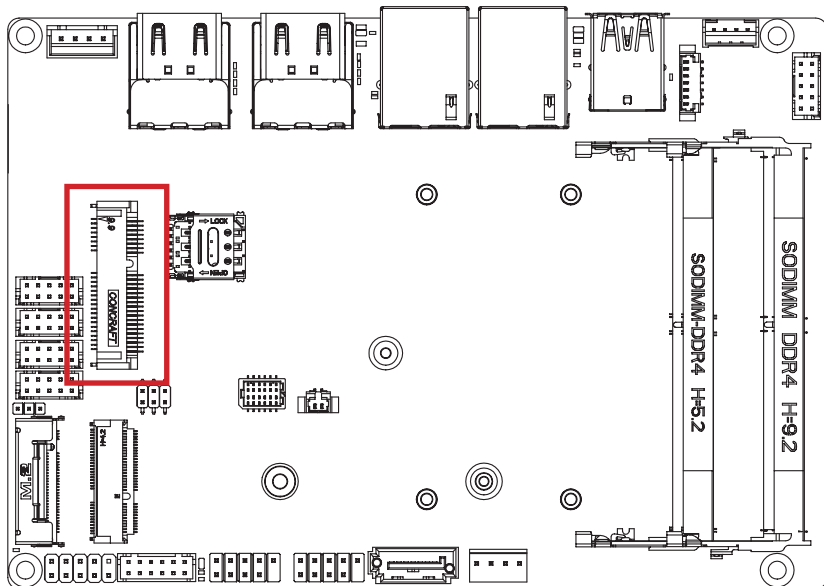

Mini PCIe Connector



| Pin No. | Definition | Pin No. | Definition |
|---------|--------------|---------|--------------|
| 1 | PCIE_WAKE# | 2 | 3.3V |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | 1.5V |
| 7 | PCIE_CLKREQ# | 8 | SIM_PWR |
| 9 | GND | 10 | SIM_DATA |
| 11 | PCIE_CLKn | 12 | SIM_CLK |
| 13 | PCIE_CLKp | 14 | SIM_RST |
| 15 | GND | 16 | SIM_VPP |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | PCIE_DISABLE |
| 21 | GND | 22 | PCIRST# |
| 23 | PCIE_RXn | 24 | 3.3V |
| 25 | PCIE_RXp | 26 | GND |



| | | | |
|----|----------|----|---------|
| 27 | GND | 28 | 1.5V |
| 29 | GND | 30 | SMBCLK |
| 31 | PCIE_TXn | 32 | SMBDATA |
| 33 | PCIE_TXp | 34 | GND |
| 35 | GND | 36 | USBD- |
| 37 | GND | 38 | USBD+ |
| 39 | 3.3V | 40 | GND |
| 41 | 3.3V | 42 | NC |
| 43 | GND | 44 | NC |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | 1.5V |
| 49 | NC | 50 | GND |
| 51 | NC | 52 | 3.3V |

| Connector PN | Vendor |
|-----------------|---------|
| AS0B221-S99Q-7H | FOXCONN |

3.2.18 DC IN (DC IN 1 x 4pin power connector)

21

Pin 1

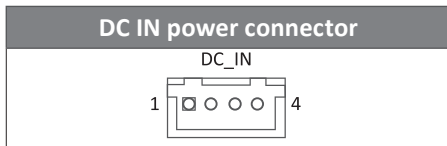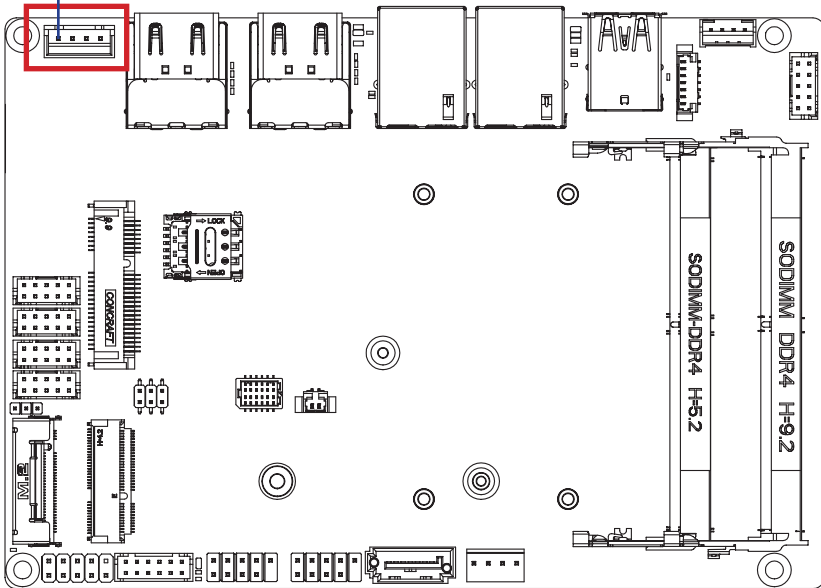


| Connector PN | Vendor |
|---------------|--------|
| 753-81-04TW00 | PINREX |

| Connector type |
|----------------------------|
| 1x4pin header, pitch 2.5mm |

| Pin No. | Definition |
|---------|------------|
| 1 | GND |
| 2 | POWER IN |
| 3 | POWER IN |
| 4 | GND |

3.2.18 M2E (M.2 Slot, 2230 E-key)

22

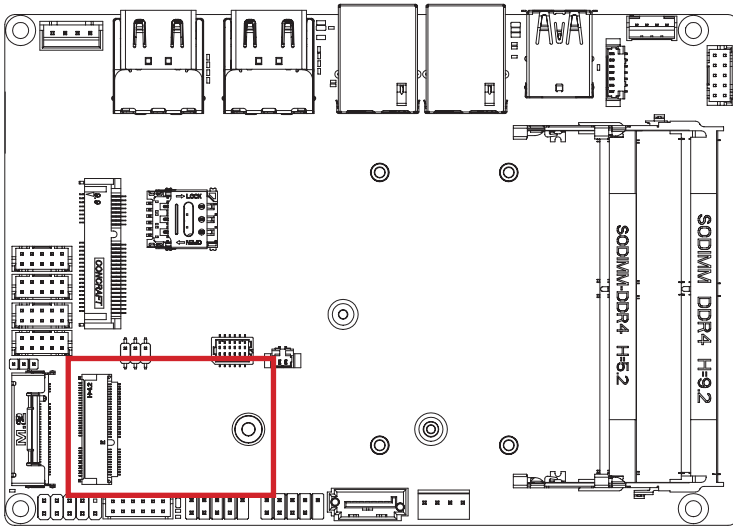

M.2 E Key Connector



| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1 | GND | 2 | 3.3V |
| 3 | USB_Dp | 4 | 3.3V |
| 5 | USB_Dn | 6 | NC |
| 7 | GND | 8 | NC |
| 9 | NC | 10 | NC |
| 11 | NC | 12 | NC |
| 13 | NC | 14 | NC |
| 15 | NC | 16 | NC |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | NC |
| 21 | NC | 22 | NC |
| 23 | NC | | |


| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 33 | GND | 32 | NC |
| 35 | WLAN_TXp | 34 | NC |
| 37 | WLAN_TXn | 36 | NC |

| | | | |
|----|-----------|----|--------------|
| 39 | GND | 38 | NC |
| 41 | WLAN_RXp | 40 | NC |
| 43 | WLAN_RXn | 42 | NC |
| 45 | GND | 44 | NC |
| 47 | CLK_Dp | 46 | NC |
| 49 | CLK_Dn | 48 | NC |
| 51 | GND | 50 | SUSCLK |
| 53 | CLK_REQ | 52 | PCIE_RST |
| 55 | PCIE_WAKE | 54 | BT_Disable# |
| 57 | GND | 56 | WLAN_DISABLE |
| 59 | NC | 58 | NC |
| 61 | NC | 60 | NC |
| 63 | GND | 62 | NC |
| 65 | NC | 64 | NC |
| 67 | NC | 66 | NC |
| 69 | GND | 68 | NC |
| 71 | NC | 70 | NC |
| 73 | NC | 72 | 3.3V |
| 75 | GND | 74 | 3.3V |

| Connector PN | Vendor |
|--------------|------------|
| 80152-4221 | BELLWETHER |

3.2.19 JCOM1 (RI pin RI/5V/12V Select jumper for COM1 port)

23

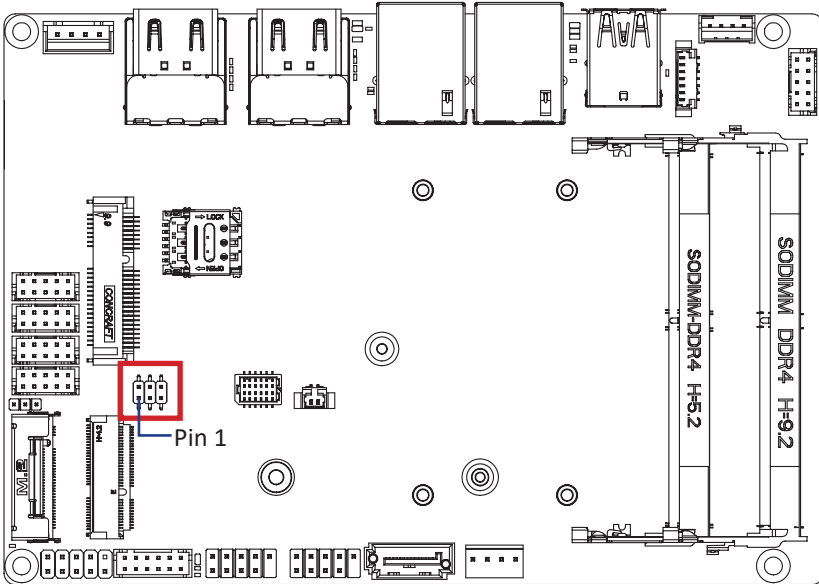


| JCOM1 Jumper Select | |
|---------------------|-------------------------------|
| | 1-2 Close: 5V (Power COM) |
| | 3-4 Close: RI (Stand COM) |
| | 5-6 Close: 12V (Power COM) |

| | |
|----------------------------|--------|
| Connector PN | Vendor |
| 222-97-03GBE1 | PINREX |
| Connector type | |
| 2x3pin header, pitch 2.0mm | |

3.2.20 Battery (Battery Connector)

24

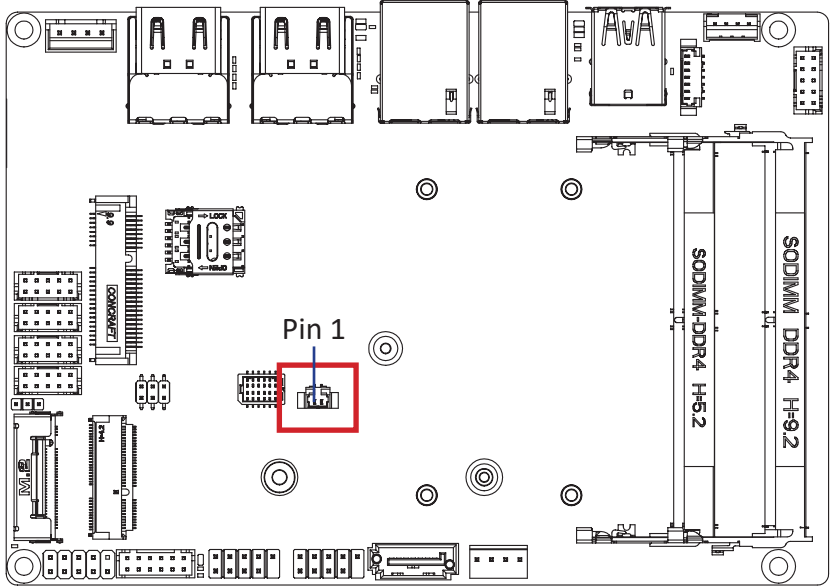

Battery Connector





1 2

| Pin No. | Definition |
|---------|------------|
| 1 | 3V |
| 2 | GND |

3.2.21 CPU_FAN (CPU FAN connector)

25

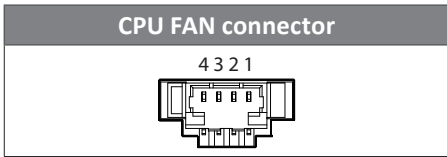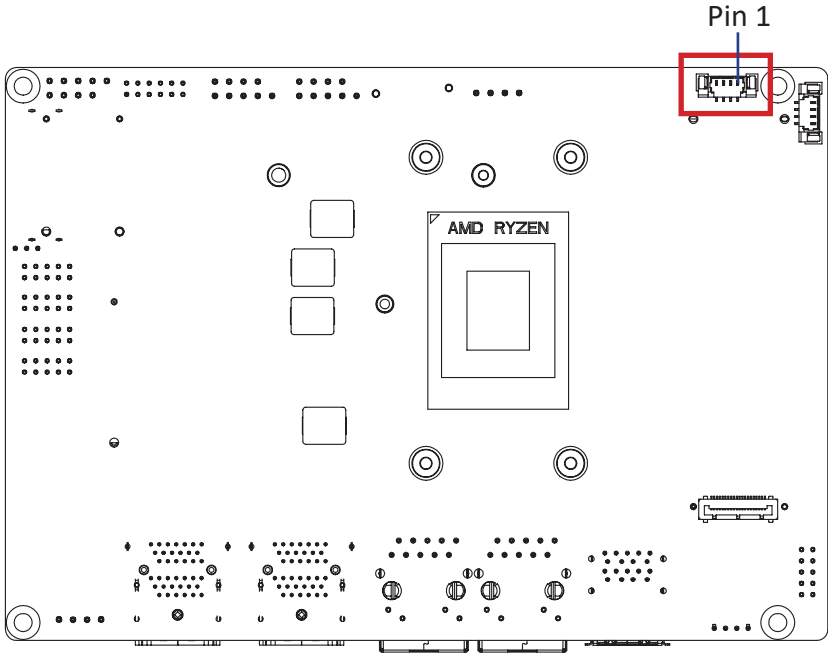


| Connector PN | Vendor |
|----------------|------------|
| 85205-0470N | ACES |
| A1250WV-S-04PC | JOINT-TECH |

| Connector type |
|-----------------------------|
| 1x4pin header, pitch 1.25mm |


| Pin No. | Definition |
|---------|---------------|
| 1 | GND |
| 2 | 12V |
| 3 | Detect |
| 4 | Speed Control |

3.2.22 SYS_FAN (System FAN connector)

26

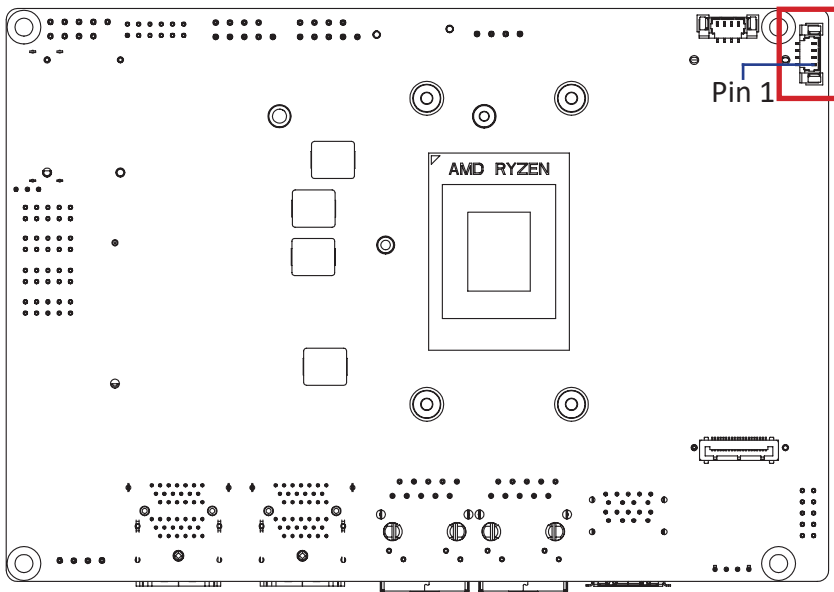

System FAN connector



Connector PN

85205-0470N

Vendor

ACES

A1250WV-S-04PC

JOINT-TECH

Connector type

1x4pin header, pitch 1.25mm



Pin No.

Definition

| | |
|---|---------------|
| 1 | GND |
| 2 | 12V |
| 3 | Detect |
| 4 | Speed Control |

3.2.23 EDP (Embedded Display port connector)

27

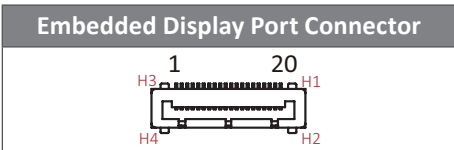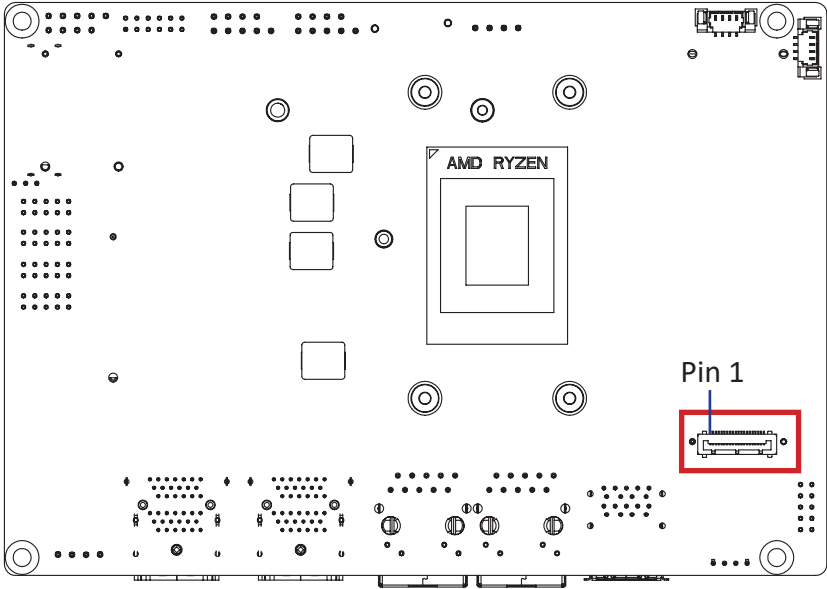

| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|-------------------|
| 1 | GND | 13 | GND |
| 2 | EDP_TX0- | 14 | EDP_AUX- |
| 3 | EDP_TX0+ | 15 | EDP_AUX+ |
| 4 | GND | 16 | EDP_Detect |
| 5 | EDP_TX1- | 17 | Hotplug Detect |
| 6 | EDP_TX1+ | 18 | Backlight Enable |
| 7 | GND | 19 | GND |
| 8 | EDP_TX2- | 20 | Backlight control |
| 9 | EDP_TX2+ | 21 | H1 -> GND |
| 10 | GND | 22 | H2 -> GND |

| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 11 | EDP_TX3- | 23 | H3 -> GND |
| 12 | EDP_TX3+ | 24 | H4 -> GND |

| Connector PN | Vendor |
|--------------------|----------|
| 115B20-100020-G4-R | STARCONN |

| Connector type |
|-----------------------------|
| 1x20pin header, pitch 0.5mm |

Chapter 4

Chapter 4 – BIOS

4.1 Introduction

BIOS (Basic input/output system) provides hardware detailed information and boot-up options, which include firmware to control, set-up and test all hardware settings. Therefore, BIOS is the communication bridge between OS/application software and hardware.

4.1.1 How to Entering into BIOS menu


Once the system is power on, press the key as soon as possible to access into BIOS Setup program.

4.1.2 Function Keys to setup in BIOS Setup program

| Function keys | Description |
|---------------|--|
| →← | Select Screen |
| ↑↓ | Select Item |
| Enter | Execute command or enter the submenu |
| + | Increase the numeric value or make changes |
| — | Decrease the numeric value or make changes |
| F1 | General Help |
| F2 | Previous Values |
| F3 | Load Optimized Defaults Settings |
| F4 | Save changes & Exit the BIOS Setup program |
| ESC | Exit the BIOS Setup program |

4.2 The Main Menu


The main menu shows the basic system information. Use arrow keys to move among the items.

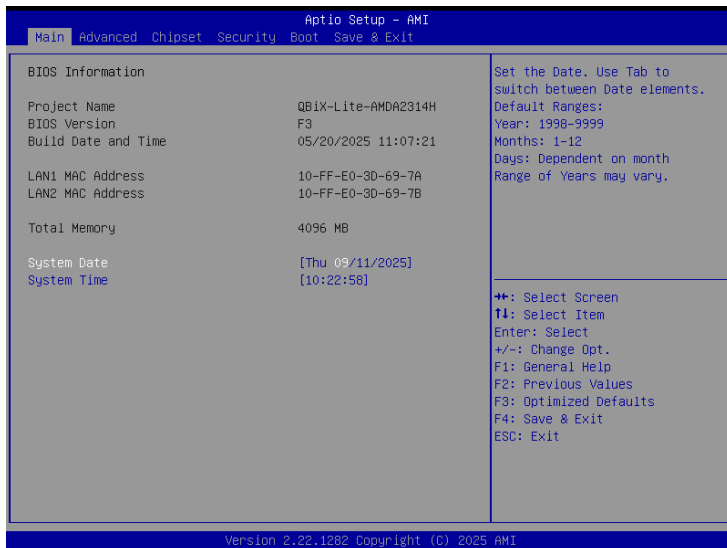

| Items | Description |
|---------------------|---|
| Project Name | Shows Project name information |
| BIOS Version | Shows the BIOS version of the system |
| Build Date and Time | Shows the Build Date and Time when the BIOS was created. |
| LAN1 MAC Address | Shows LAN1 MAC Address information |
| LAN2 MAC Address | Shows LAN2 MAC Address information |
| Total Memory | Shows the total memory size of the installed memory |
| System Date | Set the Date for the system (Format : Week - Month - Day - Year) |
| System Time | Set the time for the system (Format : Hour - Minute - Second) |


4.3 Advanced

The Advanced menu is to configure the functions of hardware settings through submenu. Use arrow keys to move among the items, and press <Enter> to access into the related submenu.

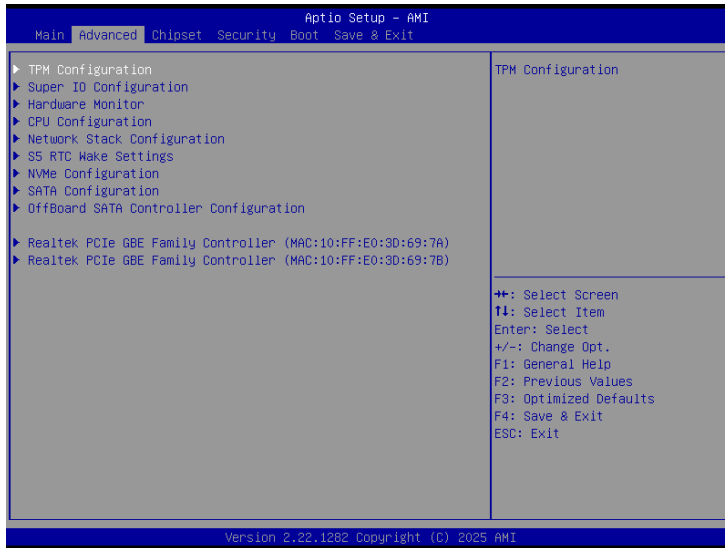


4.3.1 TPM Configuration

Use TPM Configuration submenu to choose TPM interface.

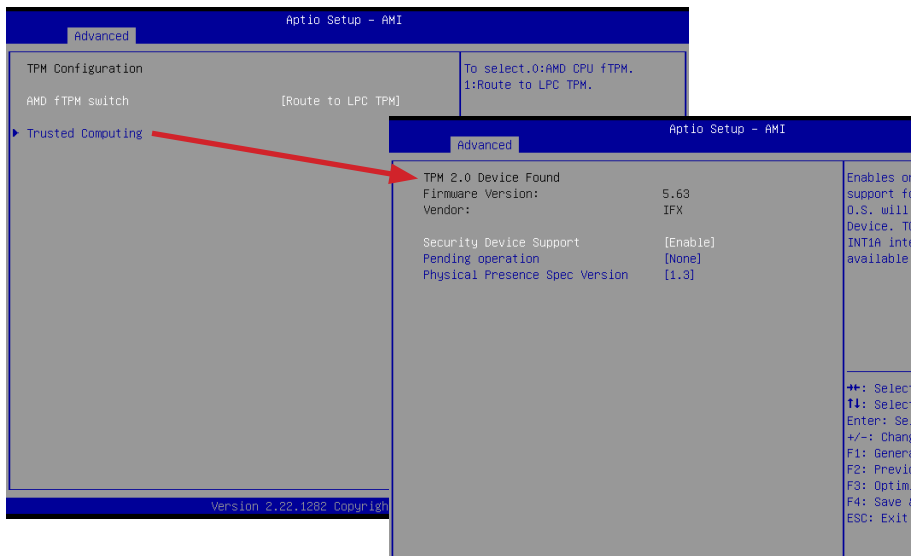


| Item | Description |
|--------------------------|--|
| AMD fTPM switch | AMD CPU fTPM : Enables AMD CPU firmwarm TPM Route to LPC TPM : Enables to route to LPC TPM (Default setting) |
| Trusted Computing | Security Device Support : Enabled : Enables TPM feature (Default setting) Disabled : Disables TPM feature Pending operation : None : No execution will be conducted (Default setting) TPM clear : Set to clear data on TPM Physical Presence Spec Version : Choose PPI spec version Option items : 1.2 or 1.3 (Default setting) |

4.3.2 Super IO Configuration

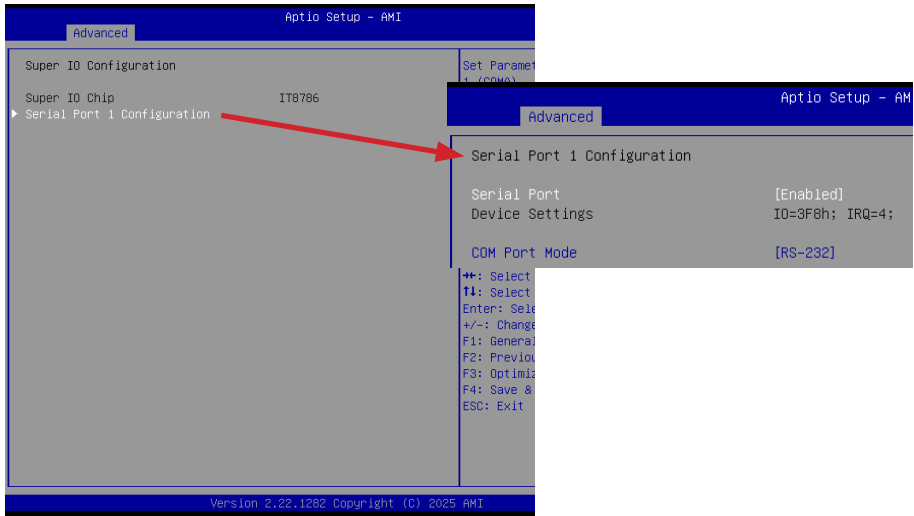

| Item | Description |
|------------------------------------|--|
| Serial Port 1 Configuration | <p>Press [Enter] to configure advanced items :</p> <p>Serial Port : Enabled : Enables allows you to configure the serial port settings Disabled : if Disabled, displays no configuration for the serial port</p> <p>Device settings : Display the specified Serial Port base I/O address and IRQ</p> <p>COM Port Mode : Choose RS-232, RS-422, or RS-485 feature</p> |


4.3.3 Hardware Monitor

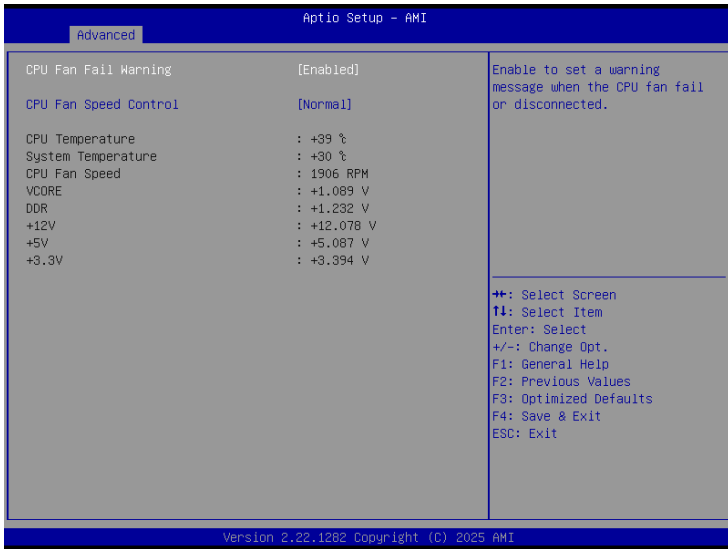

| Item | Description |
|------------------------------|--|
| CPU Fan Fail Warning | Enabled : Enables CPU FAN Fail warning alert function (Default setting) Disabled : Disables CPU FAN Fail warning alert function |
| CPU Fan Speed Control | Normal : Fan speed set by BIOS default (Default setting) Full Speed : Set Fan operates at full speed |
| CPU Temperature | Shows current CPU temperature |
| System Temperature | Shows current system temperature |
| CPU Fan Speed | shows current CPU Fan speed |


4.3.4 CPU Configuration

This submenu shows detailed CPU informations.

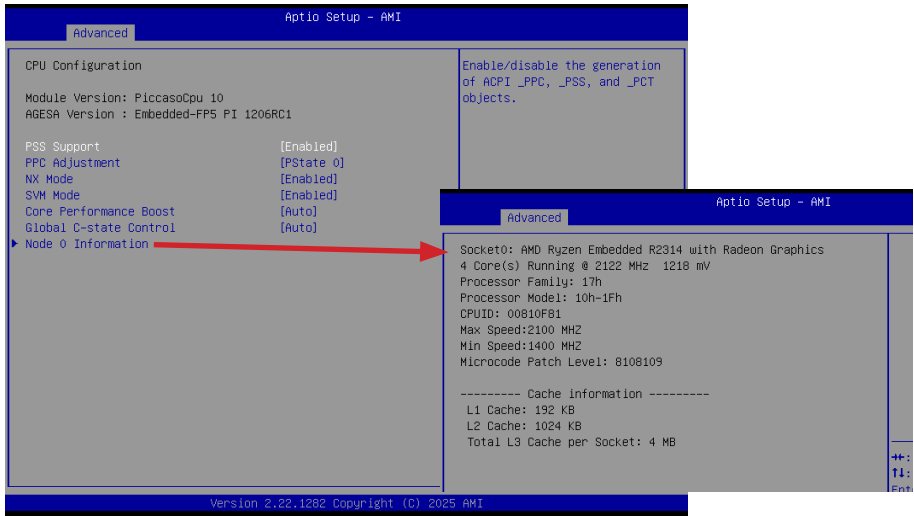


| Item | Description |
|-------------------------------|--|
| PSS Support | Allows you to get PState information Enabled : Enables to get PState information (Default setting) Disabled : Disables to get PState information |
| PPC Adjustment | To adjust the PState of the CPU Option items : PState 0 (Default setting), PState 1, PState 2 |
| NX Mode | Enables or Disables the No-execute page-protection function. Enabled : Enables NX Mode (Default setting) Disabled : Disables NX Mode |
| SVM Mode | Enables or Disables the CPU virtualization funtion. Enabled : Enables SVM Mode (Default setting) Disabled : Disables SVM Mode |
| Core Performance Boost | To let CPU transits to a higher frequency. Disabled : Disables Core Performance Boost Auto : System will automatically allocate its' frequency (Default setting) |
| Global C-state Control | Command CPU to enter into low power consumption mode when CPU is under idle mode. Enabled : Enables Global C-states Control Disabled : Disables Global C-states Control Auto : System will automactically detect (Default setting) |
| Node 0 Information | Shows AMD CPU information |

4.3.5 Network Stack Configuration

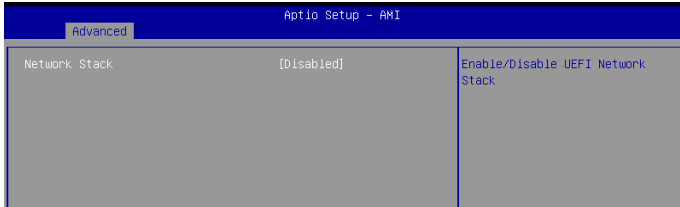


When Network stack is enabled :

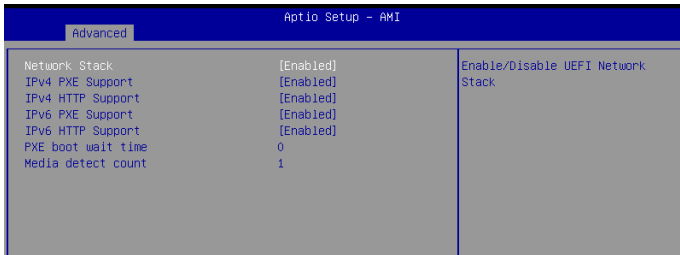

| Item | Description |
|---------------------------|---|
| Network Stack | When system is power on, install LAN driver under UEFI mode Disabled : Disables UEFI Network Stack (Default setting) Enabled : Enables UEFI Network Stack |
| IPv4 PXE Support | When Network stack is enabled : Disabled : Disables IPv4 PXE Support Enabled : Enables IPv4 PXE Support |
| IPv4 HTTP Support | When Network stack is enabled : Disabled : Disables IPv4 HTTP Support Enabled : Enables IPv4 HTTP Support |
| IPv6 PXE Support | When Network stack is enabled : Disabled : Disables IPv6 PXE Support Enabled : Enables IPv6 PXE Support |
| IPv6 HTTP Support | When Network stack is enabled : Disabled : Disables IPv6 HTTP Support Enabled : Enables IPv6 HTTP Support |
| PXE boot wait time | Wait time in seconds, or use ESC key to abort the PXE boot. |
| Media detect count | Number of times the presence of media will be checked. |


4.3.6 S5 RTC Wake Settings

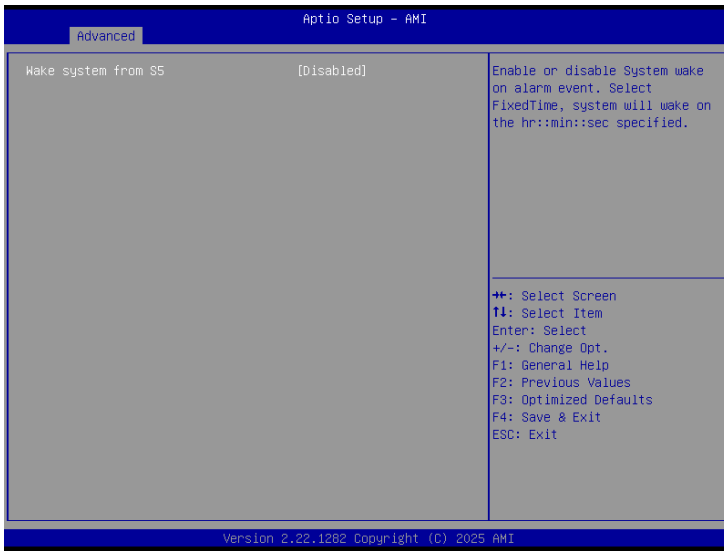

| Item | Description |
|----------------------------|---|
| Wake system from S5 | Enable or Disable System to wake on a specific time. Disabled : Disables system to wake on a specific time (Default setting) Fixed Time : Enables system to wake on a specific time (Format : hr : min : sec) |


4.3.7 NVMe Configuration

NVMe Configuration shows information when your M.2 NVMe PCIe SSD is installed.

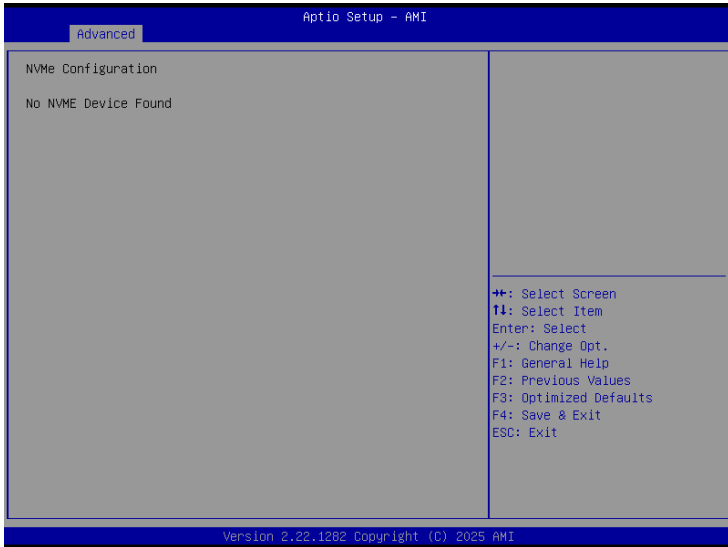


4.3.8 SATA Configuration

SATA Configuration shows information when your SATA interface Storage is installed.

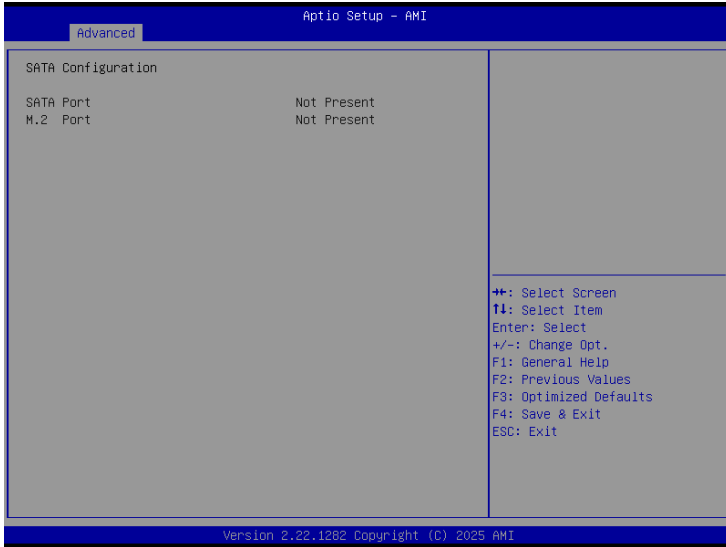


4.3.9 OffBoard SATA Controller Configuration

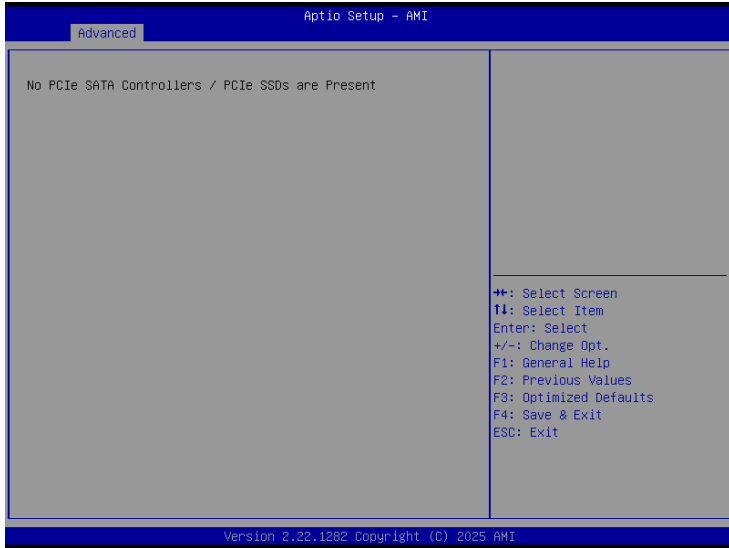

4.3.10 Realtek PCIe GBE Family Controller (MAC : 10:FF:E0:3D:69:7A) (MAC address may varied based on different motherboard)


Shows Realtek Ethernet controller information

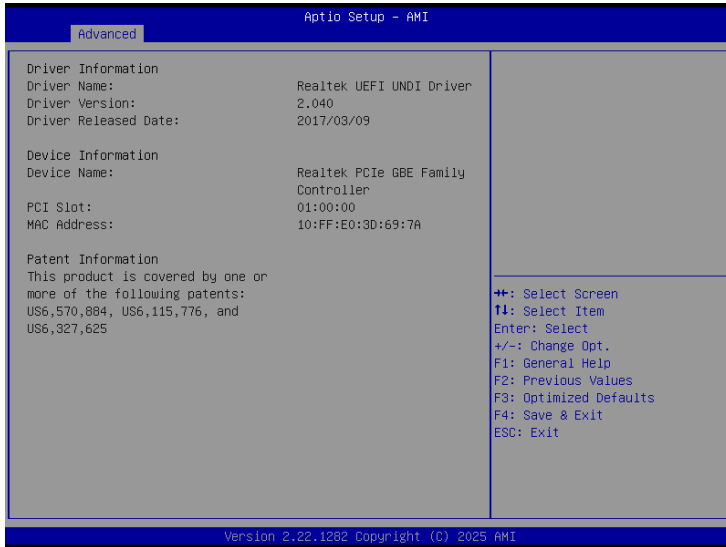

NOTE : MAC address may varied based on different motherboard


4.3.11 Realtek PCIe GBE Family Controller (MAC : 10:FF:E0:3D:69:7B) (MAC address may varied based on different motherboard)

Shows Realtek Ethernet controller information

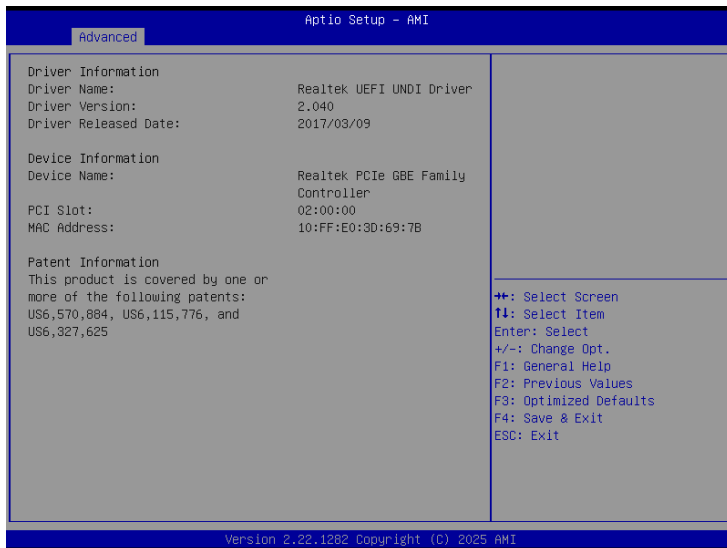


NOTE : MAC address may varied based on different motherboard

4.4 Chipset

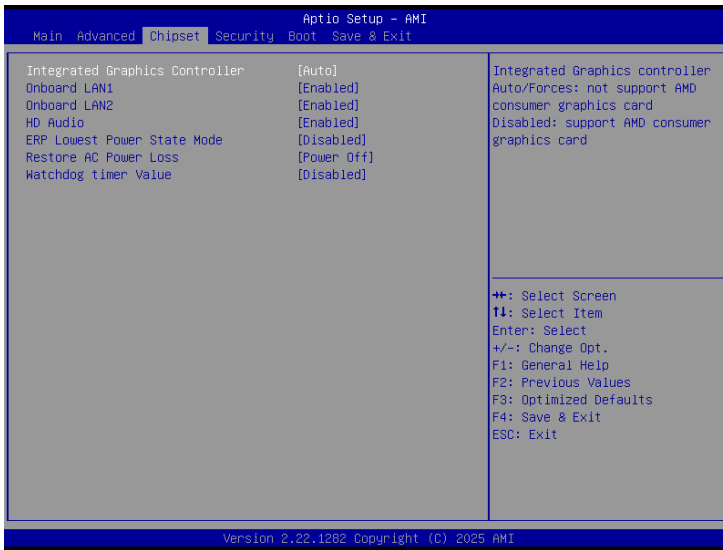

| Item | Description |
|---------------------------------------|--|
| Integrated Graphics Controller | Enables or disables the onboard graphics function Auto : System will automatically enables or disables the onboard graphics depending on the graphics card being installed. (Default setting) Forces : Disables the onboard graphics. |
| Onboard LAN1 Onboard LAN2 | Enable/Disable onboard LAN controller Enabled : Enables onboard LAN controller (Default setting) Disabled : Disables onboard LAN controller |
| HD Audio | Enable/Disable onboard audio controller Enabled : Enables onboard audio controller (Default setting) Disabled : Disables onboard audio controller |
| ERP Lowest Power State Mode | Enable/Disable power saving funtion Enabled : Enables ERP Lowest Power State Mode Disabled : Disabled ERP Lowest Power State Mode (Default setting) |
| Restore AC Power Loss | To set which option the system should returns if a sudden power loss occurred Power on : System power on when the power is back Power off : Do not power on when the power is back (Default setting) Last state : Restore the system to the state before power loss occurs |
| Watchdog timer Value | Enable/Disable Watchdog Timer function Option item : Disabled : Disabled (Default setting), 30 Seconds, 60 Seconds |


4.5 Security

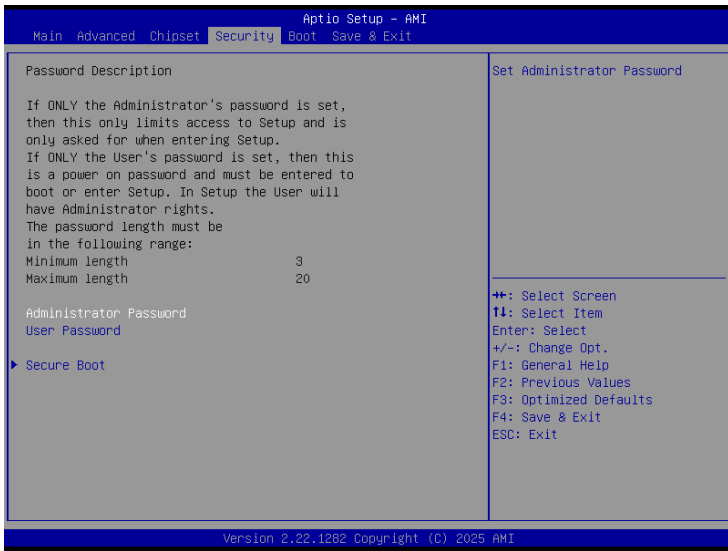

| Item | Description |
|-------------------------------|---|
| Administrator Password | To set up Administrator's password Minimum length : 3 Maximum length : 20 |
| User Password | To set up User's password Minimum length : 3 Maximum length : 20 |
| Secure Boot | Press <Enter> to configure the advanced items |




| Item | Description |
|-----------------------------|--|
| Secure Boot | Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates Enabled : Enables Secure Boot function Disabled : Disables Secure Boot function (Default setting) |
| Secure Boot Mode | Standard : Standard mode Custom : Custom mode (Default setting) |
| Restore Factory Keys | To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings |
| Reset To Setup Mode | Yes : Agree to setup mode No : Cancel to setup mode |
| Key Management | Enables expert users to modify Secure boot policy variables without full authentication Press <Enter> to configure the advanced items |

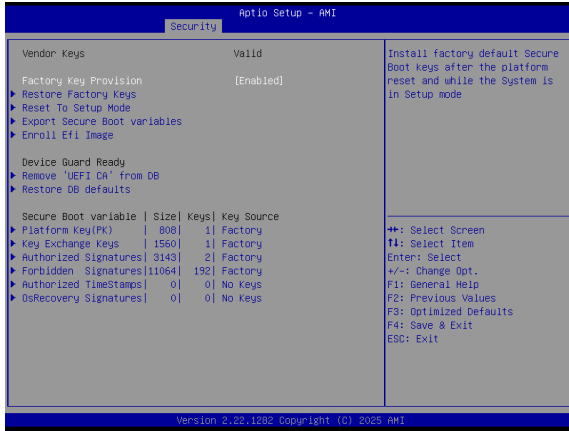

| Item | Description | Item | Description |
|------------------------------|---|-----------------------|---|
| Factory Key Provision | Install factory default Secure Boot keys after the platform reset and while the system is in Setup mode Enabled : Enables Factory Key Provision (Default setting) Disabled : Disables Factory Key Provision | Platform Key (PK) | These items allows you to enroll factory defaults or load Certificates from a file. |
| | | Key Exchange Keys | |
| Restore Factory Keys | To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings | Authorized Signatures | |
| | | Forbidden Signatures | |
| Reset To Setup Mode | Yes : Agree to setup mode No : Cancel to setup mode | Authorized TimeStamps | |
| Export Secure Boot variables | Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device | OsRecovery Signatures | |
| Enroll Efi Image | Allow the image to run in Secure Boot mode | | |
| Remove 'UEFI CA' from DB | To remove 'UEFI CA' from database Yes : Agree to remove 'UEFI CA' from database No : Cancel to remove 'UEFI CA' from database | | |
| Restore DB defaults | Restore DB variables to factory defaults Yes : Agree to restore DB defaults No : Cancel to restore DB defaults | | |


4.6 Boot

This Boot menu allows you to set/change system boot options

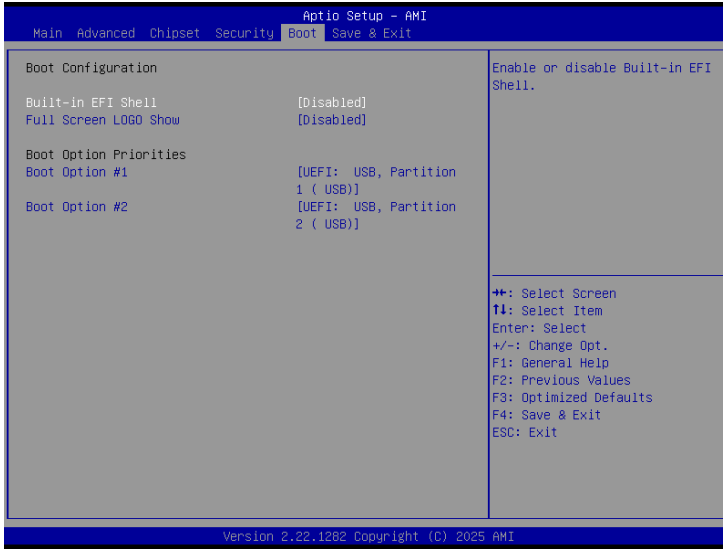

| Item | Description |
|--|---|
| Built-in EFI Shell | Enable/Disable Built-in EFI Shell Enabled : Enables Built-in EFI Shell Disabled : Disables Built-in EFI Shell (Default setting) |
| Full Screen LOGO Show | Enable/Disable full screen LOGO show on POST screen Enabled : Enables Full screen LOGO Show on POST screen Disabled : Disables Full screen LOGO Show on POST screen (Default setting) |
| Boot Option #1 Boot Option #2 | Shows the information of the storage that be installed in the system Choose/set the boot priority |

4.7 Save & Exit

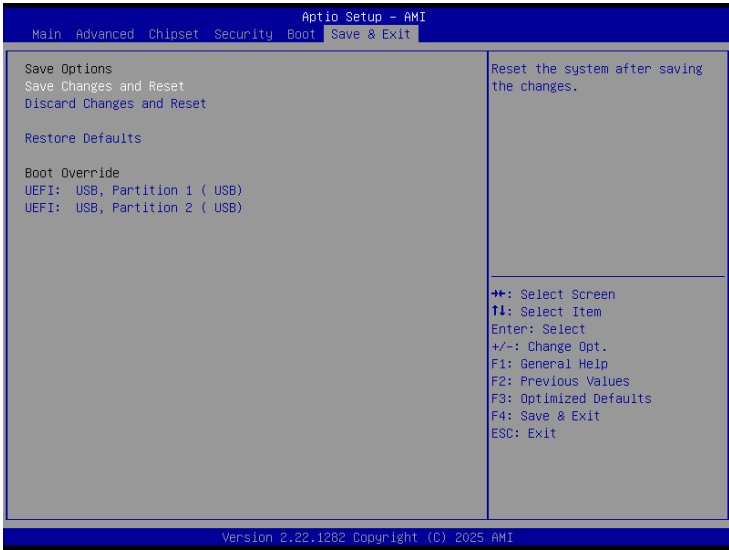

| Item | Description |
|----------------------------------|---|
| Save Changes and Reset | After configuring all the options that you wish to change, choose this option to save all the changes and reboot the system Yes : Agree to save and reset No : Cancel to save and reset |
| Discard Changes and Reset | Choose this option to reboot the system without saving any changes Yes : Agree to discard changes and reset No : Cancel to discard changes and reset |
| Restore Defaults | Restore/Load default values for all the setup options Yes : Agree to load optimized defaults No : Cancel to load optimized defaults |
| Boot Override | Boot override |